

Mienta FP14201B

Mienta Ultimo Plus FP14201B Food Processor Instruction Manual

Model: FP14201B | Brand: Mienta

1. INTRODUCTION

Thank you for choosing the Mienta Ultimo Plus FP14201B Food Processor. This appliance is designed to simplify your food preparation tasks with its powerful 1000 Watt motor and 28 versatile functions. To ensure safe and efficient operation, please read this instruction manual thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged from the power outlet before assembling, disassembling, or cleaning.
- Keep hands and utensils away from moving blades or discs while operating the food processor to prevent injury.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is equipped with a safety lock mechanism. The motor will not operate unless the bowl and lid are correctly assembled and locked into place.
- Avoid processing excessively hot liquids in the blender to prevent scalding.
- Never immerse the motor base in water or any other liquid. Clean with a damp cloth only.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use attachments not recommended or sold by the manufacturer.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Mienta Ultimo Plus Food Processor:

- Motor Base
- Food Processor Bowl (3 Liter capacity)
- Food Processor Lid with Feeder Tube and Pusher

- Chopping Blade (Dual blade system)
- Blender Jar (1.5 Liter capacity)
- Blender Lid with Filler Cap
- Egg Whisk
- Dough Kneading Tool
- Stainless Steel Grater Disc
- Stainless Steel Slicing Disc
- Grinder Attachment
- Citrus Juicer Attachment



Figure 3.1: The Mienta Ultimo Plus FP14201B Food Processor main unit, featuring the motor base, 3-liter processing bowl, and lid with pusher.



Figure 3.2: The 1.5-liter blender jar attachment, ready for blending tasks.

4. SETUP AND ASSEMBLY

4.1 Before First Use

1. Unpack all components and remove any packaging materials.
2. Wash the food processor bowl, lid, pusher, blender jar, and all attachments in warm soapy water. Rinse thoroughly and dry. The motor base should only be wiped with a damp cloth.
3. Ensure all parts are completely dry before assembly.

4.2 Assembling the Food Processor

1. Place the motor base on a clean, dry, and stable surface.
2. Fit the food processor bowl onto the motor base, aligning the arrow on the bowl with the arrow on the base. Turn clockwise until it locks securely.
3. Carefully place the desired attachment (e.g., chopping blade, slicing disc) onto the central shaft inside the bowl.
4. Place the lid onto the food processor bowl, aligning the arrow on the lid with the arrow on the bowl handle. Turn clockwise until it locks securely. The safety lock will engage.
5. Insert the pusher into the feeder tube of the lid.

4.3 Assembling the Blender

1. Ensure the blender blade assembly is securely attached to the bottom of the blender jar.
2. Place the blender jar onto the motor base, aligning the arrow on the jar with the arrow on the base. Turn clockwise until it locks securely.
3. Place the blender lid onto the jar and secure it. Insert the filler cap into the lid opening.

5. OPERATING INSTRUCTIONS

Once assembled, plug the appliance into a suitable power outlet. The Mienta Ultimo Plus FP14201B features 2 speeds and a pulse function.

5.1 General Operation

1. Ensure the appliance is correctly assembled and locked.
2. Add ingredients to the food processor bowl or blender jar. Do not overfill beyond the maximum level indicated.
3. Select the desired speed (Speed 1 or Speed 2) using the control dial. For short bursts of power, turn the dial to the 'Pulse' setting and release.
4. For food processing, use the pusher to guide ingredients through the feeder tube. Never use your fingers or other utensils.
5. After use, turn the dial to 'OFF' and unplug the appliance.
6. Wait for all moving parts to stop completely before disassembling.

5.2 Recommended Uses

- **Chopping/Mincing:** Use the chopping blade for vegetables, nuts, meat, etc. Use the pulse function for coarse chopping.
- **Slicing/Shredding/Grating:** Use the stainless steel discs for uniform slices, shreds, or grated ingredients.
- **Kneading:** Use the dough kneading tool for light doughs.
- **Blending/Liquefying:** Use the blender jar for smoothies, soups, sauces, and purees.

- **Grinding:** Use the grinder attachment for coffee beans, spices, or small quantities of nuts.
- **Juicing:** Use the citrus juicer attachment for fresh orange, lemon, or lime juice.
- **Whisking/Emulsifying:** Use the egg whisk for whipping cream, egg whites, or emulsifying dressings.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your food processor.

1. Always unplug the appliance before cleaning.
2. Disassemble all removable parts: food processor bowl, lid, pusher, blender jar, and all attachments.
3. Wash these parts immediately after use to prevent food from drying on them. Hand washing with warm soapy water is recommended, especially for blades, to maintain their sharpness. Some plastic parts may be dishwasher safe, but always check for specific markings.
4. Use a brush for cleaning blades, exercising extreme caution due to their sharpness.
5. Wipe the motor base with a damp cloth. Never immerse it in water.
6. Dry all parts thoroughly before reassembling or storing.
7. Store the appliance and its attachments in a dry place.

7. TROUBLESHOOTING

If you encounter issues with your food processor, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Safety lock not engaged; Power outage.	Ensure plug is firmly in outlet; Check that bowl/lid/jar are correctly assembled and locked; Check household circuit breaker.
Motor runs, but blades do not move.	Attachment not correctly placed on shaft; Overloaded.	Disassemble and re-attach the blade/disc correctly; Reduce the amount of ingredients.
Poor processing results (e.g., uneven chopping).	Ingredients too large; Overloaded; Incorrect speed.	Cut ingredients into smaller, uniform pieces; Do not overfill; Use pulse function for better control.
Leakage from bowl/jar.	Lid not properly sealed; Overfilled.	Ensure lid is securely locked; Do not exceed maximum fill line.

8. SPECIFICATIONS

Brand: Mienta

Model: FP14201B

Power: 1000 Watt

Functions: 28

Speeds: 2 + Pulse

Food Processor Bowl Capacity: 3 Liters (Plastic)

Blender Jar Capacity: 1.5 Liters (Plastic)

Material: Plastic (body), Stainless Steel (blades/discs)

Color: Black

Special Features: Safety Lock, Dual Blade System

Item Weight: 4000 grams

Power Source: AC

Product Care: Hand wash recommended for blades; some parts are dishwasher safe.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact Mienta customer service directly. Keep your purchase receipt as proof of purchase.