

[Manuals.plus](#) /

› [OUTON](#) /

› OUTON H-SFD0004 LED Floor Lamp User Manual

OUTON H-SFD0004

OUTON H-SFD0004 LED Floor Lamp User Manual

Model: H-SFD0004 | Brand: OUTON

INTRODUCTION

Thank you for purchasing the OUTON H-SFD0004 LED Floor Lamp. This manual provides essential information for the safe and efficient operation of your new lamp. Please read these instructions thoroughly before assembly and use, and retain them for future reference.

SAFETY INSTRUCTIONS

- Ensure the power supply voltage matches the lamp's requirements before plugging in.
- Do not disassemble or modify the lamp. This may cause electric shock or damage the product.
- Keep the lamp away from water or other liquids to prevent electric shock.
- Do not operate the lamp with a damaged cord or plug. Contact customer support for assistance.
- This lamp is designed for indoor use only.
- Always place the lamp on a stable, level surface to prevent tipping. The weighted base is designed for stability.
- Unplug the lamp from the power outlet before cleaning or performing any maintenance.

PACKAGE CONTENTS

Verify that all components are present and in good condition upon opening the package:

- LED Floor Lamp (main body with gooseneck and light head)
- Weighted Base
- Power Adapter
- Remote Control (batteries not included)
- User Manual

SETUP

Assembly of the OUTON H-SFD0004 LED Floor Lamp is quick and requires no tools.

1. Carefully remove all components from the packaging.
2. Place the weighted base on a flat, stable surface.
3. Screw the main lamp body into the weighted base clockwise until secure. Ensure the power cord is not twisted or pinched during assembly.
4. Plug the power adapter into the lamp's power input, then plug the adapter into a standard wall outlet.
5. Insert 2 AAA batteries (not included) into the remote control, observing correct polarity.

Your lamp is now ready for use.

OPERATING INSTRUCTIONS

The OUTON H-SFD0004 LED Floor Lamp offers both touch control on the lamp body and a convenient remote control for operation.

Touch Control

The touch control panel is located on the lamp pole.

- **Short Press Power Button:** Turns the lamp On/Off.
- **Long Press Power Button (1H Timer):** Activates the 1-hour sleep timer. The lamp will automatically turn off after one hour.
- **'+' / '-' Buttons:** Adjusts brightness from 5% to 100%.
- **'M' Button:** Changes the color temperature (Warm, Warm White, Cool White, Daylight).

Remote Control

The remote control allows operation from up to 15 meters (49.2 feet) away.



▶ Remote Control 49.2FT

Control the lamp anywhere in your house



Figure 1: Touch control panel and remote control functions. The touch control has '+' and '-' for brightness, 'M' for color temperature, and a power button for On/Off and 1-hour timer. The remote control offers similar functions.

- **Power Button:** Turns the lamp On/Off.
- **Brightness Buttons ('+' / '-')**: Increases or decreases the light brightness (5%-100%).
- **Color Temperature Button ('M'):** Cycles through 4 color temperature modes (3000K Warm, 4000K Warm White, 5000K Cool White, 6000K Daylight).
- **1H Timer Button:** Activates the 1-hour sleep timer.

4 Color Temperatures



Fully Adjustable Brightness

5%  100%



Figure 2: Illustration of the 4 adjustable color temperatures and stepless brightness adjustment from 5% to 100%.

Memory Function

The lamp features a memory function that retains your last selected brightness and color temperature settings when the lamp is turned off and then back on.

Adjustable Gooseneck

The flexible gooseneck allows for 360-degree rotation, enabling you to direct the light precisely where needed. The lamp's height is approximately 68 inches.

360° Adjustable Gooseneck

Adjust the height of lamp by changing the angle of the curving gooseneck, illuminate your favorite area



Figure 3: The flexible gooseneck allows for precise light positioning. The lamp stands approximately 68.5 inches tall.

Eye-Caring Light

The lamp provides flicker-free and anti-glare illumination, designed to reduce eye strain during extended use, making it suitable for reading, working, and other detailed tasks.



Energy
Saving



Long Lifespan
>50,000hrs



No
Overheat



► Flicker Free and Anti Glare Light

Caring for Your Eyes

Figure 4: The lamp's flicker-free and anti-glare light provides comfortable illumination for various activities.

Sleep Timer

Activate the 1-hour sleep timer via the remote control or by long-pressing the power button on the touch control. The lamp will automatically turn off after one hour, providing convenience for bedtime use.



Sleep timer makes
you have a **peaceful** and **sweet** sleep



Figure 5: The 1-hour sleep timer promotes peaceful rest by automatically turning off the lamp.

Multiple Lighting Modes

The adjustable brightness and color temperatures allow for various lighting modes suitable for different activities and environments, such as reading, working, or relaxing.



Figure 6: The lamp supports multiple lighting modes to suit different activities and preferences.

MAINTENANCE

To ensure the longevity and optimal performance of your OUTON LED Floor Lamp, follow these maintenance guidelines:

- **Cleaning:** Unplug the lamp before cleaning. Use a soft, dry cloth to wipe the lamp body and head. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- **Storage:** If storing the lamp for an extended period, unplug it and store it in a cool, dry place, away from direct sunlight and moisture.
- **Bulb Replacement:** The lamp uses integrated LED technology, which has a lifespan of over 30,000 hours. The LEDs are not user-replaceable.

TROUBLESHOOTING

If you encounter any issues with your lamp, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Lamp does not turn on.	No power supply.	Ensure the power adapter is securely plugged into both the lamp and a working wall outlet. Test the outlet with another device.
Remote control is not working.	Batteries are dead or incorrectly inserted.	Replace the remote control batteries (2x AAA) and ensure correct polarity. Ensure there are no obstructions between the remote and the lamp.
Brightness or color temperature cannot be adjusted.	Remote control issue or lamp malfunction.	Try adjusting using the touch controls on the lamp. If neither works, unplug the lamp for 30 seconds and plug it back in to reset.
Lamp flickers.	Unstable power supply or internal issue.	Try plugging the lamp into a different outlet. If the flickering persists, contact customer support.
Lamp tips over easily.	Base not securely attached or placed on an uneven surface.	Ensure the lamp body is tightly screwed into the weighted base. Place the lamp on a flat, stable surface.

If the problem persists after trying these solutions, please contact OUTON customer support.

SPECIFICATIONS

Model Number	H-SFD0004
Power Consumption	15W
Luminous Flux	1500 Lumens
Color Temperatures	4 modes (3000K Warm, 4000K Warm White, 5000K Cool White, 6000K Daylight)
Brightness Adjustment	Stepless dimming (5%-100%)
Control Method	Touch Control, Remote Control
Remote Control Range	Up to 15 meters (49.2 feet)
Product Dimensions	22 x 22 x 180 cm (approx. 8.7 x 8.7 x 70.9 inches)
Item Weight	3.09 kg (approx. 6.8 lbs)
Material	Metal, Acrylic
Lifespan	Over 30,000 hours
Specific Uses	Indoor use only

WARRANTY AND SUPPORT

OUTON products are designed for quality and reliability. For warranty information or technical support, please refer to the contact

details provided with your purchase documentation or visit the official OUTON website. Please have your model number (H-SFD0004) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question