

## Amazon Basics DK1901

# Amazon Basics 3 Speed Box Fan Instruction Manual

**Brand:** Amazon Basics

**Model:** DK1901

## INTRODUCTION

Thank you for choosing the Amazon Basics 3 Speed Box Fan. This indoor electric fan is designed to provide efficient and customizable airflow for home cooling. Its lightweight design and three-speed settings make it a versatile addition to various spaces, including bedrooms, living areas, kitchens, and home offices. This manual provides essential information for the safe and effective use of your new fan.

## SAFETY INFORMATION

Please read and understand all safety instructions before using this fan. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Always unplug the fan from the power outlet before cleaning, servicing, or moving it.
- Do not operate the fan with a damaged cord or plug. If the cord or plug is damaged, contact qualified service personnel for repair.
- Do not run the power cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Arrange the cord away from traffic areas where it will not be tripped over.
- This fan is for indoor use only. Do not use outdoors or in wet locations.
- Do not immerse the fan in water or other liquids.
- Keep fingers, hair, and loose clothing away from the fan blades during operation.
- Ensure the fan is placed on a stable, flat surface to prevent tipping.
- Do not block air openings or operate near curtains or other materials that could block airflow.
- Unplug the fan when not in use or when leaving the room for extended periods.

## PRODUCT OVERVIEW

The Amazon Basics Box Fan features a robust design for effective air circulation. Key components include the fan body, five blades, a control dial for speed settings, and stable feet for secure placement.



*Figure 1: Front view of the Amazon Basics 3 Speed Box Fan.*

# Comfort & Convenience



Figure 2: Overview of fan features including a recessed cord wrap for storage, a control dial for three speed settings (Low, Medium, High), five 20-inch blades for quiet operation and uniform airflow, and a stable design with extra-large feet.

# Sleek & Light

Easy-to-transport size

Free-standing design

Lightweight  
5.8 lbs / 2.6 kg with  
carrying handle



Figure 3: Dimensions of the fan (6.8"D x 20.86"W x 21.33"H) and its lightweight nature (5.8 lbs / 2.6 kg) with a convenient carrying handle for easy transport.

## SETUP

Follow these simple steps to set up your fan:

1. **Unpack:** Carefully remove the fan and all packaging materials from the box. Retain packaging for future storage or transport.
2. **Position:** Place the fan on a firm, level surface. Ensure there is adequate space around the fan for proper air circulation and to prevent obstruction of the air intake/output.
3. **Connect Power:** Plug the fan's power cord into a standard 120 Volt AC wall outlet. Ensure the outlet is easily accessible for quick disconnection if needed.

## OPERATING INSTRUCTIONS

Your Amazon Basics Box Fan is equipped with a simple control dial for ease of use.

- **Turning On:** Locate the control dial on the top right corner of the fan. Rotate the dial clockwise from the "OFF" (0) position to select your desired speed setting.
- **Speed Settings:**

- **1 (Low):** Provides a gentle breeze for quiet operation or minimal cooling needs.
  - **2 (Medium):** Offers moderate airflow for general cooling and air circulation.
  - **3 (High):** Delivers maximum airflow for rapid cooling or strong air movement.
- **Turning Off:** Rotate the control dial counter-clockwise back to the "OFF" (0) position.



## Custom Comfort Breeze

Enhance air circulation in any room with a 67-watt box fan that cools efficiently.

*Figure 4: The fan effectively circulates air, providing a custom comfort breeze in any room.*

### MAINTENANCE

Regular cleaning helps maintain the fan's performance and extends its lifespan.

- **Cleaning:**
  - Always unplug the fan before cleaning.
  - Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
  - To clean dust from the fan blades, use a vacuum cleaner with a brush attachment or compressed air. Do not attempt to disassemble the fan for cleaning.
  - Ensure the fan is completely dry before plugging it back in.
- **Storage:** When not in use, store the fan in a cool, dry place, preferably in its original packaging to protect it

from dust and damage.

## TROUBLESHOOTING

If you experience issues with your fan, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power to the outlet; Fan not plugged in; Control dial is OFF.	Check power outlet with another device; Ensure fan is securely plugged in; Rotate control dial to a speed setting (1, 2, or 3).
Reduced airflow.	Fan blades or grille are dirty; Obstruction blocking airflow.	Clean fan blades and grille (see Maintenance section); Remove any obstructions from the front or back of the fan.
Fan is noisy.	Fan not on a level surface; Loose parts; Dust accumulation.	Place fan on a stable, flat surface; Check for any loose components (do not attempt to repair internal parts); Clean fan thoroughly.

## SPECIFICATIONS

Feature	Detail
Brand	Amazon Basics
Model Name	DK1901
Color	Black
Style	Box Fan
Product Dimensions	6.8"D x 20.86"W x 21.33"H
Item Weight	7 Pounds
Power Source	Corded Electric
Wattage	67 watts
Voltage	120 Volts
Number of Blades	5
Number of Power Levels	3
Indoor/Outdoor Usage	Indoor
Control Method	Touch
UPC	840095875677

## WARRANTY AND SUPPORT

For warranty information, please refer to the warranty document provided with your purchase or visit the official Amazon Basics website. For additional support or inquiries, please contact Amazon customer service. You can also find the official User Manual (PDF) [here](#).

© 2025 Amazon Basics. All rights reserved.