

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [KONKIN BOO](#) /
- › [KONKIN BOO USB Cable Cord User Manual](#)

KONKIN BOO USB Cable Cord

KONKIN BOO USB Cable Cord User Manual

For HP DESKJET Printer 1010, 1112, 2130, 3755, F2110, D1460, F2480, and compatible devices

1. INTRODUCTION

This manual provides essential information for the proper use, setup, and maintenance of your KONKIN BOO USB 2.0 Type A-Male to Type B-Male Printer Cable. This cable is designed for reliable data transmission between your computer and compatible devices such as printers, scanners, and all-in-one machines.

Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

The KONKIN BOO USB 2.0 Printer Cable is a high-speed data transfer cable featuring a USB Type-A male connector on one end and a USB Type-B male connector on the other. It is specifically designed for connecting USB 2.0 compatible peripherals to your computer.

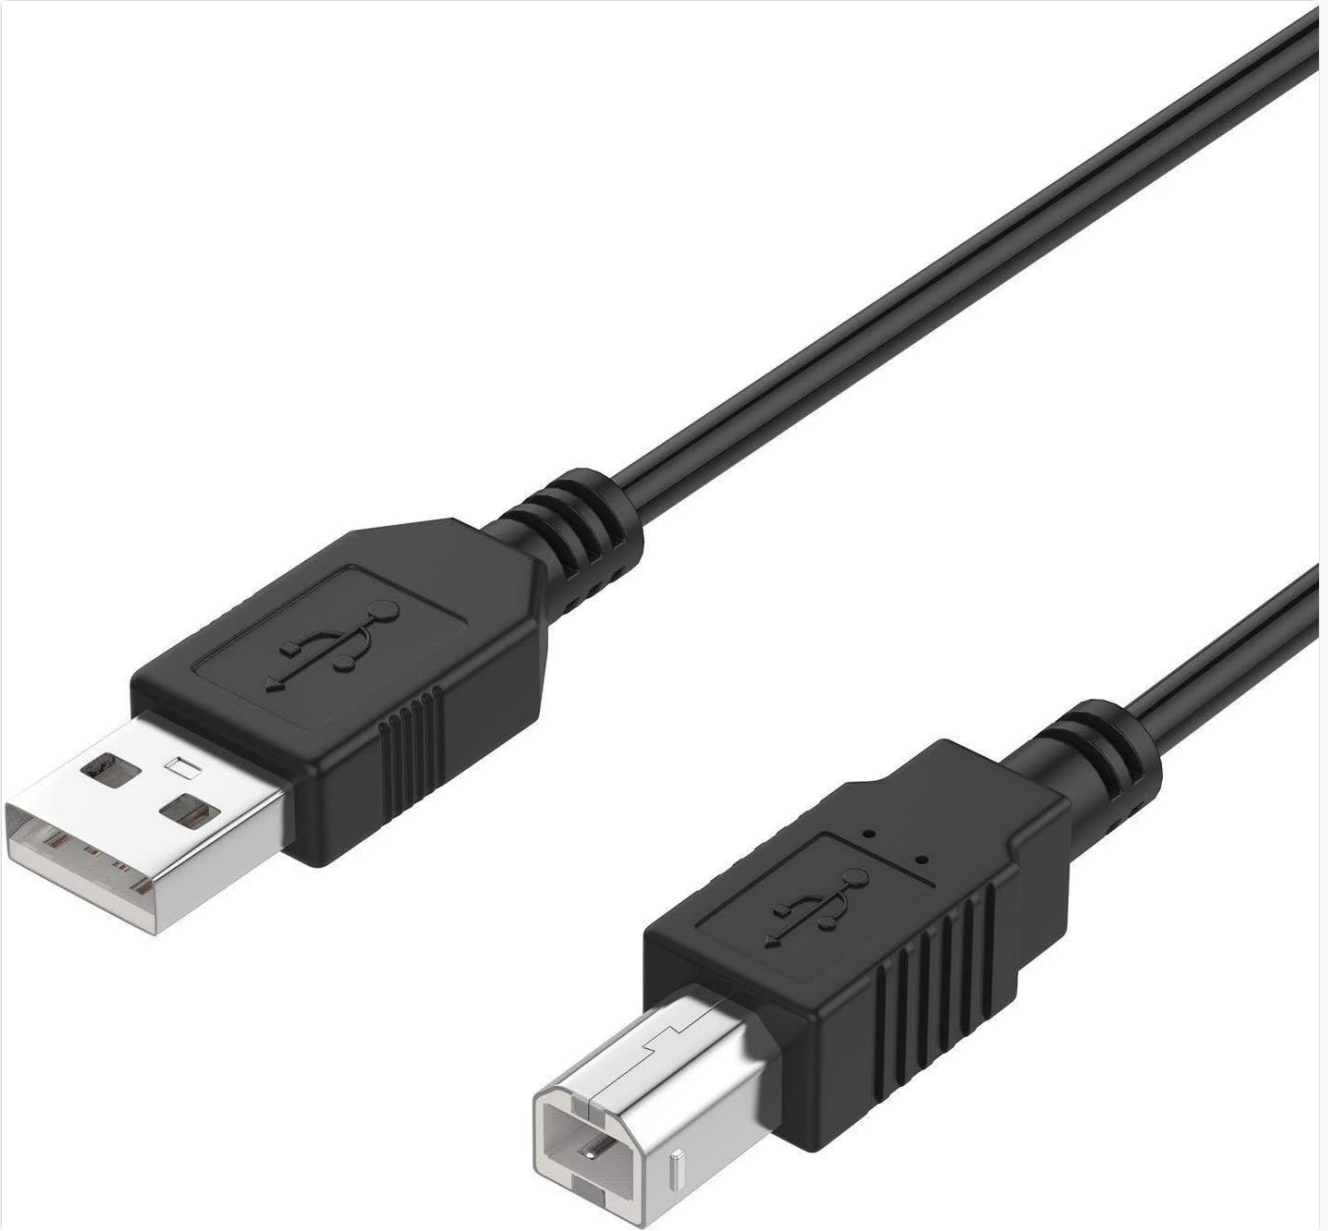 


Figure 2.1: KONKIN BOO USB 2.0 Printer Cable showing both USB-A and USB-B connectors.

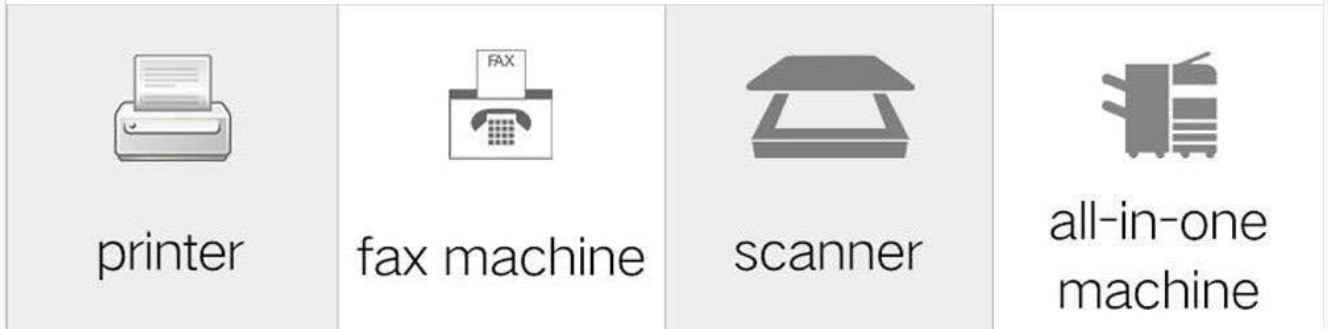 


Figure 2.2: Close-up view of the USB Type-A male and USB Type-B male connectors, indicating their typical use with printers, fax machines, scanners, and all-in-one devices.

Universal Compatibility

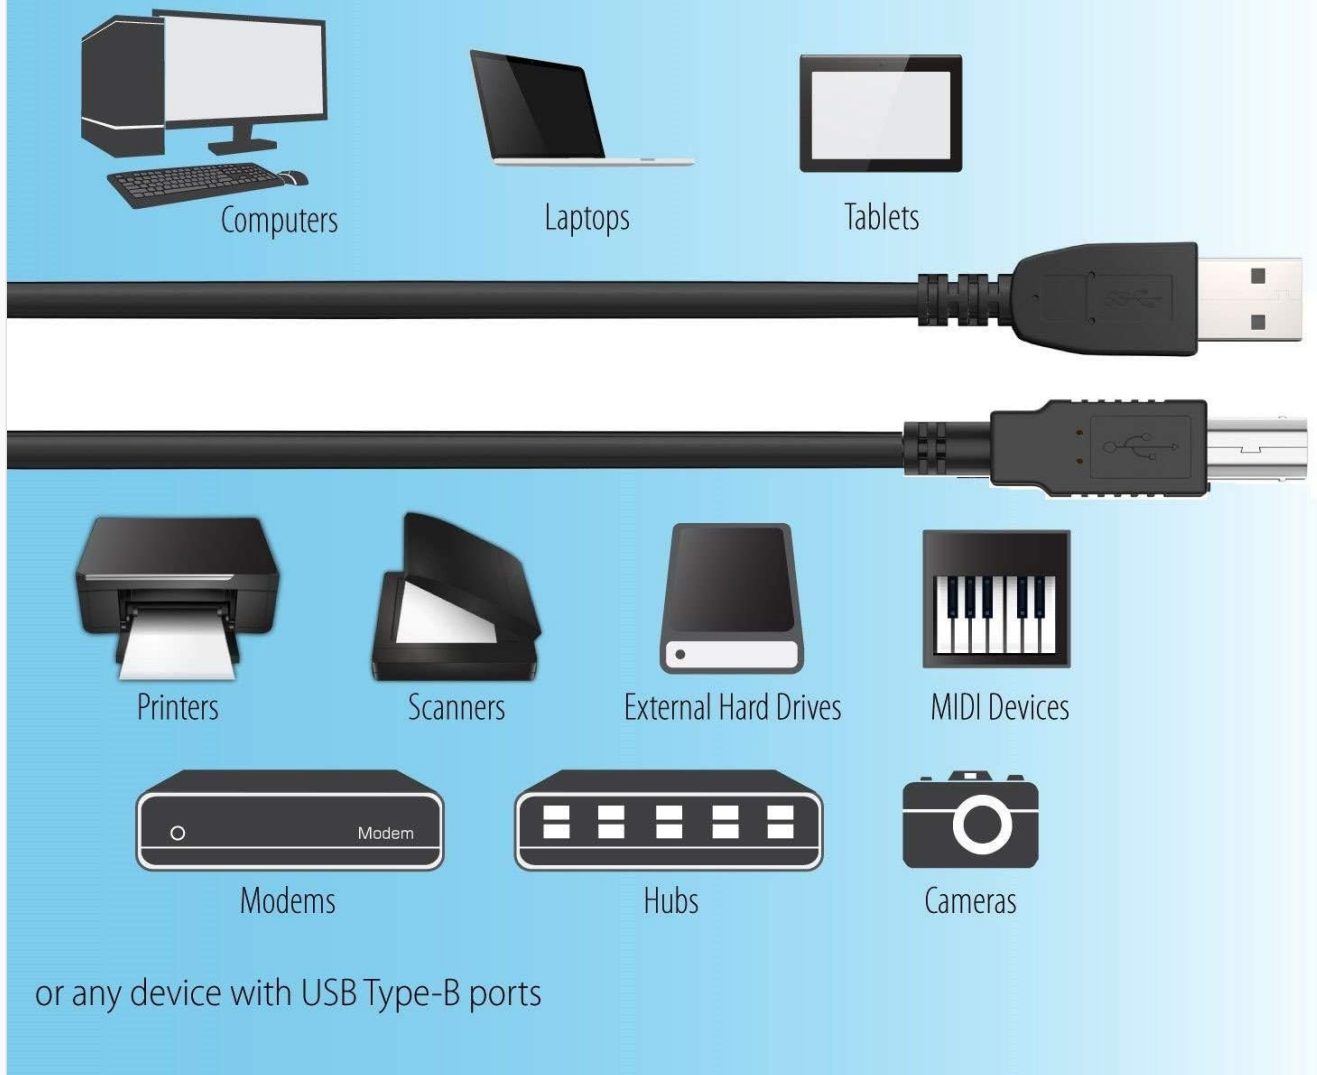 


Figure 2.3: Diagram illustrating the universal compatibility of the USB cable with various devices including computers, laptops, tablets, printers, scanners, external hard drives, MIDI devices, modems, hubs, and cameras, or any device with USB Type-B ports.

3. SPECIFICATIONS

Feature	Description
Brand	KONKIN BOO
Connector Type	USB 2.0 Type A-Male to Type B-Male
Cable Type	USB
Data Transfer Speed	Up to 480 megabits per second (Hi-Speed USB 2.0)

Compatible Devices	HP DESKJET Printer 1010, 1112, 2130, 3755, F2110, D1460, F2480, and other devices with a USB Type-B port (e.g., printers, scanners, fax machines, all-in-one machines, external hard drives, MIDI devices, modems, hubs, cameras)
Color	Black
Certification	CE Certified
Usage Environment	Indoor, Outdoor

USB 2.0



USB 3.0



Figure 3.1: Comparison illustrating the difference between USB 2.0 Type A and B connectors (compatible with this cable) and USB 3.0 Type A and B connectors (not compatible).

4. SETUP INSTRUCTIONS

Setting up your KONKIN BOO USB cable is a straightforward process. Follow these steps:

1. **Identify Ports:** Locate the USB Type-A port on your computer (typically a rectangular port) and the USB Type-B port on your printer or peripheral device (typically a square-shaped port with two angled corners).

2. **Connect to Computer:** Insert the USB Type-A male connector of the cable into an available USB Type-A port on your computer. Ensure it is fully seated.
3. **Connect to Peripheral:** Insert the USB Type-B male connector of the cable into the USB Type-B port on your printer, scanner, or other compatible device. Ensure it is fully seated.
4. **Power On Devices:** Ensure both your computer and the peripheral device are powered on.
5. **Driver Installation (if necessary):** Your operating system may automatically detect and install the necessary drivers for your peripheral. If not, refer to your peripheral device's manual for driver installation instructions.



Figure 4.1: Example of the USB cable connecting a laptop (USB Type-A port) to a printer (USB Type-B port).

5. OPERATING INSTRUCTIONS

Once the cable is connected and devices are recognized, the cable facilitates data communication between your computer and the connected peripheral. No specific operational steps are required for the cable itself beyond proper connection.

- **Data Transfer:** The cable supports Hi-Speed USB 2.0, enabling fast and efficient data transfer for printing,

scanning, or other peripheral functions.

- **Plug and Play:** The cable is designed for plug-and-play functionality with most modern operating systems and devices.

For specific operational instructions related to your printer or peripheral device, please consult its dedicated user manual.

6. MAINTENANCE

To ensure the longevity and optimal performance of your USB cable, follow these simple maintenance guidelines:

- **Storage:** When not in use, store the cable in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling or bending the cable sharply, especially near the connectors.
- **Cleaning:** If the cable becomes dirty, gently wipe it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Handling:** Always grasp the connector housing when plugging or unplugging the cable. Avoid pulling directly on the cable itself, as this can damage the internal wires or the connectors.
- **Protection:** Keep the cable away from pets and young children to prevent damage.



Figure 6.1: A coiled USB cable, demonstrating proper storage to prevent kinks and damage. Note the ferrite bead for signal integrity.

7. TROUBLESHOOTING

If you encounter issues with your USB cable, consider the following troubleshooting steps:

- **No Device Recognition:**
 - Ensure both ends of the cable are securely connected to the correct ports on your computer and peripheral.
 - Try connecting the cable to a different USB port on your computer.

- Restart both your computer and the peripheral device.
 - Verify that the peripheral device is powered on and functioning correctly independently of the cable.
 - Check your computer's Device Manager (Windows) or System Information (macOS) to see if the device is listed, even with an error.
 - If possible, test the cable with another compatible device or test another known-good USB cable with your current setup to isolate the issue.
- **Slow Data Transfer:**
 - Ensure you are connecting to a USB 2.0 compatible port on your computer. While USB 2.0 is backward compatible with USB 1.1, performance will be limited by the slowest component.
 - Avoid using excessively long USB extension cables, which can degrade signal quality.
 - Ensure no other high-bandwidth USB devices are monopolizing the USB controller.
 - **Physical Damage:**
 - Inspect the cable for any visible signs of damage, such as cuts, kinks, or bent/broken pins on the connectors. A damaged cable should be replaced.

8. WARRANTY INFORMATION

Specific warranty details for this KONKIN BOO product are not provided in this manual. Please refer to the product packaging or the retailer's website where you purchased the cable for any applicable warranty terms and conditions.

9. CUSTOMER SUPPORT

For further assistance or inquiries regarding your KONKIN BOO USB Cable, please contact the retailer or the manufacturer directly. Contact information may be available on the product packaging or the official KONKIN BOO website.

Manufacturer: KONKIN BOO

ASIN: B08XLPRZYP



© 2024 KONKIN BOO. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.