

[Manuals.plus](#) /

> [Hyper Tough](#) /

> Hyper Tough 9-Inch Dripless Caulk Gun User Manual

Hyper Tough 6213

Hyper Tough 9-Inch Dripless Caulk Gun User Manual

Model: 6213

INTRODUCTION

This manual provides instructions for the safe and effective use of the Hyper Tough 9-Inch Dripless Caulk Gun. Please read this manual thoroughly before operation and retain it for future reference.



Image: The Hyper Tough 9-Inch Dripless Caulk Gun, shown in its entirety. It features a red steel frame, a trigger handle, and a long rod for dispensing caulk.

SAFETY INFORMATION

- Always wear appropriate personal protective equipment (PPE), such as gloves and eye protection, when handling caulk and operating the caulk gun.
- Ensure the work area is well-ventilated.
- Keep hands and fingers clear of moving parts, especially the pressure rod and trigger mechanism.
- Do not modify the caulk gun. Use it only for its intended purpose.
- Keep out of reach of children.

PRODUCT FEATURES

- **Steel Frame:** Durable construction for longevity.
- **Dripless Design:** Minimizes mess and waste.
- **Thrust Ratio 5:1:** Suitable for low viscosity materials.
- **Smooth Pressure Rod:** Quieter operation and less force required compared to ratchet-style rods.
- **Integrated Spout Cutter:** For precise cutting of caulk tube tips.
- **Built-in Seal Punch:** For breaking the inner seal of caulk tubes.
- **Half-Barrel Cradle:** Supports standard 10 oz cartridges for light to medium applications.



Image: A close-up view of the Hyper Tough 9-Inch Dripless Caulk Gun's handle, highlighting the integrated tip cutter and the smooth pressure rod mechanism.

SETUP

1. Prepare the Caulk Tube:

Using the integrated spout cutter on the caulk gun's handle, cut the tip of the caulk tube at a 45-degree angle to the desired bead size. Ensure the opening is clean and free of debris.



Step 1

Use built-in spout cutter to cut tubes cleanly and precisely by just squeezing the handle.



Step 2

Use the wire rod for punching through the bottom of the caulk tube to activate pressure release.

Step 3

Pull the plunger all the way back.



Step 4

Put the tube into the gun, with the nozzle in the front.



Step 5

Pull the caulk gun along the joint. Hold the tube at a 45-degree angle to the joint being filled. Apply steady pressure to the trigger of the caulk gun.

Step 6

It locks the pressure rod wherever you stop it. To remove caulk, loosen trigger and pull back the rod behind the cartridge.



Step 7

Remove caulk from caulk gun

Image: Step 1 of the setup process, showing a hand using the caulk gun's built-in spout cutter to cleanly and precisely cut the tip of a caulk tube.

2. Puncture the Inner Seal:

Insert the built-in seal punch (wire rod) into the cut tip of the caulk tube to break the inner seal. This ensures a smooth flow of material.



Step 1

Use built-in spout cutter to cut tubes cleanly and precisely by just squeezing the handle.



Step 2

Use the wire rod for punching through the bottom of the caulk tube to activate pressure release.

Step 3

Pull the plunger all the way back.



Step 4

Put the tube into the gun, with the nozzle in the front.



Step 5

Pull the caulk gun along the joint. Hold the tube at a 45-degree angle to the joint being filled. Apply steady pressure to the trigger of the caulk gun.

Step 6

It locks the pressure rod wherever you stop it. To remove caulk, loosen trigger and pull back the rod behind the cartridge.



Step 7

Remove caulk from caulk gun

Image: Step 2 of the setup process, illustrating the use of the wire rod to puncture the bottom of the caulk tube, activating pressure release.

3. Retract the Plunger:

Pull the plunger rod all the way back to fully retract it, creating space for the caulk tube.



Step 1

Use built-in spout cutter to cut tubes cleanly and precisely by just squeezing the handle.



Step 2

Use the wire rod for punching through the bottom of the caulk tube to activate pressure release.

Step 3

Pull the plunger all the way back.



Step 4

Put the tube into the gun, with the nozzle in the front.



Step 5

Pull the caulk gun along the joint. Hold the tube at a 45-degree angle to the joint being filled. Apply steady pressure to the trigger of the caulk gun.

Step 6

It locks the pressure rod wherever you stop it. To remove caulk, loosen trigger and pull back the rod behind the cartridge.



Step 7

Remove caulk from caulk gun

Image: Step 3 of the setup process, depicting the plunger rod of the caulk gun pulled all the way back, ready for tube insertion.

4. Load the Caulk Tube:

Place the prepared caulk tube into the half-barrel cradle of the caulk gun, ensuring the nozzle faces forward.



Step 1

Use built-in spout cutter to cut tubes cleanly and precisely by just squeezing the handle.



Step 2

Use the wire rod for punching through the bottom of the caulk tube to activate pressure release.

Step 3

Pull the plunger all the way back.



Step 4

Put the tube into the gun, with the nozzle in the front.



Step 5

Pull the caulk gun along the joint. Hold the tube at a 45-degree angle to the joint being filled. Apply steady pressure to the trigger of the caulk gun.

Step 6

It locks the pressure rod wherever you stop it. To remove caulk, loosen trigger and pull back the rod behind the cartridge.



Step 7

Remove caulk from caulk gun

Image: Step 4 of the setup process, depicting the caulk tube being inserted into the gun with the nozzle facing the front.

OPERATING INSTRUCTIONS

1. Apply Caulk:

Position the caulk gun with the nozzle at a 45-degree angle to the joint or surface you intend to seal. Apply steady pressure to the trigger to dispense the caulk. Maintain consistent speed for an even bead.



Image: A person using the Hyper Tough 9-Inch Dripless Caulk Gun to apply caulk along a seam, demonstrating proper angle and technique.



Step 1

Use built-in spout cutter to cut tubes cleanly and precisely by just squeezing the handle.



Step 2

Use the wire rod for punching through the bottom of the caulk tube to activate pressure release.

Step 3

Pull the plunger all the way back.



Step 4

Put the tube into the gun, with the nozzle in the front.



Step 5

Pull the caulk gun along the joint. Hold the tube at a 45-degree angle to the joint being filled. Apply steady pressure to the trigger of the caulk gun.

Step 6

It locks the pressure rod wherever you stop it. To remove caulk, loosen trigger and pull back the rod behind the cartridge.



Step 7

Remove caulk from caulk gun

Image: Step 5 of the operating process, showing the caulk gun being used to pull caulk along a joint at a 45-degree angle, with steady pressure on the trigger.

2. Dripless Feature:

The dripless design automatically retracts the pressure rod slightly when the trigger is released, preventing excess caulk from oozing out. This feature helps maintain a clean work area and reduces waste.

3. Stopping Caulk Flow:

To stop the flow of caulk, simply release the trigger. The dripless mechanism will engage. For longer pauses or to remove the tube, fully retract the pressure rod by pulling the release lever and pulling the rod back.



Step 1

Use built-in spout cutter to cut tubes cleanly and precisely by just squeezing the handle.



Step 2

Use the wire rod for punching through the bottom of the caulk tube to activate pressure release.


Step 3

Pull the plunger all the way back.



Step 4

Put the tube into the gun, with the nozzle in the front.

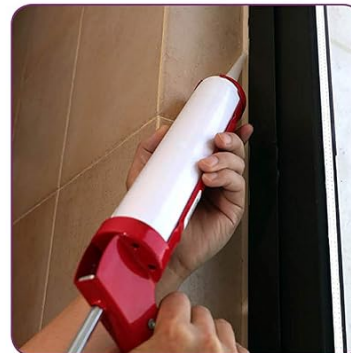

Step 5

Pull the caulk gun along the joint. Hold the tube at a 45-degree angle to the joint being filled. Apply steady pressure to the trigger of the caulk gun.

Step 6

It locks the pressure rod wherever you stop it. To remove caulk, loosen trigger and pull back the rod behind the cartridge.



Step 7

Remove caulk from caulk gun

Image: Step 6 of the operating process, illustrating how the pressure rod locks wherever it stops, and how to loosen the trigger and pull back the rod to remove the cartridge.

MAINTENANCE

- **Cleaning:** After each use, wipe down the caulk gun, especially the nozzle area and pressure rod, to remove any excess caulk. Use a damp cloth or appropriate solvent for the type of caulk used.
- **Storage:** Store the caulk gun in a clean, dry place away from extreme temperatures.
- **Lubrication:** Periodically apply a small amount of light machine oil to the pressure rod to ensure smooth operation.
- **Removing Caulk Tube:**

To remove a caulk tube, fully retract the pressure rod. If the tube is partially used, cap the nozzle to prevent drying. If the tube is empty, dispose of it according to local regulations.



Step 1

Use built-in spout cutter to cut tubes cleanly and precisely by just squeezing the handle.



Step 2

Use the wire rod for punching through the bottom of the caulk tube to activate pressure release.

Step 3

Pull the plunger all the way back.



Step 4

Put the tube into the gun, with the nozzle in the front.



Step 5

Pull the caulk gun along the joint. Hold the tube at a 45-degree angle to the joint being filled. Apply steady pressure to the trigger of the caulk gun.

Step 6

It locks the pressure rod wherever you stop it. To remove caulk, loosen trigger and pull back the rod behind the cartridge.



Step 7

Remove caulk from caulk gun

Image: Step 7 of the maintenance process, showing the removal of the caulk tube from the caulk gun.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Caulk not dispensing	Inner seal not punctured; nozzle clogged; empty tube.	Puncture inner seal with wire rod; clear nozzle; replace tube.
Uneven caulk bead	Inconsistent pressure; incorrect angle; nozzle cut improperly.	Apply steady pressure; maintain 45-degree angle; recut nozzle.
Caulk still oozing after release	Dripless mechanism obstructed; very high viscosity material.	Clean pressure rod and mechanism; ensure proper release; consider a higher thrust ratio gun for very thick materials.

SPECIFICATIONS

Model: 6213

Brand: Hyper Tough

Type: Dripless Caulk Gun

Frame Material: Steel

Cartridge Size: Standard 10 oz

Thrust Ratio: 5:1

Features: Integrated spout cutter, built-in seal punch, smooth pressure rod, half-barrel cradle.

ASIN: B08XLY8TTY

Date First Available: March 30, 2021

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Hyper Tough 9-Inch Dripless Caulk Gun, please refer to the product packaging or contact Hyper Tough customer service directly. Keep your purchase receipt as proof of purchase.

Note: Specific warranty terms may vary and are subject to the manufacturer's policy at the time of purchase.

© 2023 Hyper Tough. All rights reserved.
For more information, visit [Hyper Tough Official Website](#)