

[Manuals.plus](#) /

› [iClever](#) /

› iClever Ergonomic Wireless Mouse User Manual

iClever MD-172

iClever Ergonomic Wireless Mouse User Manual

Model: MD-172

INTRODUCTION

Thank you for choosing the iClever Ergonomic Wireless Mouse. This manual provides detailed instructions on how to set up, operate, and maintain your mouse to ensure optimal performance and comfort. This mouse features triple connectivity (Bluetooth and 2.4G wireless), an ergonomic design for extended use, adjustable DPI settings, and a rechargeable battery.



Image: The iClever Ergonomic Wireless Mouse, showcasing its sleek black design with gold accents and the included USB receiver.

PACKAGE CONTENTS

- iClever Ergonomic Wireless Mouse (Model MD-172)
- USB 2.4G Receiver
- USB-C Charging Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the buttons and features of your iClever Ergonomic Wireless Mouse:

5-Level DPI Control for Any Task



Image: Diagram illustrating the various buttons and their functions on the iClever Ergonomic Wireless Mouse, including the left/right click, scroll wheel, DPI button, and side buttons.

1. **Left Button:** Standard left-click function.
2. **Right Button:** Standard right-click function.
3. **Scroll Wheel:** For vertical scrolling and middle-click.
4. **DPI Button:** Cycles through DPI sensitivity settings.
5. **Connect Button:** Used to switch between connected devices (2.4G, Bluetooth 1, Bluetooth 2).
6. **Page Forward Button:** Navigates forward in web browsers or file explorers.
7. **Page Backward Button:** Navigates backward in web browsers or file explorers.

The mouse also features LED indicators for connectivity status and DPI level, located near the connect button.

SETUP

1. Charging the Mouse

Before first use, it is recommended to fully charge the mouse. Connect the supplied USB-C charging cable to the mouse's USB-C port and the other end to a USB power source (e.g., computer USB port, USB wall adapter).

- A full charge takes approximately 2 hours.
- The mouse has a 500mAh lithium battery, providing up to 50 days of standby time on a single charge.

Up to 50 Days on a Single Charge

 **2 Hours**
Charge Time

 **50 Days**
Stand By Time

500 mAh



Image: The iClever mouse connected to a USB-C charging cable, illustrating its rechargeable capability and long battery life.

2. Connecting to Devices

The iClever Ergonomic Wireless Mouse supports triple connectivity, allowing you to connect to up to three devices simultaneously via 2.4G wireless or Bluetooth.



Image: An illustration showing the iClever mouse connected to a laptop, desktop monitor, and tablet, demonstrating its ability to connect to three devices.

2.1. 2.4G Wireless Connection

1. Locate the USB 2.4G receiver, usually stored in a compartment on the bottom of the mouse.
2. Plug the USB receiver into an available USB port on your computer.
3. Turn on the mouse using the power switch on the bottom.
4. Press the "Connect" button on the side of the mouse until the LED indicator for "1" (2.4G mode) lights up. The mouse should automatically connect to your device.

2.2. Bluetooth Connection (Bluetooth 1 & Bluetooth 2)

1. Turn on the mouse using the power switch on the bottom.
2. Press the "Connect" button on the side of the mouse to select either Bluetooth 1 (LED "2") or Bluetooth 2 (LED "3"). Hold the button for 3-5 seconds until the corresponding LED indicator starts blinking rapidly, indicating pairing mode.
3. On your device (PC, laptop, tablet, smartphone), enable Bluetooth and search for new devices.

4. Select "iClever Mouse" or a similar name from the list of available devices to pair.
5. Once paired, the LED indicator will stop blinking and remain solid for a few seconds, then turn off.
6. Repeat these steps to connect a second Bluetooth device using the other Bluetooth channel.


OPERATING INSTRUCTIONS

1. Adjusting DPI Sensitivity

The mouse offers 5 adjustable DPI settings (800/1200/1600/2000/2400 DPI) to suit various tasks and preferences. Press the DPI button (Button 4 in Product Overview) to cycle through the settings. The LED indicator will flash to indicate the current DPI level:

- 800 DPI (e.g., for Photoshop)
- 1200 DPI (e.g., for Excel)
- 1600 DPI (e.g., for Web browsing)
- 2000 DPI (e.g., for Multitasking)
- 2400 DPI (e.g., for Large Screens)

Optimized for Medium to Large Hands

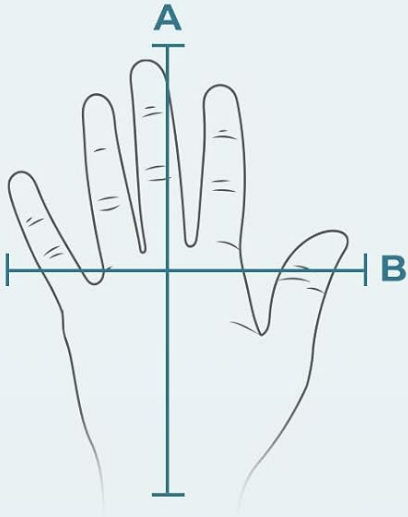

	Palm Length(A)	Palm Length(B)
S	< 6.7in / 17cm	< 3.2in / 8cm
M	6.7-7.5in / 17-19cm	3.2-3.9in / 8-10cm
L	> 7.5in / 19cm	> 3.9in / 10cm

Size Recommendation: **M to L**



Image: A visual representation of the 5 adjustable DPI settings (800, 1200, 1600, 2000, 2400) and their recommended uses, such as Photoshop, Excel, Web, Multitask, and Large Screen.

2. Switching Between Connected Devices

To switch between your connected devices (2.4G, Bluetooth 1, Bluetooth 2), simply press the "Connect" button (Button 5 in Product Overview) on the side of the mouse. The corresponding LED indicator (1, 2, or 3) will light up to show which device is currently active.

3. Silent Operation

The iClever Ergonomic Wireless Mouse is designed for silent operation. Both the left and right click buttons, as well as the scroll wheel, produce minimal noise, allowing for a quiet working environment.



Image: An icon indicating silent operation, highlighting the quiet nature of the mouse clicks.

4. Ergonomic Design

The mouse features a natural grip design and an extended thumb rest to provide ultimate comfort and reduce hand strain during long periods of use. It is optimized for medium to large hands.

Ergonomic Shape for Daily Comfort

This wireless ergonomic mouse promotes a more natural posture in the forearm for comfort and productivity, for day-long comfort and productivity

Image: A hand resting comfortably on the iClever ergonomic mouse, demonstrating its natural grip and design for daily comfort.

Well-Placed Buttons for Efficient Control



1 — Left Button

2 — Right Button

3 — Scroll Wheel

4 — DPI Button

5 — Connect button

6 — Page forward

7 — Connect button



Image: A diagram showing palm length measurements (A and B) and a size recommendation table, indicating the mouse is optimized for medium to large hands.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the mouse. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid harsh chemicals or abrasive materials.
- **Storage:** When not in use for extended periods, turn off the mouse to conserve battery life. Store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery lifespan, avoid fully discharging the mouse frequently. Charge it when the low battery indicator appears.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Mouse not responding.	Ensure the mouse is turned on. Check battery level and charge if necessary. For 2.4G: Ensure the USB receiver is securely plugged in. Try a different USB port. For Bluetooth: Ensure Bluetooth is enabled on your device and the mouse is paired. Try re-pairing the mouse. Press the "Connect" button to ensure the correct connection mode (1, 2, or 3) is selected.
Cursor movement is erratic or slow.	Clean the optical sensor on the bottom of the mouse. Try adjusting the DPI sensitivity using the DPI button. Ensure you are using the mouse on a suitable surface (non-reflective, non-transparent).
Mouse not charging.	Ensure the USB-C cable is properly connected to both the mouse and the power source. Try a different USB-C cable or USB power source.
Cannot switch between devices.	Ensure all devices are properly paired/connected to their respective channels (2.4G, BT1, BT2). Press the "Connect" button firmly and briefly to cycle through modes.

SPECIFICATIONS

Feature	Detail
Brand	iClever
Model Number	MD-172
Color	Black
Connectivity Technology	Bluetooth, 2.4G Wireless (USB Receiver)
DPI Settings	800 / 1200 / 1600 / 2000 / 2400 DPI
Number of Buttons	7 (Left, Right, Scroll Wheel, DPI, Connect, Forward, Backward)
Movement Detection Technology	Optical
Battery Type	500mAh Lithium Battery (Rechargeable via USB-C)
Special Features	Ergonomic Design, Rechargeable, Wireless, Silent Clicks, Multi-device Connectivity
Compatible Operating Systems	Windows 7/8/10, Mac, iMac, iPhone, iPad, Tablet PC, Laptop, Smartphone
Hand Orientation	Right

WARRANTY AND SUPPORT

iClever products come with a standard manufacturer's warranty. For specific warranty details, technical support, or any inquiries regarding your iClever Ergonomic Wireless Mouse, please refer to the warranty card included in your package or visit the official iClever website. You may also contact iClever customer support directly through their provided contact channels.

Official Website: www.iclever.com (Please check the actual website for support contact information)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question