

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [COOPERS](#) /

› [COOPERS 10-inch Android Tablet User Manual](#)

COOPERS CP10

COOPERS 10-inch Android Tablet User Manual

Model: CP10

INTRODUCTION

Welcome to the user manual for your new COOPERS 10-inch Android Tablet. This guide provides comprehensive instructions on setting up, operating, maintaining, and troubleshooting your device. Designed for optimal performance and user experience, your tablet features a powerful Quad-core processor, 6GB RAM, 32GB storage, and runs on the Android 15 operating system. Enjoy a crisp and vibrant viewing experience on its 1280 x 800 IPS display.



Image: Front view of the COOPERS 10-inch Android Tablet, displaying the Android 15 interface.

WHAT'S IN THE BOX

Upon unboxing your COOPERS Tablet, please ensure all the following items are present:

- 1 x COOPERS 10-inch Android Tablet
- 1 x USB Charging Cable
- 1 x Electronic Manual



Image: The COOPERS Tablet, its charging cable, and the user guide as typically found in the product packaging.

PRODUCT FEATURES

Powerful Performance

Equipped with a powerful Quad-core processor and 6GB RAM (2GB physical + 4GB expandable), running on the latest Android 15 operating system, this tablet ensures fast and responsive performance for quick app launches, smooth light gaming, and seamless video playback.

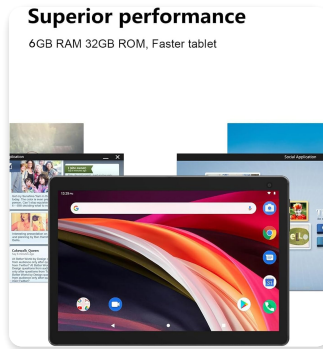 


Image: Tablet screen highlighting superior performance with 6GB RAM and 32GB ROM.

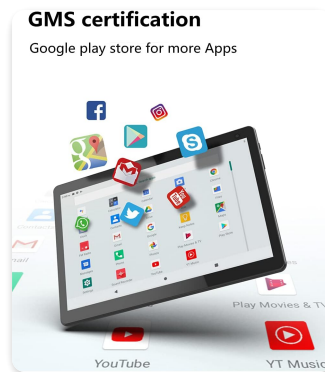 


Image: Tablet screen showing various Google Play Store applications.

Google Mobile Services (GMS) Certified

The tablet is GMS certified, providing full access to the Google Play Store and a wide range of applications, ensuring compatibility and a rich app ecosystem.

Vibrant IPS Display

Experience a true-to-life viewing experience on the 10-inch 1280 x 800 IPS display. It delivers bright visuals with vivid colors, resulting in a crisper and brighter image. The 10.0" capacitive touch screen with five-point G+G technology ensures fluid interaction for movies and games.



Image: Tablet displaying a high-resolution image of a car, showcasing its IPS Full HD display.

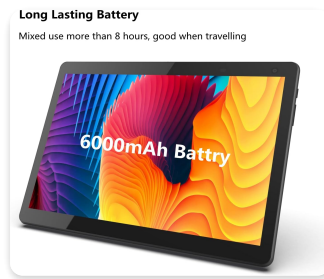 


Image: Tablet screen highlighting its 6000mAh battery capacity.

Long-Lasting Battery

Equipped with a 6000mAh built-in rechargeable battery, the tablet provides approximately 8 hours of mixed-use on a single charge, making it ideal for travel, reading e-books, listening to music, watching movies, playing games, or browsing the internet.

Versatile Functionality

This Android tablet features a 2.0MP front camera and an 8.0MP rear camera with flash. It supports Bluetooth 4.2, built-in GPS, and offers 32GB of internal storage, expandable up to 1TB with a microSD card (not included). It supports 1080P video playback, making it suitable for various activities like reading, photography, video viewing, and music.



Image: Collage demonstrating various uses of the tablet, including media consumption and photography.



Image: Graphic highlighting key specifications and features of the COOPERS Tablet.

Fast Connectivity

Stay connected with built-in Bluetooth 4.2 and Wi-Fi 802.11 ac/b/g/n. This tablet is a Wi-Fi only device and does not support SIM cards. The Type-C USB port allows for fast data transfer.

SETUP GUIDE

1. Initial Charging

Before first use, fully charge your tablet using the provided USB cable and a compatible power adapter (not included). Connect the Type-C end of the cable to the tablet's charging port and the USB-A end to a power source. The battery indicator on the screen will show charging progress.

2. Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side) for a few seconds until the COOPERS logo appears.
- **To Power Off:** Press and hold the Power button until a power-off menu appears. Select "Power off" or "Shut down".
- **To Restart:** From the power-off menu, select "Restart".

3. Initial Setup Wizard

The first time you power on the tablet, you will be guided through an initial setup wizard. Follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Accept terms and conditions.
- Set up your Google account (optional but recommended for app downloads).
- Set up screen lock (PIN, pattern, password).

OPERATING INSTRUCTIONS

1. Basic Navigation

- **Tap:** To select an item or open an app.
- **Tap & Hold:** To access contextual menus or move icons.
- **Swipe:** To scroll through pages, menus, or switch between home screens.
- **Pinch-to-Zoom:** To zoom in or out on images, web pages, or maps.

2. Wi-Fi Connection

To connect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Turn on Wi-Fi.
3. Select your desired network from the list.
4. Enter the password if prompted, then tap **Connect**.

3. Bluetooth Pairing

To pair with a Bluetooth device (e.g., headphones, keyboard):

1. Go to **Settings > Connected devices > Bluetooth**.
2. Turn on Bluetooth.
3. Ensure your Bluetooth device is in pairing mode.
4. Select the device from the "Available devices" list and follow any on-screen prompts to complete pairing.

4. Camera Usage

Your tablet is equipped with a 2.0MP front camera and an 8.0MP rear camera.

- Open the **Camera** app.
- Tap the camera switch icon to toggle between front and rear cameras.
- Tap the shutter button to take a photo or start/stop video recording.

10" Large 1280x800 IPS HD Display



Image: A person holding the COOPERS Tablet to take a selfie, demonstrating the display quality.

5. Storage Management

The tablet comes with 32GB of internal storage. You can expand this up to 1TB using a microSD card (not included).

- **To insert a microSD card:** Locate the card slot on the side of the tablet and gently insert the card until it clicks into place.
- **To manage storage:** Go to **Settings > Storage** to view usage and free up space.

6. App Installation

Download and install applications from the Google Play Store:

1. Open the **Play Store** app.
2. Search for the app you want to install.
3. Tap **Install** and follow the on-screen instructions.

MAINTENANCE

1. Cleaning Your Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics. Avoid using harsh chemicals or abrasive materials.

2. Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features.

- Go to **Settings > System > System update**.
- Follow the prompts to check for and install any available updates. Ensure your tablet is charged or connected to power during updates.

3. Battery Care

To prolong battery life:

- Avoid extreme temperatures.
- Do not let the battery completely drain frequently.
- Unplug the charger once the tablet is fully charged.
- Reduce screen brightness and disable unused features like Bluetooth or GPS when not in use.

TROUBLESHOOTING

Problem	Possible Solution
Tablet won't turn on	Ensure the battery is charged. Connect to charger for at least 30 minutes. If still unresponsive, press and hold the power button for 10-15 seconds to force a restart.
Wi-Fi connection issues	Restart the tablet and your Wi-Fi router. Forget the network in Wi-Fi settings and reconnect. Ensure you are within range of the Wi-Fi signal.
Slow performance / Apps crashing	Close unused apps. Clear app caches (Settings > Apps > [App Name] > Storage > Clear cache). Free up internal storage. Restart the tablet. Consider a factory reset as a last resort (back up data first).
Screen is unresponsive	Restart the tablet. Ensure the screen is clean and dry. If the issue persists, contact customer support.
Battery drains quickly	Reduce screen brightness. Disable Wi-Fi, Bluetooth, GPS when not in use. Close background apps. Check battery usage in Settings to identify power-hungry apps.

Factory Reset (Data Loss Warning)

A factory reset will erase all data on your tablet and restore it to its original factory settings. Only perform this if other troubleshooting steps fail and you have backed up all important data.

1. Go to **Settings > System > Reset options**.
2. Select **Erase all data (factory reset)**.
3. Confirm your decision and enter your PIN/pattern/password if prompted.

SPECIFICATIONS

Feature	Detail
Brand	COOPERS
Model Name	CP10
Operating System	Android 15
Screen Size	10 Inches
Screen Resolution	1280 x 800 Pixels (IPS)
Processor	Quad-core, 1.3 GHz
RAM	6GB (2GB physical + 4GB expandable)
Internal Storage	32GB
Expandable Storage	Up to 1TB via microSD (card not included)
Rear Camera	8 MP
Front Camera	2 MP
Wireless Connectivity	Wi-Fi 802.11 ac/b/g/n
Bluetooth	Bluetooth 4.2
GPS	Built-in GPS
Battery Capacity	6000mAh
Average Battery Life	8 Hours (mixed-use)
Item Weight	1.65 pounds
Product Dimensions	9.45 x 6.69 x 0.39 inches

WARRANTY AND SUPPORT

Your COOPERS Tablet is covered by a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact COOPERS customer service. Contact information can typically be found on the COOPERS official website or on the product packaging.

Online Resources: For the latest updates, FAQs, and additional support, visit the official COOPERS support page.



