

ZORSOME MatePad T10 9.7" 2020 AGR-L09/AGR-W09

ZORSOME EVA Shockproof Tablet Case User Manual

FOR HUAWEI MATEPAD T10 9.7" 2020 (AGR-L09/AGR-W09)

Model: MatePad T10 9.7" 2020 AGR-L09/AGR-W09

1. Introduction

Thank you for choosing the ZORSOME EVA Shockproof Tablet Case. This manual provides essential information for the proper installation, use, and maintenance of your new tablet case. Designed with durability and child-friendliness in mind, this case offers robust protection for your Huawei MatePad T10 9.7" 2020 tablet.

2. Product Features

- **Eco-friendly and Non-toxic Material:** Constructed from EVA material, suitable for children, non-toxic, and shock-absorbing.
- **Lightweight Design:** Ultra-lightweight for comfortable handling by small hands.
- **Enhanced Protection:** Provides extra shock-absorbing, skid-proof, and anti-scratch protection. Flexible rubber covers the back, frame, and extends over the screen.
- **Impact Resistance:** Shock absorbent and impact resistant, ensuring safety during play.
- **Integrated Handle:** Non-slip handle grip designed for easy carrying by both children and adults.
- **Foldable Kickstand:** Features a creative kickstand design with two foldable stands on the back for hands-free horizontal viewing or typing positions.
- **Precise Cutouts:** Easy access to all ports, buttons, and cameras without removing the case.



Figure 2.1: The ZORSOME EVA Shockproof Tablet Case in purple, designed for the Huawei MatePad T10 9.7 inch tablet. It features a built-in handle for easy carrying and a foldable kickstand for hands-free viewing. The tablet screen shows a colorful cartoon.

HIGH QUALITY MATERIALS,
ENVIRONMENTAL
PROTECTION AND COMFORT

Adopt environmental protection EVA high-quality material, belong to portable and strong shell, provide good protection.



Figure 2.2: A top-down view of the ZORSOME EVA Tablet Case, highlighting its eco-friendly and non-toxic EVA material. The background shows a child and an adult, suggesting its suitability for family use and comfort for small hands.

Camera Protection

3mm higher than the camera design prevents camera from being scratched.



Screen Protection

3mm higher than the camera design prevent the screen from being scratched by any inclusions.

Figure 2.3: This image illustrates the protective design of the ZORSOME Tablet Case, showing the raised edges around the camera and screen. These elevated bezels are designed to prevent direct contact and scratches when the tablet is placed on a flat surface.

Military level Protection

- Effective shock absorption



Figure 2.4: An image showcasing the shock-absorbing capabilities of the ZORSOME Tablet Case. It features a graphic of a cracked surface beneath the case, emphasizing its 'Military level Protection' and the presence of a 'Cushion Air Sac' for impact resistance.

3. Compatibility

This ZORSOME EVA Shockproof Tablet Case is specifically designed for the following tablet models:

- Huawei MatePad T10 9.7" 2020 (Model: AGR-L09)
- Huawei MatePad T10 9.7" 2020 (Model: AGR-W09)

Please verify your tablet model number before installation to ensure proper fit and functionality.

4. Installation Guide (Setup)

Follow these steps to correctly install your tablet into the ZORSOME case:

1. **Prepare Tablet:** Ensure your Huawei MatePad T10 9.7" tablet is clean and free of dust or debris.
2. **Orient Case:** Hold the ZORSOME case with the screen opening facing you and the handle at the top.
3. **Insert Tablet:** Gently slide one side of your tablet into the case, aligning the edges. Apply slight pressure to the opposite side to fully seat the tablet within the case. Ensure all corners are securely covered by the case's protective frame.

4. **Check Fit:** Verify that all ports, buttons, and camera lenses are aligned with the case's cutouts and are easily accessible. The case should fit snugly around the tablet without excessive force.

5. Usage Instructions (Operating)

The ZORSOME tablet case is designed for ease of use and enhanced functionality:

- **Carrying with Handle:** Use the integrated top handle to safely and comfortably carry your tablet. The handle is designed for a secure grip, especially for children.
- **Using the Kickstand:** To activate the kickstand, locate the two foldable stands on the back of the case. Gently pull them outwards until they lock into position. This allows the tablet to stand horizontally for hands-free viewing or typing. To retract, push the stands back into their recessed slots until they are flush with the case.
- **Accessing Ports and Buttons:** The case features precise cutouts for the charging port, headphone jack, volume buttons, power button, and camera. These remain fully accessible while the tablet is in the case.



Figure 5.1: A child is shown holding the tablet securely within the ZORSOME Tablet Case, utilizing the ergonomic handle. This demonstrates the case's design for easy portability by children.



Figure 5.2: A composite image presenting various angles of the ZORSOME EVA Tablet Case. It shows the case with the tablet inserted, the integrated handle, the foldable kickstand in use, and different perspectives of its protective structure.

6. Care and Maintenance

To ensure the longevity and cleanliness of your ZORSOME tablet case, follow these care instructions:

- **Cleaning:** Wipe the case with a soft, damp cloth. For stubborn stains, a mild soap solution can be used. Avoid harsh chemicals or abrasive cleaners, as these may damage the EVA material.
- **Drying:** Allow the case to air dry completely before reinserting the tablet.
- **Storage:** Store the case in a cool, dry place away from direct sunlight or extreme temperatures when not in use.

7. Troubleshooting

If you encounter any issues with your tablet case, consider the following:

- **Difficulty Inserting Tablet:** Ensure the tablet is correctly aligned with the case. Do not force the tablet into the case, as this may cause damage. If the tablet does not fit, double-check its model number against the compatibility list.
- **Kickstand Instability:** Ensure the kickstand legs are fully extended and locked into position. Place the

tablet on a flat, stable surface.

- **Buttons Not Responding:** Verify that the tablet is properly seated in the case and that the case's button covers are aligned with the tablet's buttons.

8. Specifications

Feature	Detail
Brand	ZORSOME
Compatible Devices	Huawei MatePad T10 9.7" 2020 (AGR-L09/AGR-W09)
Material	EVA (Ethylene-vinyl acetate)
Form Factor	Case
Shell Type	Soft
Color	Purper

9. Warranty and Support

For warranty information or technical support, please refer to the product packaging or contact ZORSOME customer service through the retailer where the product was purchased. Please have your purchase details and product model information ready when contacting support.