

COOPERS CP10

COOPERS CP10 Tablet Case User Manual

Model: CP10 Tablet Case

Brand: COOPERS

1. INTRODUCTION

This manual provides instructions for the COOPERS Tablet Case, designed specifically for the COOPERS CP10 Tablet Computer. This case offers robust protection and enhanced usability for your device, featuring a slim profile and an adjustable stand.

2. PRODUCT FEATURES

- **Precise Compatibility:** Designed exclusively for the COOPERS CP10 Tablet Computer, ensuring a perfect fit and comprehensive protection.
- **Adjustable Stand:** Features a built-in adjustable back clip for flexible viewing angles, suitable for various activities like work, study, or travel.
- **Durable Protection:** Constructed from premium PU leather and soft silicone to safeguard your tablet from drops and impacts.
- **Full Access:** Engineered with precise cutouts to allow unobstructed access to the charger port, speakers, cameras, earphone jack, volume controls, and power buttons.
- **Lightweight Design:** A slim and lightweight profile that adds minimal bulk while providing essential protection.



Image: The COOPERS CP10 Tablet Case with a tablet inserted, demonstrating the stand function. The case provides a secure fit and allows the tablet to be propped up for hands-free viewing.

3. SETUP AND INSTALLATION

Follow these steps to properly install your COOPERS CP10 Tablet into the case:

1. **Prepare Your Tablet:** Ensure your COOPERS CP10 Tablet is clean and free of debris before installation.
2. **Insert Tablet:** Gently align your COOPERS CP10 Tablet with the case. Start by inserting one side of the tablet into the case, then carefully press the remaining edges until the tablet is fully seated within the protective frame.
3. **Verify Fit:** Confirm that all tablet edges are securely enclosed by the case and that all ports and buttons align with the case's cutouts.



Soft Material

Nice soft material for screen protection

Image: An open COOPERS CP10 Tablet Case, highlighting the soft interior material designed to protect the tablet screen from scratches.

4. OPERATING INSTRUCTIONS

4.1. Using the Adjustable Stand

The COOPERS Tablet Case features a built-in adjustable stand for comfortable viewing:

- **To Engage the Stand:** Fold the front cover backward and utilize the integrated back clip or grooves to prop up your tablet at your desired angle.
- **Adjusting Viewing Angle:** The design allows for multiple viewing angles. Experiment to find the most comfortable position for typing, watching videos, or browsing.

Different stand



Image: Two COOPERS CP10 Tablet Cases, each holding a tablet, demonstrating the versatility of the adjustable stand feature for different viewing angles.

4.2. Accessing Ports and Buttons

The case is designed with precise cutouts to ensure full functionality of your tablet without removal:

- **Charging:** Connect your charger directly to the tablet's charging port through the designated cutout.
- **Audio:** Use headphones or external speakers via the earphone jack cutout.
- **Camera:** The rear camera cutout ensures unobstructed photo and video capture.
- **Volume and Power:** Buttons are accessible through dedicated cutouts or covered by responsive case buttons.

5. MAINTENANCE

To ensure the longevity and appearance of your COOPERS Tablet Case, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the exterior of the case with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as these may damage the material.

- **Storage:** When not in use, store the case in a clean, dry environment away from direct sunlight or extreme temperatures.
- **Avoid Over-Stretching:** While durable, avoid excessive force when inserting or removing the tablet to prevent material fatigue.

6. TROUBLESHOOTING

6.1. Tablet Does Not Fit Properly

- **Check Compatibility:** Ensure your tablet is a COOPERS CP10 model. This case is specifically designed for the CP10 and may not fit other models.
- **Re-align:** Remove the tablet and carefully re-insert it, ensuring all corners and edges are properly aligned with the case's frame.

6.2. Difficulty Accessing Ports/Buttons

- **Verify Alignment:** Confirm the tablet is correctly seated within the case, ensuring all cutouts align with the tablet's features.
- **Inspect for Obstructions:** Check if any debris or foreign objects are blocking the cutouts.

7. SPECIFICATIONS

Feature	Detail
Brand	COOPERS
Compatible Device	COOPERS CP10 Tablet Computer
Material	PU Leather, Soft Silicone
Form Factor	Folio Case
Special Features	Adjustable Stand, Foldable
Color	Black
Item Weight	7.4 ounces (approx. 210 grams)
Package Dimensions	9.65 x 6.97 x 0.75 inches (approx. 24.5 x 17.7 x 1.9 cm)

Light Weight

It is a good light weight case to protect the screen when not use it



Image: A hand holding the COOPERS CP10 Tablet Case, illustrating its lightweight design and slim profile when closed.

8. WARRANTY AND SUPPORT

For warranty information or customer support regarding your COOPERS Tablet Case, please refer to the documentation included with your original purchase or visit the official COOPERS website for the most up-to-date information.

9. IMPORTANT SAFETY INFORMATION

- Keep the case away from extreme heat sources or open flames.
- Do not expose the case to excessive moisture or liquids.
- Keep out of reach of small children to prevent choking hazards from small parts.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question