

[manuals.plus](#) /› [Beelicious](#) /› [Beelicious 19 Quart/18L 7-in-1 Air Fryer Toaster Oven Combo User Manual \(Model: beeliciousBAF-801\)](#)**Beelicious beeliciousBAF-801**

# Beelicious 19 Quart/18L 7-in-1 Air Fryer Toaster Oven Combo User Manual

Model: beeliciousBAF-801

## 1. INTRODUCTION

Thank you for choosing the Beelicious 19 Quart/18L 7-in-1 Air Fryer Toaster Oven Combo. This versatile appliance combines the functions of an air fryer, convection oven, and toaster, offering multiple cooking modes including air fry, convection bake, convection broil, bake, broil, toast, and keep warm. Designed for efficiency and convenience, this manual provides essential information for safe operation, maintenance, and optimal use of your new appliance. Please read these instructions thoroughly before first use and retain them for future reference.



**Image 1.1:** The Beelicious 7-in-1 Air Fryer Toaster Oven in operation, showcasing its capacity with a pizza on the top rack and fried chicken in the basket below. This appliance offers a compact solution for various cooking needs.

## 2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in the oven.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or similar materials.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Extreme caution should be exercised when removing tray or disposing of hot grease.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.

## 3. PRODUCT OVERVIEW

---

### 3.1 Components

The Beelicious Air Fryer Toaster Oven is designed with user-friendly components for efficient cooking.


1. **Main Unit:** The primary housing containing heating elements, fan, and controls.
2. **Glass Door:** Transparent door for monitoring cooking progress.
3. **Control Panel:** Located on the front, featuring various knobs for settings.
4. **Interior Light:** Illuminates the cooking chamber.
5. **Power Cord:** For connecting to an electrical outlet.

### 3.2 Control Panel

The appliance features four intuitive control knobs to manage cooking settings:

1. **ON/TOAST TIMER Knob:** Used to set the toast shade (Light, Medium, Dark) and to turn the oven ON for toasting.
2. **FUNCTION Knob:** Selects the desired cooking mode (Air Fry, Convection Bake, Convection Broil, Bake, Broil, Toast, Keep Warm).
3. **TEMPERATURE Knob:** Adjusts the cooking temperature from 200°F to 450°F (90°C to 230°C).
4. **ON/OVEN TIMER Knob:** Sets the cooking time up to 60 minutes or selects the "Stay On" function for continuous operation.

# Multifunctional, All in One

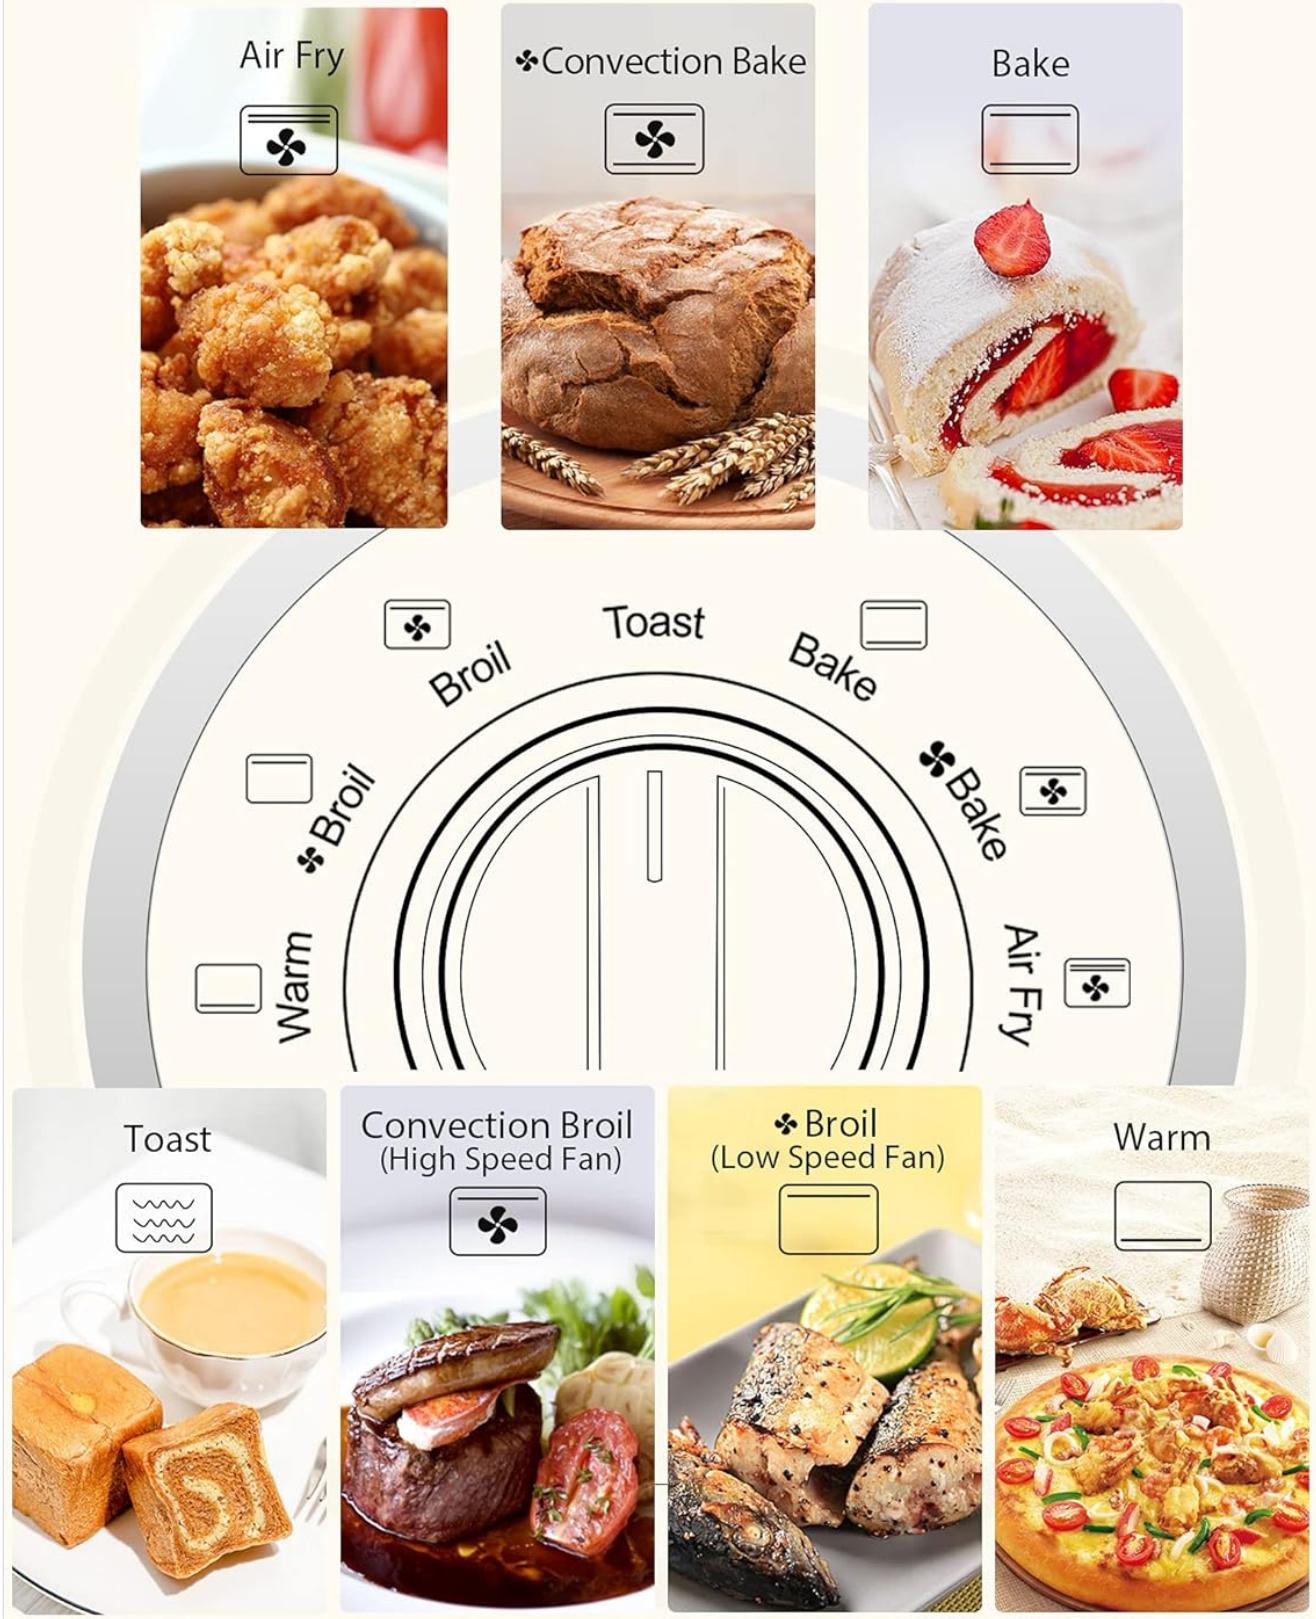

**Image 3.1:** An illustration of the multi-functional capabilities of the Beelicious oven, detailing the seven cooking modes: Air Fry, Convection Bake, Bake, Broil, Toast, Convection Broil (High Speed Fan), Broil (Low Speed Fan), and Warm. Each mode is represented by an icon and a brief description.

## 4. SETUP

### 4.1 Unpacking

- Remove all packaging materials and promotional labels from the oven.
- Ensure all accessories are present: Fry Basket, Wire Rack, Broil/Baking Pan, Crumb Tray.
- Inspect the oven for any damage. Do not operate if damaged.

## 4.2 Placement

- Place the oven on a stable, level, heat-resistant surface.
- Ensure there is at least 4 inches (10 cm) of clearance on all sides of the oven for proper ventilation.
- Do not place the oven near flammable materials or under cabinets.

## 4.3 Before First Use

- Wash all removable accessories (fry basket, wire rack, baking pan, crumb tray) in warm, soapy water. Rinse and dry thoroughly.
- Wipe the interior and exterior of the oven with a damp cloth.
- Plug the oven into a grounded electrical outlet.
- It is recommended to run the oven empty for about 15 minutes at 400°F (200°C) on the "Bake" function to burn off any manufacturing oils. A slight odor or smoke may be present; this is normal. Ensure good ventilation during this process.

# 5. OPERATING INSTRUCTIONS

---

This section details how to use the various cooking functions of your Beelicious Air Fryer Toaster Oven.

## 5.1 General Operation Steps

1. Place the desired food item inside the oven, using the appropriate accessory (e.g., fry basket for air frying, wire rack for baking).
2. Close the glass door securely.
3. Turn the **FUNCTION Knob** to select your desired cooking mode.
4. Turn the **TEMPERATURE Knob** to set the desired cooking temperature.
5. Turn the **ON/OVEN TIMER Knob** to set the cooking time. The oven will begin heating. For continuous operation, turn the timer past the 60-minute mark to the "Stay On" position.
6. The oven light will illuminate during operation.
7. When the cooking cycle is complete, the timer will ding, and the oven will turn off automatically (unless "Stay On" was selected).
8. Carefully remove cooked food using oven mitts.

## 5.2 Specific Cooking Modes

### Air Fry

- Use the Fry Basket placed on the Wire Rack for best air frying results.
- Ensure food is arranged in a single layer for even crisping.
- Select "Air Fry" with the FUNCTION knob.
- Set TEMPERATURE and ON/OVEN TIMER as per recipe or desired doneness.

### Convection Bake / Convection Broil

- These modes utilize the convection fan for faster, more even cooking.
- Select "Convection Bake" or "Convection Broil" with the FUNCTION knob.

- Set TEMPERATURE and ON/OVEN TIMER. Convection cooking often requires slightly lower temperatures or shorter times than conventional methods.

## Bake

- Ideal for cakes, cookies, and casseroles.
- Select "Bake" with the FUNCTION knob.
- Set TEMPERATURE and ON/OVEN TIMER.


## Broil

- Use for browning, melting cheese, or cooking thin cuts of meat.
- Place food on the Broil/Baking Pan on the top rack position.
- Select "Broil" with the FUNCTION knob.
- Set TEMPERATURE and ON/OVEN TIMER. Monitor food closely to prevent burning.


## Toast

- Place bread slices directly on the Wire Rack.
- Turn the FUNCTION knob to "Toast".
- Use the **ON/TOAST TIMER Knob** to select the desired toast shade: Light, Medium, or Dark. The oven will automatically adjust the toasting time.
- The oven will turn off automatically when toasting is complete.


# Professional Toast Function

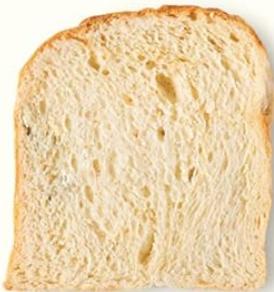

Light

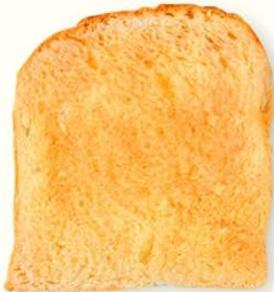

Medium

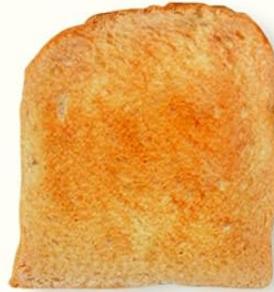

Dark



**Image 5.1:** This image illustrates the "Professional Toast Function" of the Beelicious oven, displaying three levels of toast doneness: Light, Medium, and Dark. It also shows the dedicated toast timer knob on the appliance, which allows users to select their preferred shade.

## Keep Warm

- Use to keep cooked food warm before serving.
- Select "Keep Warm" with the FUNCTION knob.
- Set the ON/OVEN TIMER for the desired warming duration.

## 6. ACCESSORIES AND USAGE

Your Beelicious Air Fryer Toaster Oven comes with four essential accessories to enhance your cooking experience.

### Fry Basket

The Fry Basket is specifically designed for air frying. Its mesh construction allows hot air to circulate evenly around food, ensuring crispy results. Ideal for fries, chicken wings, and other fried snacks. Place it on the Wire Rack for support.

### Wire Rack

The Wire Rack is versatile and can be used for baking, toasting, or as a support for the Fry Basket or Broil/Baking Pan. It allows for air circulation around food.

### Broil/Baking Pan

This pan is suitable for broiling, baking cookies, or roasting smaller items. When broiling, it collects drippings. Always use it over the Wire Rack for stability.

### Crumb Tray

The Crumb Tray slides into the bottom of the oven to catch crumbs and drippings, making cleanup easier. Always ensure it is in place during operation.

# 4 Accessories, Meet All Cooking Needs



## Fry Basket

Great for fries and other snacks.



## Wire Rack

Ideal for baking pizza, toast, meat and more.



## Broil/Baking Pan

For broil, baking cookies and others. The baking pan should be used over the wire rack.



## Crumb Tray

Cook with the crumb tray in place for easy clean up.



**Image 6.1:** A visual guide to the four included accessories: Fry Basket (for fries), Wire Rack (for toast), Broil/Baking Pan (for baked goods), and Crumb Tray (for easy cleaning). Each accessory is shown with its typical use.

## 7. CLEANING AND MAINTENANCE

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your Beelicious Air

## 7.1 Before Cleaning

- Always unplug the oven from the power outlet and allow it to cool completely before cleaning.

## 7.2 Cleaning the Interior

- Wipe the interior walls with a damp cloth and mild, non-abrasive detergent.
- For stubborn stains, a paste of baking soda and water can be applied, left for a few minutes, then wiped clean.
- Do not use abrasive cleaners, scouring pads, or metal utensils on the interior, as they can damage the non-stick coating.
- Ensure the interior is completely dry before plugging the oven back in.

## 7.3 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- For stainless steel surfaces, use a stainless steel cleaner for best results.
- Do not immerse the oven in water or any other liquid.

## 7.4 Cleaning Accessories

- The Fry Basket, Wire Rack, Broil/Baking Pan, and Crumb Tray are dishwasher-safe.
- Alternatively, wash them in warm, soapy water using a non-abrasive sponge. Rinse thoroughly and dry completely before storing or reusing.
- Regularly empty and clean the Crumb Tray to prevent grease buildup and potential fire hazards.

## 8. TROUBLESHOOTING

If you encounter any issues with your Beelicious Air Fryer Toaster Oven, please refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Turn the ON/OVEN TIMER knob past the "OFF" position to set a cooking time or "Stay On".
Food is not cooking evenly.	Overcrowding; incorrect rack position; uneven food distribution.	Avoid overcrowding the oven; cook in smaller batches if necessary. Ensure food is spread in a single layer. Try rotating food halfway through cooking. Use the recommended rack position for the selected function.
Excessive smoke during cooking.	Grease buildup; food drippings; high-fat foods.	Ensure the oven and crumb tray are clean before use. Use the Broil/Baking Pan to catch drippings from fatty foods. Reduce cooking temperature if smoke persists.
Toast is too light or too dark.	Incorrect toast shade setting.	Adjust the ON/TOAST TIMER knob to a lighter or darker setting for future use.

Problem	Possible Cause	Solution
Oven light not working.	Bulb burnt out.	Contact customer support for assistance with bulb replacement.

## 9. SPECIFICATIONS

---

- **Brand:** Beelicious
- **Model Number:** beeliciousBAF-801
- **Colour:** Matte Black
- **Capacity:** 19 Quart / 18 Liters (Note: Some specifications list 20 quarts)
- **Material:** Stainless Steel
- **Product Dimensions:** 34.29 x 40.64 x 38.1 cm (13.5 x 16 x 15 inches)
- **Item Weight:** 9.71 kg (21.4 lbs)
- **Special Features:** Broiler Option, Non-Stick Interior, Temperature Control

# Perfect Size for Family

✓ 20 QT Air Fryer Oven



12"  
Pizza



4LB  
Whole Chicken



6Slice  
Toast



Three Layer  
Cooking

✗ Traditional Air Fryer




1/4  
Pizza



1PC  
Chicken Leg



1Slice  
Toast

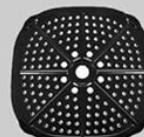

One Layer  
Cooking

**Image 9.1:** This image highlights the "Perfect Size for Family" aspect of the Beelicious 20 QT Air Fryer Oven, comparing its capacity to a traditional air fryer. It demonstrates the ability to cook a 12-inch pizza, a 4lb whole chicken, 6 slices of toast, and supports three-layer cooking.

# Your Kitchen Space Saver

## Multi-function Compact Oven



**Image 9.2:** An illustration detailing the external and internal dimensions of the Beelicious Multi-function Compact Oven, emphasizing its space-saving design. It shows the overall dimensions (16in W x 15in H x 13.5in D) and the internal cooking space (12.7in W x 7.5in H x 12.4in D) with a 20 QT capacity.

## 10. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Beelicious Air Fryer Toaster Oven, please refer to the

warranty card included with your product or contact Beelicious customer service directly. Please have your model number (beeliciousBAF-801) and purchase date available when contacting support.

© 2023 Beelicious. All rights reserved.

## Related Documents - beeliciousBAF-801

## HEMKOMST

### [HEMKOMST Frying Pan - IKEA Care and Usage Instructions](#)

Comprehensive guide for the IKEA HEMKOMST frying pan, detailing first use, cleaning, and safe operation on various stovetops and ovens. Learn essential tips for maintaining the non-stick surface and ensuring product longevity.

