

[Manuals.plus](#) /

› [Brondell](#) /

› Brondell CL1700 Swash Elongated Advanced Bidet Seat User Manual

Brondell OBCL1700-EW

Brondell CL1700 Swash Elongated Advanced Bidet Seat User Manual

Model: OBCL1700-EW

INTRODUCTION

The Brondell CL1700 Swash Elongated Advanced Bidet Seat is designed to provide a luxurious and hygienic experience. This manual provides comprehensive instructions for the installation, operation, and maintenance of your bidet seat, ensuring optimal performance and longevity.



Image: The Brondell CL1700 Swash Elongated Advanced Bidet Seat, showcasing its sleek design and the accompanying wireless remote control.

SAFETY INFORMATION

Please read all safety instructions carefully before installation and use. Failure to follow these instructions may result in electric shock, fire, or other hazards.

- Ensure the electrical outlet is a Ground Fault Circuit Interrupter (GFCI) outlet.
- Do not immerse the bidet seat or its electrical components in water.
- Do not attempt to repair or disassemble the unit yourself. Contact qualified service personnel.
- Turn off the water supply and unplug the unit before cleaning or maintenance.
- This product is designed for indoor use only.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Brondell Swash CL1700 Bidet Seat
- Wireless Remote Control with Wall Mount and AAA Batteries
- T-Valve for water connection
- Flexible Bidet Hose
- Mounting Plate
- Mounting Bolts, Washers, and Nuts
- Adjustable Brackets
- Rubber Washer for T-Valve

SETUP AND INSTALLATION

Follow these steps for a successful installation. It is recommended to watch the official installation video for visual guidance.



Video: Official installation guide for the Brondell CL1700 Advanced Bidet Seat. This video demonstrates each step of the installation process, from preparing your toilet to connecting the water and power.

1. Prepare Your Toilet:

Remove your existing toilet seat and thoroughly clean the toilet bowl and rim. Ensure the area is dry before proceeding.



Image: The Brondell CL1700 bidet seat seamlessly installed on an elongated toilet, demonstrating its fit and appearance in a bathroom setting.

2. Turn Off Water Supply:

Locate the water shut-off valve on the wall behind your toilet and turn it off. Flush the toilet to drain the tank completely. You may want a small bucket or towel to catch any residual water.

3. Disconnect Flexible Supply Line:

Unscrew the flexible water supply line from the fill valve located beneath the toilet tank.

4. Install T-Valve:

Insert the provided rubber washer (with the raised lip facing up) into the T-valve. Connect the T-valve to the fill valve under the toilet tank. Reconnect the flexible supply line to the bottom of the T-valve.



Image: An underside view of the bidet seat, highlighting the water inlet and connection points for the flexible bidet hose and T-valve.

5. Mounting Plate Installation:

Place the mounting plate over the bolt holes on your toilet, ensuring the arrow on the plate points towards the toilet tank. Insert the adjustable brackets into the mounting plate and align them with the toilet seat bolt holes.

6. Secure Mounting Bolts:

Slide the mounting bolts through the mounting plate and the holes in the toilet. Secure the bolts with the provided washers and nuts from underneath the toilet. Leave the nuts loose enough to allow for seat position adjustment later.

7. Attach Bidet Seat:

Place your Swash bidet seat flat onto the toilet in front of the mounting plate. Slide the bidet seat towards the tank onto the mounting plate until it clicks securely into place.

8. Adjust Seat Position:

To achieve the best fit, slide your bidet seat forward or backward as needed. Once positioned correctly, tighten the nuts under the toilet to secure the seat firmly.

9. Connect Bidet Hose:

Connect the plastic side of the bidet hose to the water inlet on the side of your Swash bidet seat. Then, connect the metal end of the bidet hose to the T-valve.

10. Restore Water and Power:

Slowly turn on the water supply at the shut-off valve and check all connections for leaks. If no leaks are present, plug the Swash bidet seat into the nearest GFCI (Ground Fault Circuit Interrupter) outlet. The bidet will immediately power on, and the nozzle will extend and retract as part of its self-test.

OPERATING INSTRUCTIONS

The Brondell CL1700 features an intuitive wireless remote control for easy operation. Ensure you are seated on the bidet seat to engage the seat sensor and enable full functionality.



Image: The wireless remote control for the Brondell CL1700, showing its various buttons for wash settings, temperature, and other functions, alongside its convenient wall mount.

- **Wash Settings:**

- **Rear Wash:** For posterior cleansing.
- **Front Wash:** For feminine cleansing.
- **Strong Wash:** Provides a more powerful spray.

- **Adjustable Water Pressure:** Use the '+' and '-' buttons on the remote to increase or decrease the water pressure to your comfort level.
- **Adjustable Water Temperature:** Press the "Water Temp" button to cycle through different water temperature settings (e.g., low, medium, high, off). Allow some time for the water to heat up to the desired temperature.
- **Nozzle Position:** Use the nozzle position arrows to adjust the spray nozzle's forward or backward position for optimal cleansing.
- **Warm Air Dryer:** Activate the "Dry" function for a gentle warm air stream to dry after washing. Adjust the air

temperature as desired.

- **Heated Seat:** The ergonomic heated seat offers adjustable temperature settings for comfort. Use the "Seat Temp" button to select your preferred warmth.
- **LED Nightlight:** An illuminating nightlight provides soft illumination for nighttime use.
- **Eco Mode:** Engage Dual Eco Mode for energy savings. This mode reduces power consumption when the unit is not in use.
- **Nozzle Cleaning:** The stainless-steel nozzle features an automatic self-cleaning function. You can also manually activate nozzle cleaning via the remote.
- **Massage and Pulse:** Certain wash modes may offer massage and pulse functions for enhanced cleansing.

MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and hygienic operation of your Brondell Swash bidet seat.

- **General Cleaning:**

Unplug the unit and turn off the water supply before cleaning. Use a soft, damp cloth and a mild, non-abrasive cleaner to wipe down the exterior surfaces of the bidet seat. Avoid harsh chemicals or abrasive pads that could damage the finish.

- **Nozzle Cleaning:**

The stainless-steel nozzle performs an automatic self-cleaning cycle before and after each use. For additional cleaning, you can manually extend the nozzle (refer to your remote control instructions) and gently wipe it with a soft cloth or brush. Do not force the nozzle.



Image: A close-up view of the retractable stainless steel nozzle, highlighting its dual spray ports for different wash functions.

- **Quick Release for Deep Cleaning:**

The bidet seat features a quick-release mechanism, allowing you to easily detach it from the toilet for thorough cleaning of both the seat and the toilet bowl. Press the quick-release button (usually located on the side of the

seat) and slide the seat forward to remove.



Image: A detailed shot of the quick-release button, which allows for easy removal of the bidet seat for comprehensive cleaning.

TROUBLESHOOTING

If you encounter any issues with your Brondell Swash bidet seat, please refer to the common problems and solutions below before contacting customer support.

Problem	Possible Cause	Solution
No power to the unit.	Unit not plugged in; GFCI tripped; power outage.	Ensure unit is securely plugged into a GFCI outlet. Reset the GFCI if tripped. Check household power.
No water spray.	Water supply valve closed; seat sensor not engaged.	Open the water shut-off valve fully. Ensure you are seated properly on the bidet seat to activate the seat sensor.
Water is not warm.	Water temperature setting too low; insufficient heating time.	Adjust water temperature setting on the remote. Allow a few minutes for the water to heat up.
Leaks from connections.	Loose connections; improperly installed washers.	Turn off water supply. Tighten all connections. Ensure washers are correctly seated. Do not overtighten.

Problem	Possible Cause	Solution
Remote control not responding.	Dead batteries; remote out of range.	Replace AAA batteries in the remote. Ensure remote is within operating range of the bidet seat.

SPECIFICATIONS

Feature	Detail
Model Number	OBCL1700-EW
Color	White
Material	Stainless Steel (nozzle)
Style	Elongated
Shape	Oval
Product Dimensions	20.7"L x 15.9"W
Item Weight	15.4 Pounds
Operation Mode	Automatic
UPC	819911014248
Batteries Required	4 AAA batteries (included for remote)
Manufacturer	Brondell
First Available Date	March 1, 2021

WARRANTY AND SUPPORT

The Brondell CL1700 Swash Elongated Advanced Bidet Seat comes with a **1-year warranty** from the date of purchase, covering defects in materials and workmanship under normal use.

For technical assistance, troubleshooting, or warranty claims, please contact Brondell Customer Support. Refer to the contact information provided in your product packaging or visit the official Brondell website for the most up-to-date support details.

When contacting support, please have your model number (OBCL1700-EW) and proof of purchase readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I open the remote control to replace the batteries for the Brondell Swash CL1700 bidet seat?

To replace the batteries in your Brondell Swash CL1700 remote control, follow these steps: Remove the remote from the wall mount: If the remote is currently docked, lift it up and out of its magnetic...

[Read full answer](#)