

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Kenko](#) /
- › Kenko KK-402 Electronic Calculator User Manual

Kenko KK-402

Kenko KK-402 Electronic Calculator User Manual


Model: KK-402

1. INTRODUCTION

This manual provides instructions for the proper use and maintenance of your Kenko KK-402 Electronic Calculator. This 8-digit calculator is designed for basic arithmetic operations and features an auto power-off function to conserve battery life.

KENKO®

KK-402

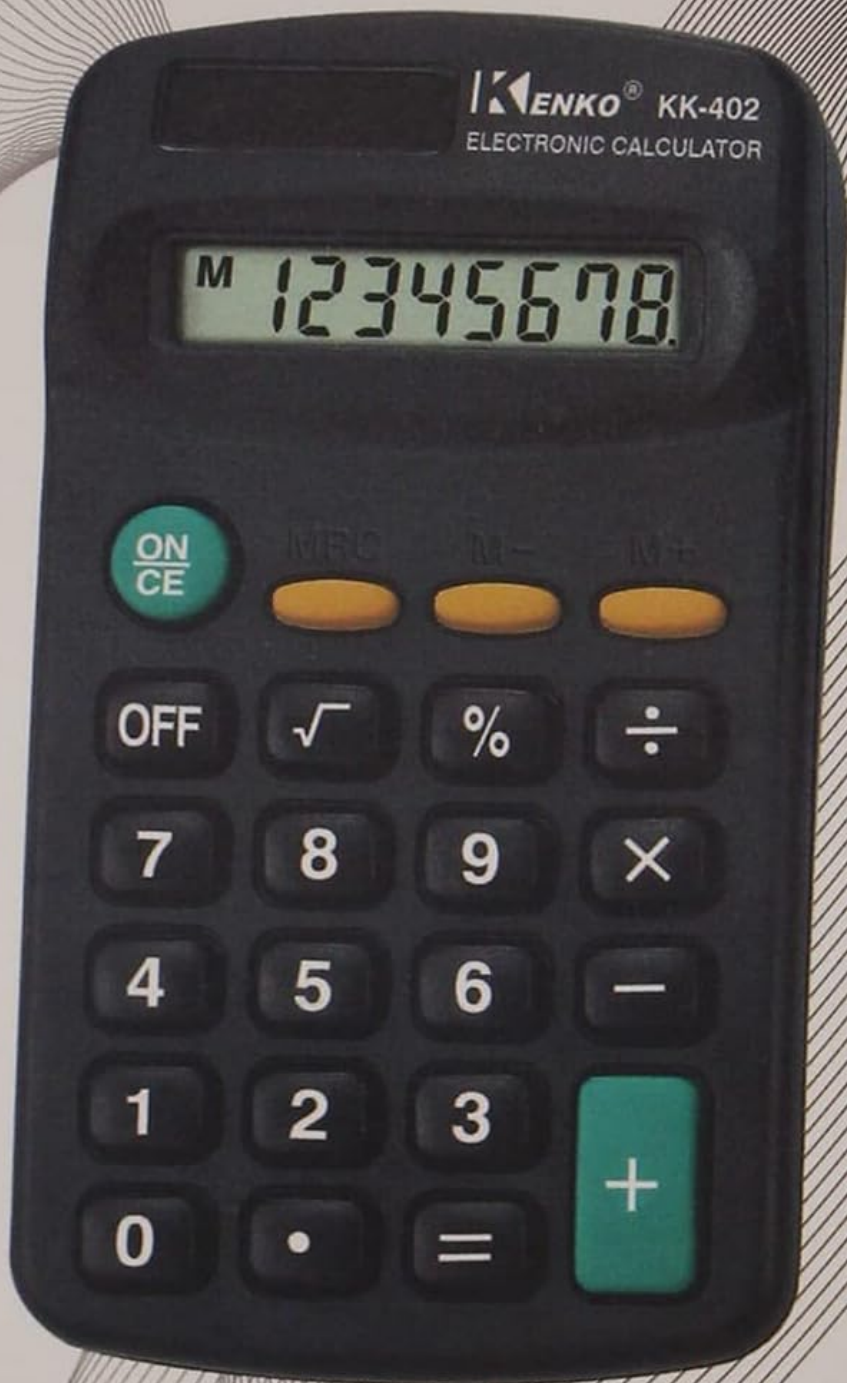

8
DIGITS

AUTO
POWER OFF

**M+ M-
MRC**

%

Image 1.1: The Kenko KK-402 Electronic Calculator. This image displays the calculator's front view, showing its 8-digit LCD display, numeric keypad, and function buttons including ON/CE, OFF, square root, percentage, memory functions (M+, M-, MRC), and basic arithmetic operations.

2. SETUP

2.1. Battery Installation

The Kenko KK-402 calculator is battery-operated. To install or replace batteries:

1. Locate the battery compartment cover on the back of the calculator.
2. Use a small screwdriver (not included) to open the battery compartment.
3. Insert the required batteries (type not specified, typically button cell or AAA) according to the polarity indicators (+/-) inside the compartment.
4. Replace the battery compartment cover and secure it.

Caution: Ensure batteries are inserted correctly. Incorrect installation may damage the device.

2.2. Powering On/Off

- To turn on the calculator, press the **ON/CE** button.
- To turn off the calculator, press the **OFF** button.
- The calculator also features an automatic power-off function to save energy. It will power off after a period of inactivity.

3. OPERATING INSTRUCTIONS

3.1. Basic Arithmetic Operations

Use the numeric keypad (0-9) and the decimal point (.) to enter numbers. Press the corresponding operator button for addition (+), subtraction (-), multiplication (X), or division (÷).

- **Addition:** Enter first number, press +, enter second number, press =.
- **Subtraction:** Enter first number, press -, enter second number, press =.
- **Multiplication:** Enter first number, press X, enter second number, press =.
- **Division:** Enter first number, press ÷, enter second number, press =.

3.2. Clear Functions

- Press **ON/CE** once to clear the last entry. Press it twice to clear all entries and reset the calculator.
- Press **OFF** to turn off the calculator.

3.3. Special Functions

- **Square Root (√):** Enter a number, then press the √ button to calculate its square root.
- **Percentage (%):** Enter a number, press X (or ÷), enter the percentage value, then press %. For example, to calculate 10% of 200, enter 200, press X, enter 10, press %.

3.4. Memory Functions

The calculator includes memory functions to store and recall values.

- **M+:** Adds the displayed value to the memory.

- **M-:** Subtracts the displayed value from the memory.
- **MRC:** Press once to recall the memory value. Press twice to clear the memory.

4. MAINTENANCE

- **Cleaning:** Wipe the calculator with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the calculator in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the calculator will not be used for an extended period, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

Problem	Solution
Display is blank or dim.	Check battery installation. Replace batteries if necessary.
Calculator does not turn on.	Ensure batteries are correctly installed and charged. Press the ON/CE button.
Incorrect calculation results.	Press ON/CE twice to clear all previous operations and memory. Re-enter the calculation.

6. SPECIFICATIONS

- **Model:** KK-402
- **Brand:** Kenko
- **Display:** 8-digit LCD
- **Functions:** Basic arithmetic (addition, subtraction, multiplication, division), square root, percentage, memory (M+, M-, MRC).
- **Power Source:** Battery operated
- **Auto Power Off:** Yes
- **Color:** Black
- **Material Type:** Multiple materials
- **Dimensions:** Approximately 25.6 x 7.8 x 7.6 cm (Package Dimensions)
- **Weight:** Approximately 196 grams (Item Weight)

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the retailer where the product was acquired. Keep your proof of purchase for warranty claims.

