

[manuals.plus](#) /› [Kingston](#) /› [Kingston DataTraveler 70 64GB USB-C Flash Drive User Manual \(DT70/64GBCR\)](#)

Kingston DT70/64GBCR

Kingston DataTraveler 70 64GB USB-C Flash Drive User Manual

1. INTRODUCTION

The Kingston DataTraveler 70 is a portable USB-C flash drive designed for use with compatible USB-C devices such as notebooks, laptops, tablets, and smartphones. It offers USB 3.2 Gen 1 speeds for efficient data transfer and provides expanded storage for everyday use. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your DataTraveler 70 flash drive.

2. PRODUCT OVERVIEW

The DataTraveler 70 features a compact and lightweight design, making it easy to carry. It utilizes a USB-C connector, ensuring compatibility with a wide range of modern devices. This specific model provides a storage capacity of 64GB.



An image showing the Kingston DataTraveler 70 64GB USB-C flash drive. The drive is black, rectangular, with a translucent cap covering the USB-C connector. The Kingston logo is visible on the body.

3. SETUP

The Kingston DataTraveler 70 is a plug-and-play device, meaning no special drivers are required for most operating systems (Windows, macOS, Linux, Android, Chrome OS).

- 1. Locate a USB-C Port:** Identify an available USB-C port on your compatible device (e.g., laptop, tablet, smartphone).
- 2. Insert the Drive:** Carefully insert the DataTraveler 70 flash drive into the USB-C port. Ensure it is fully seated.
- 3. Automatic Detection:** Your operating system should automatically detect the drive and make it accessible. You may receive a notification indicating that a new storage device has been connected and

is ready for use.

4. OPERATING INSTRUCTIONS

Accessing the Drive

Once connected, the drive will appear as a removable storage device. On Windows, it will be listed under 'This PC' or 'My Computer'. On macOS, it will appear on the desktop or in Finder. On mobile devices, it will be accessible through a file management application.

Transferring Files

- **To Copy Files to the Drive:** Open the folder containing the files you wish to transfer. Drag and drop these files or folders directly onto the DataTraveler 70 drive icon or its opened folder.
- **To Copy Files from the Drive:** Open the DataTraveler 70 drive. Select the files or folders you wish to transfer. Drag and drop them to your desired location on your device's internal storage or another connected drive.

Safely Removing the Drive

Always safely eject the flash drive before physically removing it from your device to prevent data corruption or loss.

- **Windows:** Right-click on the drive icon in 'This PC' or the 'Safely Remove Hardware and Eject Media' icon in the taskbar. Select 'Eject [Drive Name]'. Wait for the 'Safe to Remove Hardware' notification before unplugging.
- **macOS:** Drag the drive icon from your desktop to the Trash, or click the Eject button next to the drive name in Finder.
- **Android/Chrome OS:** Look for an 'Eject' or 'Unmount' option within your device's file manager or notification panel for external storage.

5. MAINTENANCE

Proper care ensures the longevity and reliability of your DataTraveler 70 flash drive.

- **Physical Care:** Keep the flash drive clean and free from dust, dirt, and moisture. Avoid exposing it to extreme temperatures or direct sunlight. Do not apply excessive force when inserting or removing the drive.
- **Data Integrity:** Regularly back up important data stored on the flash drive to another secure location. Periodically check the drive for errors using your operating system's built-in disk utility tools (e.g., 'Error Checking' on Windows, 'Disk Utility' on macOS).

6. TROUBLESHOOTING

Drive Not Detected

- Ensure the drive is fully inserted into the USB-C port.
- Try a different USB-C port on your device.
- Test the drive on another compatible device to determine if the issue is with the drive or your original device.
- Restart your computer or mobile device.

Slow Transfer Speeds

- Ensure you are connected to a USB 3.2 Gen 1 (or higher) compatible USB-C port for optimal speeds. Connecting to a USB 2.0 port will result in slower performance.
- Close other applications that might be consuming system resources or performing disk operations.
- Ensure your device's USB drivers are up to date.

Cannot Write Files

- Check if the drive is full. Delete unnecessary files or transfer them to another location to free up space.
- Verify that the files or folders you are trying to write do not have read-only permissions.
- Ensure the drive is not write-protected (this model typically does not have a physical write-protect switch).

7. SPECIFICATIONS

Feature	Detail
Model Name	DT70/64GBCR
Memory Storage Capacity	64 GB
Hardware Interface	USB Type C
Write Speed	100 MB/s
Connectivity Technology	USB
Color	Black
Item Weight	4.2 ounces
Package Dimensions	4.49 x 3.94 x 0.35 inches
UPC	740617305333

8. WARRANTY AND SUPPORT

The Kingston DataTraveler 70 is backed by a 5-year warranty, ensuring peace of mind regarding its quality and performance. Additionally, Kingston provides free technical support to assist with any product-related inquiries or issues.

For technical assistance, warranty claims, or further information, please visit the official Kingston support website or contact their customer service department directly.

Related Documents - DT70/64GBCR

	<p>Kingston Flash Memory Guide: Technologies, Products, and Warranties</p> <p>Explore Kingston's comprehensive guide to Flash memory technologies, including NAND and NOR, SSDs, SD cards, and USB drives. Learn about product features, performance, and warranty information.</p>
	<p>Manual de Usuario Kingston DataTraveler Vault Privacy 3.0</p> <p>Guía completa para el Kingston DataTraveler Vault Privacy 3.0 (DTVP 3.0). Aprenda a configurar, usar y solucionar problemas en Windows, macOS y Linux para su unidad USB segura.</p>
	<p>Kingston DataTraveler Vault Privacy 3.0 User Manual</p> <p>Comprehensive user manual for the Kingston DataTraveler Vault Privacy 3.0 USB flash drive, covering installation, initialization, usage, and troubleshooting for Windows, macOS, and Linux operating systems. Includes system requirements, security features, and command-line operations.</p>
	<p>Kingston Limited Product Warranty Statement</p> <p>Comprehensive warranty details for Kingston memory and storage products, covering terms, conditions, exclusions, and support for various product lines including SSDs, RAM, and USB drives.</p>
	<p>IronKey Locker Plus 50 User Manual - Secure USB 3.2 Gen 1 Flash Drive</p> <p>User manual for the Kingston IronKey Locker Plus 50 (LP50) secure USB 3.2 Gen 1 flash drive. Learn about features, setup, password protection, and troubleshooting.</p>
	<p>Kingston Limited Warranty Policy</p> <p>Comprehensive details on Kingston's limited warranty policy, including warranty periods, coverage, exclusions, and claim procedures for memory modules, SSDs, and other Kingston products.</p>