

## EVVO V0050

# EVVO Mini D Trip 2 Portable Dishwasher User Manual

Model: V0050 | Brand: EVVO

## 1. INTRODUCTION

Thank you for choosing the EVVO Mini D Trip 2 Portable Dishwasher. This compact and versatile appliance is designed for small spaces, offering convenience and efficient dishwashing. Please read this manual carefully before using the appliance to ensure safe and optimal operation. Keep this manual for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This includes:

- Read all instructions before use.
- Ensure the appliance is properly grounded.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Supervise children closely when the appliance is in use.
- Do not operate the dishwasher if it has a damaged cord or plug, or if it is not working properly.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Keep children away from detergent and rinse aid.
- Do not open the door during operation to avoid hot water spray.
- Always ensure the drain hose is properly secured to prevent leaks.

## 3. PRODUCT FEATURES

- **Compact Design:** Ideal for small kitchens, dorms, RVs, or offices.
- **Flexible Installation:** Operates with or without direct water connection. Features a 6-liter internal water tank

for manual filling.

- **Automatic Door Opening:** The door automatically opens at the end of the cycle to facilitate extra drying and prevent moisture buildup.
- **Anti-Humidity System:** An integrated air circulation system helps eliminate humidity and odors, ensuring dishes and the interior remain dry.
- **Multiple Wash Programs:** Includes 6 programs: HYGIENE 72°, INTENSIVE, ECO, GLASS, 58 MIN, RAPID, and SELF-CLEAN.
- **Delay Start:** All programs are programmable up to 24 hours in advance.
- **3 Place Settings Capacity:** Designed to accommodate dishes for up to 3 people.

## 4. WHAT'S IN THE BOX

---

Upon unpacking, ensure all items are present:

- EVVO Mini D Trip 2 Dishwasher
- Internal Dish Rack
- Cutlery Basket
- Water Inlet Hose
- Drain Hose
- Water Pitcher (for manual filling)
- User Manual

## 5. SETUP

---

### 5.1 Unpacking and Placement

Carefully remove the dishwasher from its packaging. Place the appliance on a stable, level surface, such as a countertop or tabletop. Ensure there is adequate space around the unit for ventilation and door opening. The compact dimensions are approximately 46.5 cm (Height) x 42 cm (Width) x 43.5 cm (Depth).

## Lavavajillas Mini D Trip 2

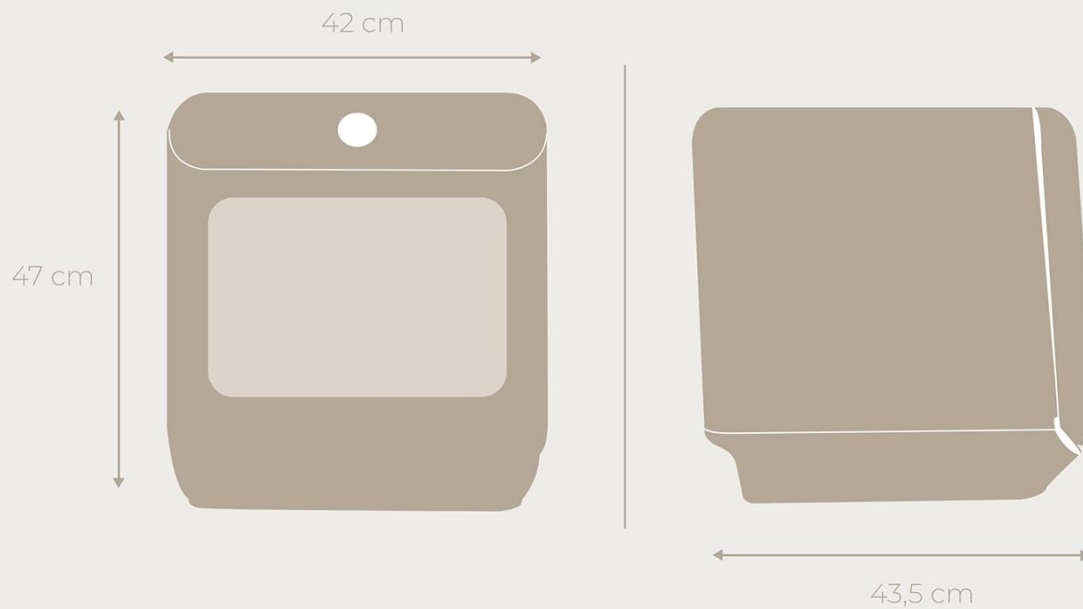


Figure 1: Dishwasher Dimensions (Height x Width x Depth)

### 5.2 Water Connection Options

The EVVO Mini D Trip 2 offers two convenient water supply methods:

#### 5.2.1 Manual Water Filling (No Installation Required)

This method is ideal for portability and situations without a direct water hookup. Simply open the water inlet cap on top of the dishwasher and pour approximately 6 liters of water using the provided pitcher. The dishwasher has a sensor to indicate when the tank is full or empty.



Figure 2: Manual Water Filling Port

### 5.2.2 Direct Water Connection (Optional)

For a more permanent setup, you can connect the dishwasher to a water tap using the inlet hose. Refer to the detailed instructions in the full manual for specific plumbing requirements.



### 5.3 Drain Hose Connection

Connect the drain hose to the designated outlet at the back of the dishwasher. Ensure the hose is securely attached and directed into a sink or a suitable drainage point. The drain hose should not be positioned higher than the dishwasher itself to allow for proper water flow.

### 5.4 Power Connection

Plug the power cord into a grounded electrical outlet (220 Volts).

Your browser does not support the video tag.

Video 1: EVVO Mini D Trip Dishwasher Setup and Operation. This video demonstrates the loading of dishes, manual water filling, and starting a wash cycle.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Control Panel Overview

The dishwasher features an intuitive control panel with touch buttons for power, program selection, and start/pause functions. The digital display shows the remaining cycle time.

# 6 programas automáticos

No solo lava sino que también esteriliza y posee un modo de secado.



Figure 4: Control Panel with Program Indicators

## 6.2 Loading the Dishwasher

Before loading, scrape off any large food particles from your dishes. Place plates, bowls, and cutlery in the designated racks. Ensure items do not block the spray arms or detergent dispenser.



Figure 5: Dishwasher Interior Loaded with 3 Place Settings

### 6.3 Adding Detergent and Rinse Aid

Add the appropriate amount of dishwasher detergent to the dispenser. If desired, fill the rinse aid dispenser for improved drying and shine.

### 6.4 Selecting a Wash Program

The EVVO Mini D Trip 2 offers 6 wash programs:

1. **HYGIENE 72°:** For heavily soiled items requiring high-temperature sanitization.
2. **INTENSIVE:** For heavily soiled dishes and pots.
3. **ECO:** An energy-efficient program for normally soiled dishes.
4. **GLASS:** Gentle wash for delicate glassware.
5. **58 MIN:** A quick wash cycle for lightly soiled dishes.
6. **RAPID:** The fastest cycle for very lightly soiled items.
7. **SELF-CLEAN:** For cleaning the dishwasher interior.

Press the 'Mode' button to cycle through the available programs until your desired program is selected.

## 6.5 Starting a Cycle

After selecting the program and ensuring water and detergent are added, press the 'Start/Pause' button to begin the wash cycle. The display will show the remaining time.

## 6.6 Extra Drying Function

The dishwasher features an automatic door opening at the end of the cycle to enhance drying performance. This allows steam to escape and air to circulate, resulting in drier dishes.

# 7. MAINTENANCE

---

## 7.1 Cleaning the Filters

Regularly clean the filter system located at the bottom of the dishwasher to ensure optimal performance and prevent blockages. Twist and remove the filter assembly, rinse it under running water, and remove any trapped food particles. Reassemble and secure the filters properly.

## 7.2 Cleaning the Spray Arms

Check the spray arm nozzles for any blockages. If necessary, remove the spray arms and clean the holes with a thin wire or toothpick.

## 7.3 Exterior and Interior Cleaning

Wipe the exterior of the dishwasher with a soft, damp cloth. For the interior, use a damp cloth and a mild detergent. Run the 'SELF-CLEAN' program periodically to maintain hygiene.

# 8. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Program not selected.	Check power connection; Ensure door is latched; Select a program and press Start.
Dishes are not clean	Improper loading; Clogged spray arms; Insufficient detergent; Incorrect program.	Reload dishes correctly; Clean spray arms; Add more detergent; Select a more intensive program.
Water not draining	Clogged drain filter; Kinked drain hose.	Clean drain filter; Straighten drain hose.
Dishwasher leaks	Loose hose connections; Excessive detergent.	Check and tighten all hose connections; Use correct amount of detergent.
Unpleasant odor	Food residue in filter; Infrequent cleaning.	Clean filters thoroughly; Run SELF-CLEAN program.

For more complex issues, please contact customer support.

# 9. SPECIFICATIONS

---

Feature	Detail
Model Name	V0050
Product Dimensions (H x W x D)	46.5 x 42 x 43.5 cm
Product Weight	25 Kilograms
Voltage	220 Volts
Water Consumption (ECO program)	6 Liters
Number of Wash Programs	6
Place Settings	3
Noise Level	58 Decibels
Installation Type	Freestanding
Interior Material	Plastic
EU Spare Parts Availability	10 Years
Recommended Uses	Small spaces, dormitories, apartments, offices, RVs

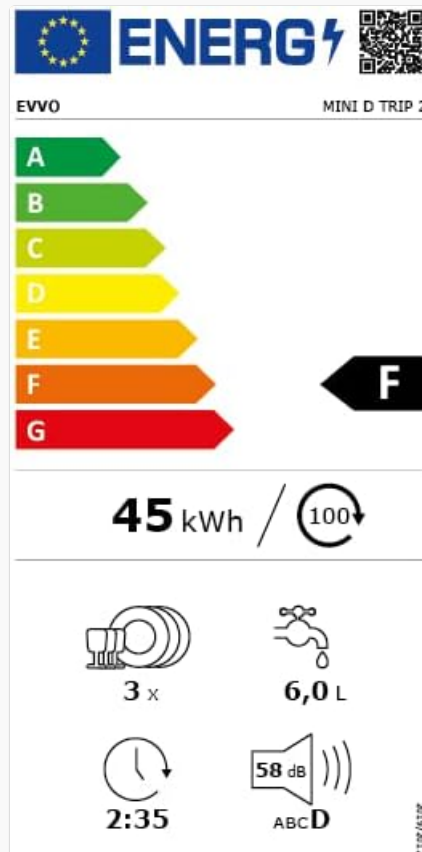


Figure 6: Energy Efficiency Label (Rating F)

## 10. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the contact details provided in your product packaging or visit the official EVVO website. Keep your proof of purchase for warranty claims.

