



Manuals.plus /

› Tamagotchi /

› Tamagotchi Pix - Sky (Purple) User Manual

Tamagotchi 42902

Tamagotchi Pix - Sky (Purple) Instruction Manual

Brand: Tamagotchi | **Model:** 42902

INTRODUCTION

The Tamagotchi Pix is the newest generation of your favorite interactive virtual pet, featuring a sky design and purple shell. For the first time ever, the Tamagotchi device includes a camera and touch buttons! While maintaining its core Tamagotchi attributes of nurturing, communication, portability, and gaming, your virtual pet is better than ever. Use the camera to help nurture your character by cooking its meals, customizing different items, exploring to find 100 Tamagotchi friends, and so much more. Plus, you can even take pictures WITH your Tamagotchi character! The new touch buttons allow you to interact with your character in ways like never before. You can also connect with your friend's Tamagotchi Pix using a Tama code, and even plan character play dates for a later time. This device is suitable for ages 6 and up.

WHAT'S IN THE BOX

- Tamagotchi Pix Electronic Pet

SETUP

Battery Installation

The Tamagotchi Pix requires two AAA batteries (not included). Locate the battery compartment on the back of the device. Use a small screwdriver to open the compartment, insert the batteries according to the polarity indicators, and securely close the cover.



Image: Back of the Tamagotchi Pix showing the battery compartment.

Initial Power On

Once batteries are installed, press the top button on the device to power it on. The screen will light up, and you can begin your Tamagotchi adventure.



Image: Front of the Tamagotchi Pix, ready for use.

Product Overview Video

Your browser does not support the video tag.

Video: A 360-degree view of the Tamagotchi Pix Sky device, showcasing its design and features.

OPERATING INSTRUCTIONS

Basic Navigation

The Tamagotchi Pix features three touch buttons located below the screen. The left and right buttons are used to navigate through menus and options, while the center button is used to select or confirm actions. A gentle tap or swipe is sufficient for interaction.

Nurturing Your Tamagotchi

- **Feeding:** Access the 'Feed' menu to provide meals from the fridge, visit a restaurant, or cook new dishes for your character.
- **Playing:** Engage your Tamagotchi in various games, such as 'Hula Hoop' or 'Matching', to earn Gotchi Points and keep them happy.
- **Bathroom & Cleaning:** Ensure your Tamagotchi's hygiene by taking them to the bathroom and cleaning their living space.



Image: Tamagotchi Pix screen displaying a character in its room.

Using the Camera

The Tamagotchi Pix includes a built-in camera. To take a photo, navigate to the camera option in the

menu. You can choose to take pictures 'Outside' or 'Inside'. Press the top button to capture the image. Photos are saved to an album on the device.



Image: Child using the Tamagotchi Pix camera feature.

Connecting with Friends

You can connect your Tamagotchi Pix with a friend's device using a Tama code. This allows for character play dates, exchanging gifts, and exploring together, enhancing the social interaction aspect of the game.



Image: Two Tamagotchi Pix devices connected for playdates.

Product Features Demonstration

Your browser does not support the video tag.

Video: A demonstration of various Tamagotchi Pix features, including interaction and gameplay.

MAINTENANCE

Cleaning

To clean your Tamagotchi Pix, gently wipe the device with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials, as these may damage the screen or casing.

Battery Care

For optimal performance and longevity, consider using high-quality rechargeable AAA batteries. Remove

batteries if the device will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

If your Tamagotchi Pix experiences issues, first check the battery installation and ensure batteries are charged. For persistent problems, refer to the official Tamagotchi support resources. Common issues may include rapid battery drain, which can often be mitigated by using rechargeable batteries or adjusting screen brightness settings.

SPECIFICATIONS

Feature	Detail
Product Dimensions	2.4"L x 1.5"W x 2.8"H
Platform	Electronic Game
Controller Type	Push Button
Item Weight	0.19 Kilograms (6.7 ounces)
Power Source	Battery Powered
Age Range (Description)	Kid, Adult (Manufacturer recommended: 6 years and up)
Battery Description	Lithium-Ion or Lithium (Requires 2 AAA batteries)
Display Type	LCD
Material	Plastic
Form Factor	Handheld
UPC	045557429027
Item model number	42902
Release date	December 3, 2021
Manufacturer	Bandai

SAFETY INFORMATION

CHOKING HAZARD - Small parts. Not for children under 3 years.

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Tamagotchi website or contact Bandai America Inc. directly. A comprehensive user manual in PDF format is also available for download: [User Manual \(PDF\)](#).

