

[Manuals.plus](#) /

› [Sharper Image](#) /

› Sharper Image AROMA 2 Ultrasonic Humidifier with Aromatherapy User Manual

Sharper Image HU1-0081-43

Sharper Image AROMA 2 Ultrasonic Humidifier with Aromatherapy

Model: HU1-0081-43



INTRODUCTION

The Sharper Image AROMA 2 Ultrasonic Humidifier with Aromatherapy is designed to enhance your living environment by humidifying the air and providing a soothing aromatherapy experience. Its ultrasonic technology ensures quiet operation and a filter-less design, making it easy to maintain. The unit features multiple mist settings, a customizable ambient light with 7 color options, and a convenient timer function for personalized comfort.

Key Features

- **Ultrasonic Technology:** Filter-less and whisper-quiet humidification for allergies, sinus relief, coughs, dry skin, and improved sleep.
- **Built-in Aromatherapy:** Add essential oils directly to the water for a custom, multi-sensory experience (essential oils not included).
- **Personal Humidification:** 0.23-gallon water tank provides up to 0.76 gallons of output over 24 hours, ideal for desks, nightstands, or tabletops.
- **Auto Shut-Off:** Illuminated power button flashes red when water is low, then automatically powers off the humidifier.
- **Ambient Light:** Choose from 7 color options to add a soothing glow, with 2, 4, or 6-hour timer settings.

SETUP GUIDE

Unpacking

Carefully remove all components from the packaging. Ensure you have the humidifier unit and the owner's guide. Inspect the unit for any damage before proceeding.

Filling the Water Tank

To fill the water tank, first ensure the unit is unplugged. Remove the top cover of the humidifier. Fill the water tank with clean, cool tap water up to the maximum fill line. Do not overfill. For aromatherapy, add a few drops of your preferred

essential oil directly into the water. Replace the top cover securely before plugging in the unit.



Image: The Sharper Image AROMA 2 Ultrasonic Humidifier, ready for use.



Image: Close-up view of the control panel with power, timer, and light buttons.

OPERATING INSTRUCTIONS

Power On/Off

Plug the humidifier into a standard 120V AC outlet. Press the power button () once to turn the unit on. Press it again to turn the unit off. The illuminated power button will indicate the unit's status.

Mist Settings

The humidifier offers two cool mist settings: High (H) and Low (L). When the unit is on, press the mist button (often integrated with the power button or a separate button next to it, indicated by H/L lights) to cycle between high and low mist output. The corresponding indicator light will illuminate.

Aromatherapy Function

To utilize the aromatherapy feature, add a few drops of your desired essential oil directly into the water tank when filling.

The ultrasonic technology will diffuse the essential oil along with the mist, creating a pleasant aroma in your space. Ensure to use only water-soluble essential oils to prevent damage to the unit.



Image: An essential oil drop falling into the humidifier, illustrating the aromatherapy feature.

Ambient Light Control

The humidifier features a soothing ambient light with 7 color options. Press the light button (*) to cycle through the different colors or to set it to a specific color. Press and hold the light button to turn the ambient light off while the humidifier continues to operate.



Image: The humidifier glowing with a blue ambient light, showcasing its color options.

Timer Settings

The unit includes a timer function for 2, 4, or 6 hours of continuous operation. Press the timer button () to select your desired operating duration. The corresponding indicator light (2, 4, or 6) will illuminate. The humidifier will automatically shut off once the selected time has elapsed.

CARE AND MAINTENANCE

Cleaning the Unit

Regular cleaning is essential to maintain optimal performance and hygiene. The manufacturer recommends hand wiping the unit clean. Always unplug the humidifier before cleaning. Do not immerse the base in water. Wipe down the exterior with a soft, damp cloth. For the water tank, rinse it thoroughly and wipe away any mineral buildup. Allow all parts to air dry completely before reassembling or storing.

Storage

When not in use for an extended period, ensure the humidifier is clean and completely dry. Store it in a cool, dry place away from direct sunlight and extreme temperatures. Keep it in its original packaging if possible to protect it from dust and damage.

TROUBLESHOOTING

If you encounter any issues with your Sharper Image AROMA 2 Humidifier, please refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
No mist or low mist output.	Low water level; mineral buildup on transducer; unit not level.	Refill water tank; clean transducer with a soft brush; ensure unit is on a flat, stable surface.
Unit does not turn on.	Power cord not properly connected; no power from outlet.	Check power cord connection; try a different electrical outlet.
Ambient light is too bright for nighttime use.	Default light intensity.	Press and hold the light button to turn off the ambient light while the humidifier continues to operate. Consider placing the unit in a less direct line of sight or in a location where the light is less disruptive.
Difficulty cleaning the unit.	Mineral deposits or residue.	Regularly hand wipe clean the unit. For stubborn mineral deposits, use a solution of white vinegar and water, then rinse thoroughly.

PRODUCT SPECIFICATIONS

Specification	Detail
Brand	Sharper Image
Model Name	AROMA 2
Model Number	HU1-0081-43
Product Dimensions	5.9"D x 5.9"W x 9.3"H
Item Weight	16 ounces (1 pound)
Water Tank Capacity	0.23 Gallons
Daily Output	Up to 0.76 Gallons (over 24 hours)
Voltage	120 Volts
Wattage	12 watts
Control Method	Touch
Room Type	Kids Room, Office, Bedroom, Living Room, Dining Room

Specification	Detail
Color	White

WARRANTY AND SUPPORT

Warranty Information

This Sharper Image AROMA 2 Ultrasonic Humidifier is covered by a **1-year manufacturer's warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

Important International Disclaimer: This item is built to meet U.S. voltage requirements and may not function properly when used in conjunction with external devices that alter or convert voltage or frequency of electricity. Improper use or shipping the product outside the U.S. will void all warranties.

Contact Support

For technical assistance, warranty service, or to purchase replacement parts, please contact Sharper Image customer support. Refer to the contact information provided in your original product packaging or visit the official Sharper Image website.

You can also refer to the official user manual PDF for more detailed information [Download User Manual \(PDF\)](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08XWMTCW3>

More documents and user manuals: <https://manuals.plus/>