

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Tamagotchi](#) /

› [Tamagotchi Original - 90s Digital Pet Instruction Manual](#)

Tamagotchi 42881

Tamagotchi Original - 90s Digital Pet

MODEL: 42881

INTRODUCTION

The Tamagotchi Original - 90s is a handheld digital pet that requires care and attention. This manual provides instructions for setting up, operating, and maintaining your Tamagotchi device.

The device includes original programming and characters, allowing users to feed, clean, play with, and discipline their virtual pet. The way you care for your Tamagotchi influences its growth and development.

What's Included:

- Tamagotchi Original - 90s device
- 1 CR2032 battery (pre-installed)

GETTING STARTED

Battery Installation and Activation

Your Tamagotchi device comes with a pre-installed CR2032 battery. To activate the device, pull the plastic tab extending from the battery compartment. The device will then power on.



Image: Front view of the Tamagotchi Original - 90s device.

Setting the Time

After activation, you will need to set the current time. Use the 'A' button to cycle through numbers and the 'B' button to confirm your selection. The 'C' button can be used to cancel or go back.

BASIC OPERATION

The Tamagotchi device features three buttons: A, B, and C. These buttons are used to navigate menus and interact with your digital pet.

BAN
DAI

the original
TAMAGOTCHI

8+

Asst.
#42800



Take Care
of Me!



Play
CHARACTER
Game!



Feed Me!

the original virtual reality pet

WARNING: Contains button or coin cell battery. Hazardous if swallowed. See instructions.

WARNING: CHOKING HAZARD-
Small parts. Not for children under 3 years.

the original
TAMAGOTCHI

Image: Back of the product packaging showing button functions and screen icons.

Button Functions:

- **A Button:** Selects menu options or cycles through choices.
- **B Button:** Confirms a selection or performs an action.
- **C Button:** Cancels an action or returns to the previous screen.

Screen Icons and Actions:

Navigate through the icons using the 'A' button and select with the 'B' button to perform actions for your Tamagotchi:

- **Feed:** Select to give your Tamagotchi a meal or a snack.
- **Lights:** Turn lights on or off when your Tamagotchi falls asleep or wakes up.
- **Game:** Play a character game to increase happiness.
- **Medicine:** Administer medicine if your Tamagotchi becomes sick.
- **Flush:** Clean up after your Tamagotchi uses the bathroom.
- **Health:** Check your Tamagotchi's health status, including age, weight, hunger, and happiness levels.
- **Discipline:** Discipline your Tamagotchi if it misbehaves or calls for attention when its needs are met.

Checking Your Tamagotchi's Status:

To check your Tamagotchi's current status (age, weight, hunger, happiness, discipline), repeatedly press the 'A' button until the scale icon appears. Press 'B' to select it. You can then cycle through the different status screens using the 'A' button. Press 'C' to exit the status screen.

Your browser does not support the video tag.

Video: A 360-degree view of the Tamagotchi Original - 90s device, showcasing its design and features from all angles.

MAINTENANCE

Cleaning

To clean your Tamagotchi device, gently wipe it with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the device or screen.

Battery Replacement

When the battery runs low, the screen may dim or the device may stop responding. To replace the CR2032 battery, locate the battery compartment on the back of the device. Use a small screwdriver to open the compartment, remove the old battery, and insert a new CR2032 battery with the positive (+) side facing up. Securely close the compartment.

TROUBLESHOOTING

Common Issues:

- **Constant Beeping:** Your Tamagotchi is calling for attention. Check its status (hunger, happiness, discipline) and address its needs.
- **Tamagotchi is Sick:** If a skull icon appears, your Tamagotchi is sick. Select the medicine icon and administer treatment.
- **Screen is Blank:** The battery may be dead or the device may need to be reset. Replace the battery or use a pointed object to press the reset button (usually a small recessed button on the back).

- **Tamagotchi Dies:** If your Tamagotchi passes away, you can restart the game by pressing the reset button.

SPECIFICATIONS

Model Number	42881
Brand	Tamagotchi
Power Source	Battery Powered (1 CR2032 included)
Display Type	LCD
Form Factor	Handheld
Dimensions (L x W x H)	1.75" x 0.75" x 2.13"
Weight	0.63 Ounces
Material Type	Plastic
Age Range Description	6-99 years

SAFETY INFORMATION

CHOKING HAZARD: Small parts. Not for children under 3 years. Keep batteries out of reach of small children.

WARRANTY AND SUPPORT

For information regarding product warranty or technical support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt as proof of purchase.