

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Samsung](#) /

› [Samsung SWA-9100S Wireless Rear Speaker Kit User Manual](#)

Samsung SWA-9100S

Samsung SWA-9100S Wireless Rear Speaker Kit User Manual

Model: SWA-9100S



1. INTRODUCTION

The Samsung SWA-9100S Wireless Rear Speaker Kit is designed to enhance your home entertainment experience by adding wireless surround sound to compatible Samsung soundbars. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your speaker kit.

Important Note: This speaker kit is compatible with select 2020 and 2021 Samsung soundbar models. Please verify compatibility with your specific soundbar model before proceeding with installation.

2. WHAT'S IN THE BOX

Carefully unpack all components and ensure the following items are present:

- Wireless Receiver Module
- Left Rear Speaker (1 unit)
- Right Rear Speaker (1 unit)
- Speaker Cables (2 units)
- Power Cable for Wireless Receiver



Figure 2.1: Front view of the Samsung SWA-9100S Wireless Rear Speaker Kit components, including the two satellite speakers and the wireless receiver module.

3. SETUP

3.1 Component Overview

Familiarize yourself with the wireless receiver and the two rear speakers. The wireless receiver connects to power and the rear speakers, then wirelessly communicates with your compatible Samsung soundbar.



Figure 3.1: Angled view of the Samsung SWA-9100S Wireless Rear Speaker Kit components, showing the two satellite speakers and the wireless receiver module from a slight angle.

3.2 Connecting the Rear Speakers to the Wireless Receiver

1. Identify the left (L) and right (R) speaker terminals on the back of the wireless receiver module.
2. Connect the provided speaker cables to the corresponding terminals on the rear speakers and the wireless receiver. Ensure correct polarity (red to red, black to black) for optimal sound performance.





Figure 3.2: Rear view of the Samsung SWA-9100S Wireless Rear Speaker Kit components, displaying the speaker wire terminals on the satellite speakers and the power input, speaker outputs, and reset button on the wireless receiver module.

3.3 Powering the Wireless Receiver

1. Connect the power cable to the wireless receiver module.
2. Plug the power cable into a wall outlet. The STANDBY indicator light on the receiver should illuminate.

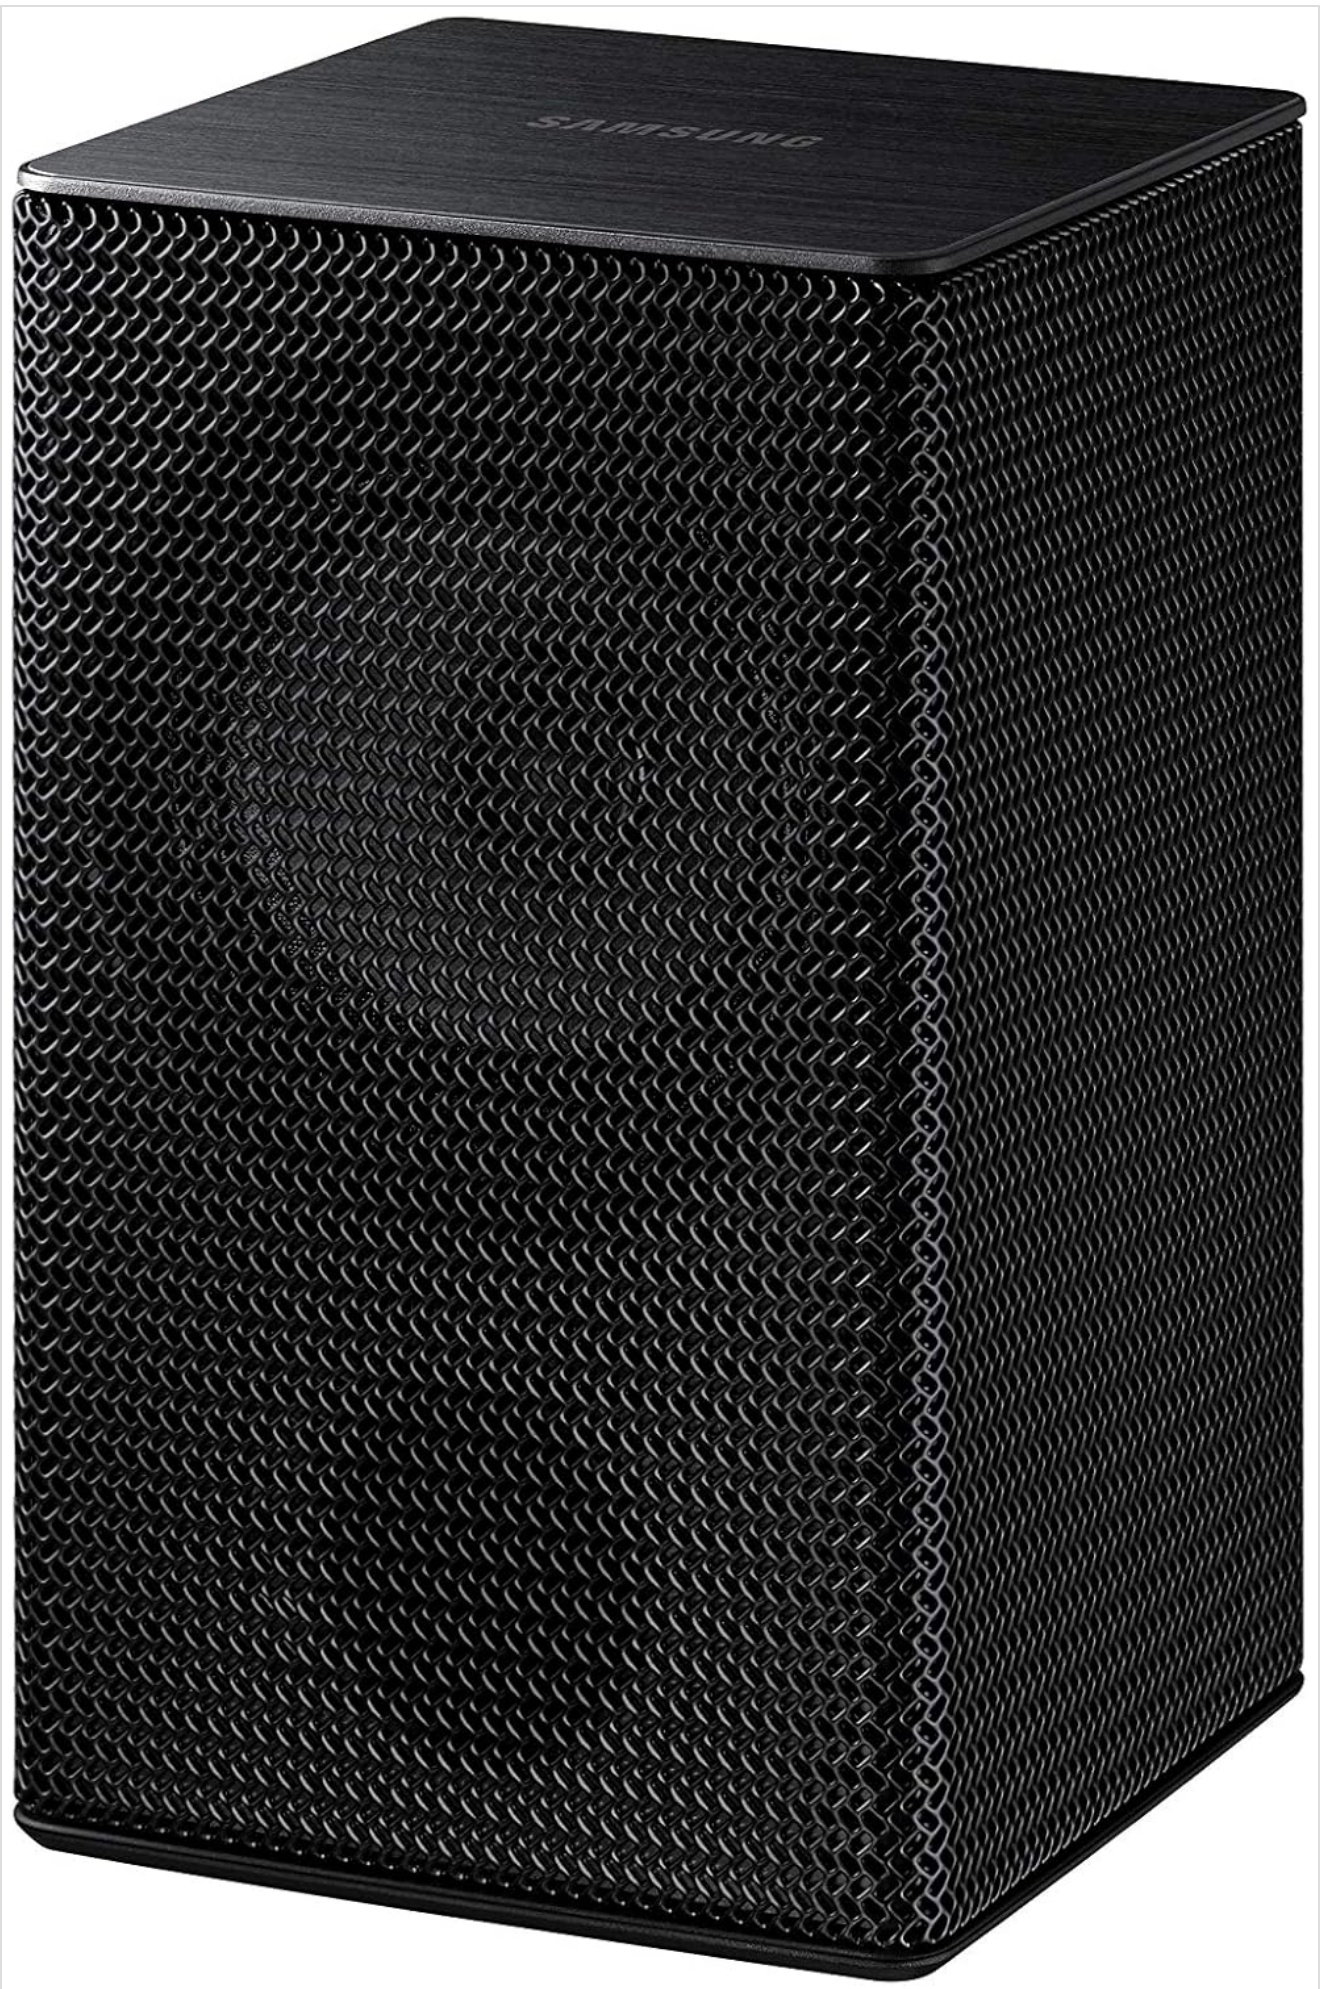



Figure 3.3: Side view of the wireless receiver module for the Samsung SWA-9100S, highlighting the "STANDBY" and "LINK" indicator lights.

3.4 Pairing with Your Samsung Soundbar

The wireless receiver will automatically attempt to link with a compatible Samsung soundbar when powered on. If the LINK indicator light is solid blue, the connection is successful. If the LINK indicator blinks blue, manual pairing may be required:

1. Ensure your Samsung soundbar is powered on.
2. On your soundbar's remote control, navigate to the sound settings.
3. Locate the option for 'Rear Speakers' or 'RS'.
4. Follow the on-screen prompts or soundbar manual instructions to initiate pairing. You may need to press and hold a specific button on the soundbar remote or the wireless receiver (e.g., a 'RESET' button on the receiver, if available, as shown in Figure 3.2).
5. Once paired, the LINK indicator on the wireless receiver will turn solid blue.

Speakers only compatible with select Samsung soundbars*

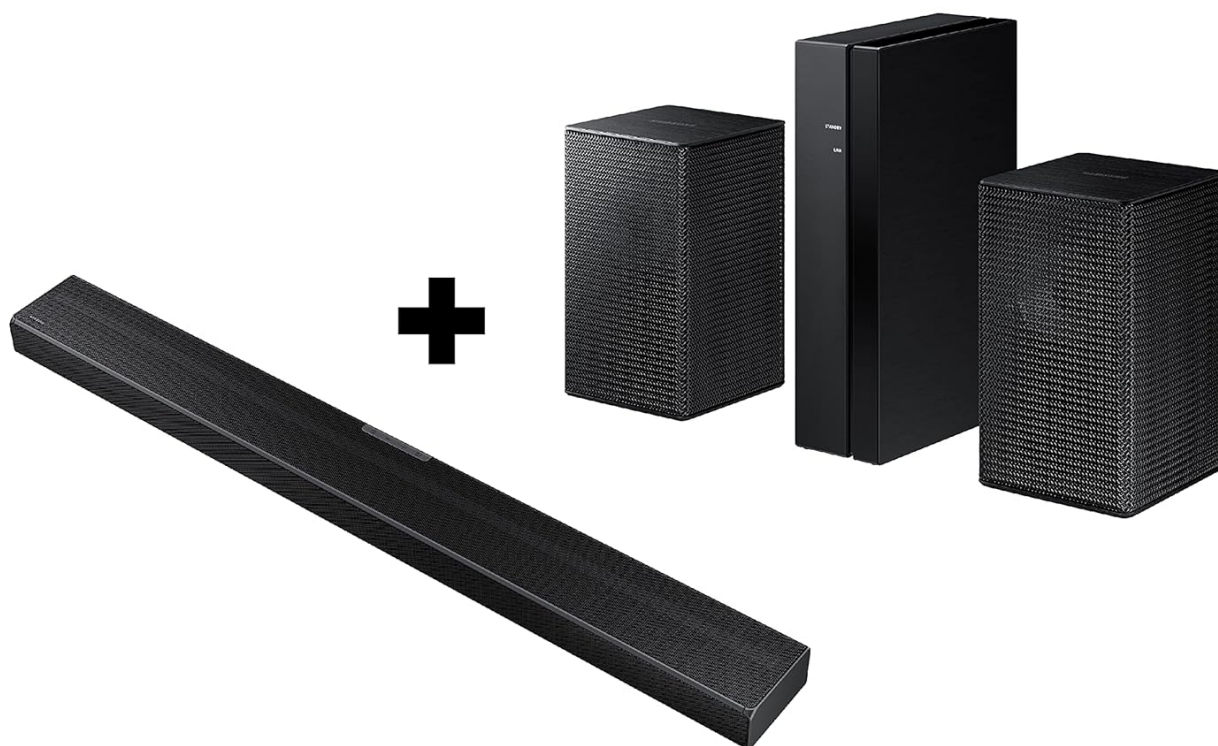

***Soundbars sold separately**

Figure 3.4: This diagram illustrates the Samsung SWA-9100S Rear Speaker Kit connected to a compatible Samsung soundbar (soundbar sold separately), demonstrating the complete surround sound setup.

4. OPERATING THE SPEAKER KIT

4.1 Basic Operation

Once successfully paired, the rear speakers will automatically receive audio signals from your soundbar, providing a surround sound experience. Audio output from the rear speakers is dependent on the audio source and the sound mode selected on your soundbar.

4.2 Adjusting Rear Speaker Volume

If the rear speaker volume appears low, you can adjust it through your soundbar's settings:

1. Using your soundbar's remote control, press the **Settings** button repeatedly until 'Rear Speakers' appears on the soundbar's display.
2. Press and hold the **Settings** button again. The display should change to 'Rear Level'.
3. Use the **Up** or **Down** arrow buttons on your remote to increase or decrease the rear speaker volume level. Adjust to your preferred listening level.

4.3 Sound Modes

The performance of the rear speakers can be influenced by the sound mode selected on your soundbar. Experiment with modes such as **SURROUND**, **GAME**, or **ADAPTIVE SOUND** to find the optimal audio experience for different content types.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Samsung SWA-9100S Wireless Rear Speaker Kit, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to gently wipe the surfaces of the speakers and wireless receiver. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the finish or internal components.
- **Placement:** Place the speakers on stable, flat surfaces to prevent accidental falls. Ensure adequate ventilation around the wireless receiver to prevent overheating.
- **Environmental Conditions:** Avoid exposing the speakers and receiver to extreme temperatures, direct sunlight, high humidity, or dusty environments. Keep them away from sources of water or other liquids.
- **Cables:** Periodically check speaker and power cables for any signs of wear or damage. Replace damaged cables immediately to prevent electrical hazards or performance issues.

6. TROUBLESHOOTING

If you encounter issues with your speaker kit, refer to the following troubleshooting steps:

6.1 No Sound from Rear Speakers

- **Check Power:** Ensure the wireless receiver is plugged into a working power outlet and the STANDBY light is on.
- **Check Link Status:** Verify that the LINK indicator on the wireless receiver is solid blue. If it's blinking, re-attempt the pairing process (refer to Section 3.4).
- **Check Speaker Connections:** Confirm that the speaker cables are securely connected to both the rear speakers and the wireless receiver, with correct polarity.
- **Adjust Volume:** Ensure the rear speaker volume level is not set to minimum or muted via your soundbar's settings (refer to Section 4.2).

- **Soundbar Settings:** Confirm that your soundbar's audio output is configured for surround sound or a compatible sound mode.

6.2 Crackling or Intermittent Sound

- **Speaker Cables:** Inspect the speaker cables for damage or loose connections. Consider using higher quality speaker wire if issues persist, as some included wires may be susceptible to interference.
- **Interference:** Move the wireless receiver away from other wireless devices (e.g., Wi-Fi routers, cordless phones) that might cause interference.
- **Distance:** Ensure the wireless receiver is within the recommended operating range of your soundbar (typically up to 10 meters).

6.3 Pairing Failure

- **Soundbar Compatibility:** Double-check that your soundbar model is listed as compatible with the SWA-9100S kit.
- **Reset Receiver:** If available, press the 'RESET' button on the back of the wireless receiver (refer to Figure 3.2) using a thin, pointed object, then re-attempt pairing.
- **Power Cycle:** Turn off both the soundbar and the wireless receiver, unplug them from power for a few minutes, then plug them back in and power them on to try pairing again.

7. SPECIFICATIONS

Feature	Specification
Model Number	SWA-9100S/ZA
Speaker Type	Satellite
Surround Sound Channel Configuration	2.0
Product Dimensions (each speaker)	3.4"D x 3.4"W x 5.78"H
Item Weight (each speaker)	1.5 Pounds
Wireless Communication Technology	Bluetooth
Bluetooth Range	Up to 10 Meters (33 feet)
Color	Black
UPC	887276524597

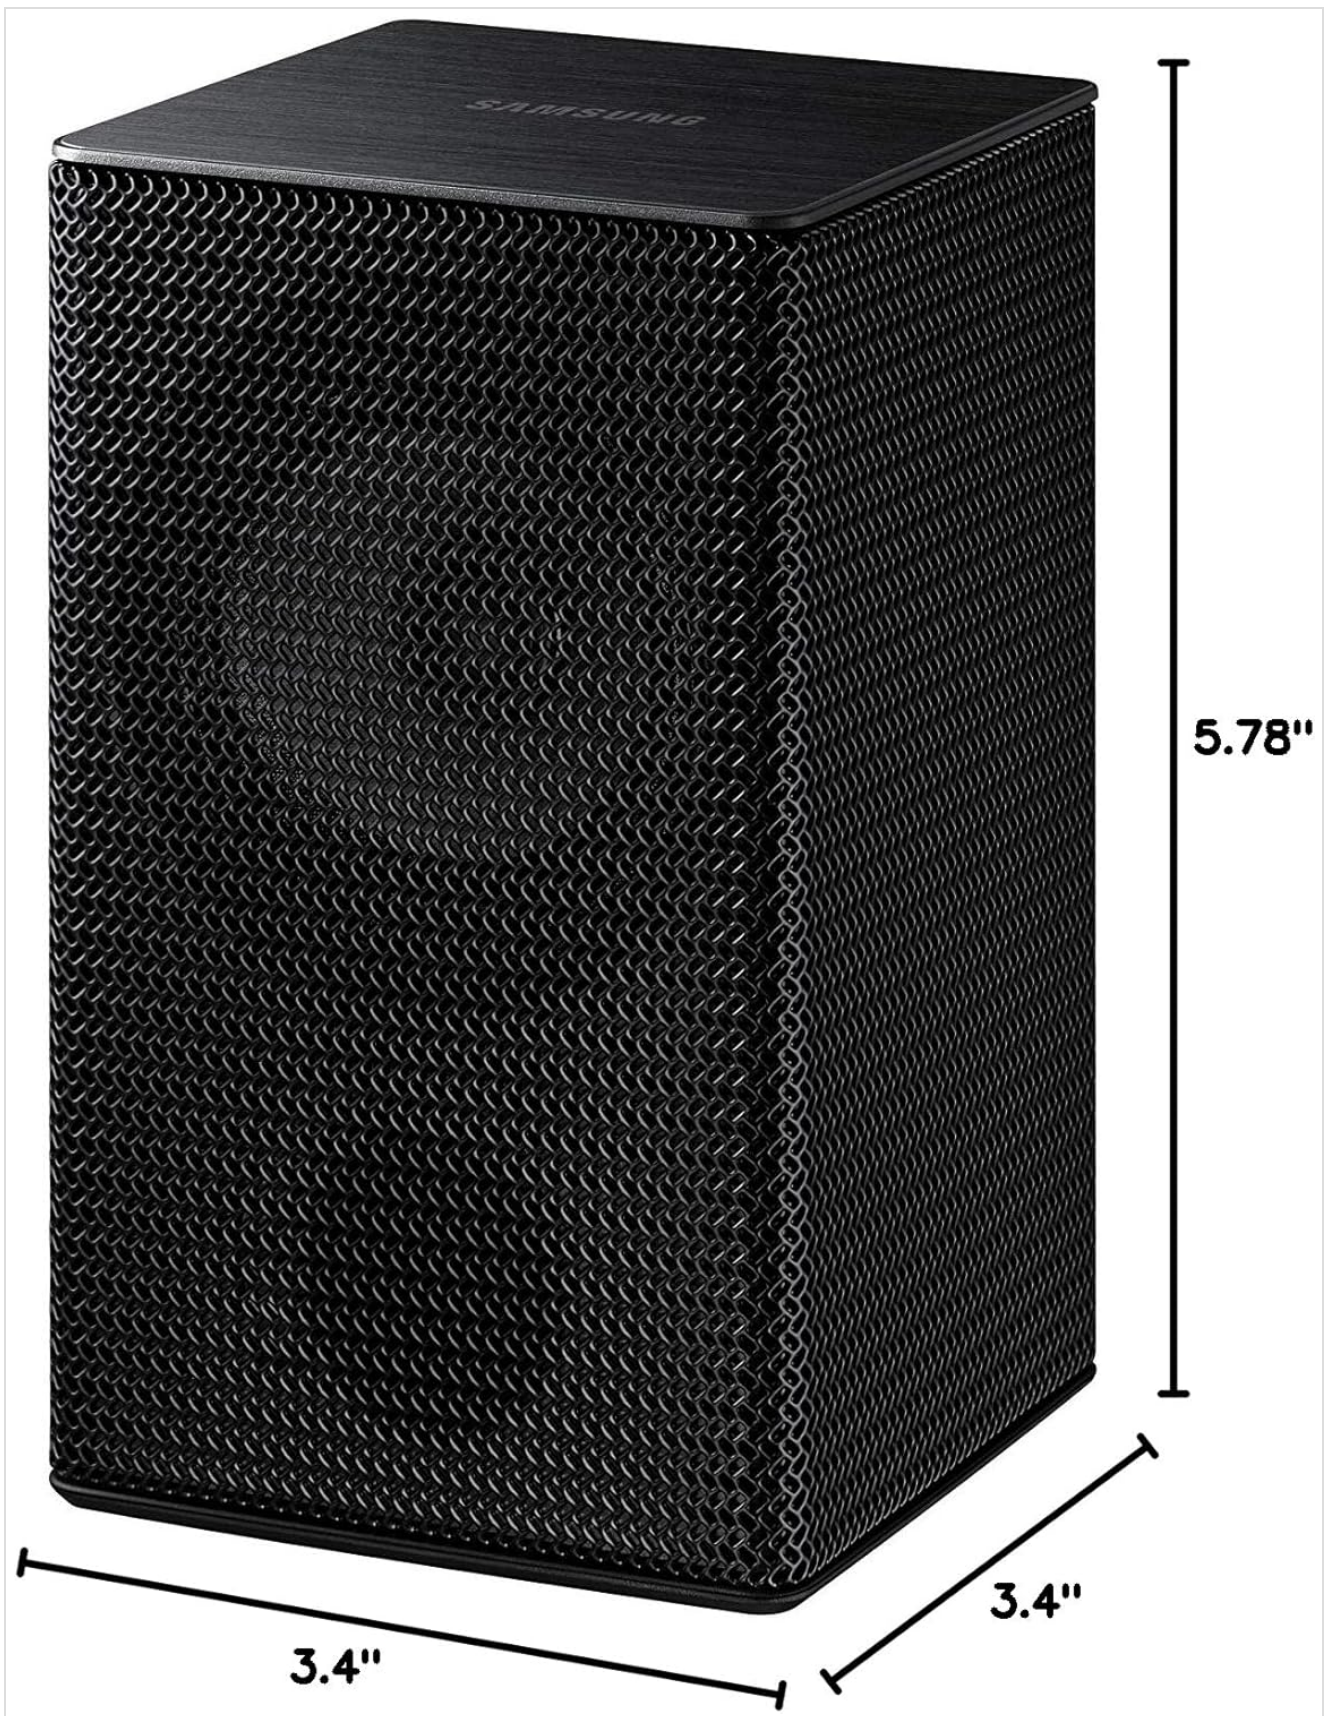 


Figure 7.1: Dimensional view of a Samsung SWA-9100S satellite speaker, indicating its height (5.78"), depth (3.4"), and width (3.4").

8. WARRANTY INFORMATION

This Samsung SWA-9100S Wireless Rear Speaker Kit comes with a **Limited Warranty**. For detailed information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Samsung website for your region. Proof of purchase may be required for warranty claims.

9. SUPPORT

For further assistance, technical support, or service inquiries, please contact Samsung Customer Service through one of the following methods:

- **Online Support:** Visit the official Samsung support website (www.samsung.com/us/support/ or your regional equivalent).
- **Phone Support:** Refer to your product documentation or the Samsung website for local customer service telephone numbers.
- **Service Center:** Locate an authorized Samsung service center near you via the official website.

When contacting support, please have your product model number (SWA-9100S) and serial number ready.

