

Hasbro RXZER23

G.I. Joe Classified Series Scarlett Action Figure

Model: RXZER23

INTRODUCTION

This manual provides comprehensive instructions for the Hasbro G.I. Joe Classified Series Scarlett Action Figure, Model RXZER23. It covers essential information regarding the product's features, setup, operation, maintenance, and important safety guidelines. Please read this manual thoroughly to ensure proper handling and enjoyment of your action figure.

PRODUCT OVERVIEW

The Scarlett action figure is a highly detailed 6-inch scale collectible from the G.I. Joe Classified Series. This figure features multiple points of articulation for dynamic posing and comes with character-inspired accessories. The design incorporates a subdued color scheme, offering a unique variant of the classic Scarlett character.

- **Scale:** 6-inch action figure.
- **Articulation:** Multiple points for extensive poseability.
- **Accessories:** Includes Scarlett's iconic crossbow and other character-specific items.
- **Design:** Classic Scarlett-inspired design with a modern, subdued color scheme.

SETUP

The Scarlett action figure comes pre-assembled and ready for display or play. Follow these steps for initial setup:

1. Carefully remove the action figure and all included accessories from its packaging.
2. Inspect the figure and accessories for any visible damage or manufacturing defects.
3. No additional assembly is required. The figure is ready for posing and interaction.

OPERATING THE FIGURE

The G.I. Joe Classified Series Scarlett figure is designed for dynamic display and imaginative play. Its premium articulation allows for a wide range of poses.

- **Posing:** Gently manipulate the figure's joints (shoulders, elbows, wrists, hips, knees, ankles) to achieve desired stances. Avoid excessive force to prevent damage. Some extreme poses may require external support to maintain balance.

- **Accessory Attachment:** The included crossbow and other accessories are designed to fit into the figure's hands or attach to specific points on the figure's body. Ensure accessories are securely placed to prevent them from falling during display or play.

MAINTENANCE

Proper care will help preserve the condition and appearance of your Scarlett action figure.

- **Cleaning:** Use a soft, dry cloth to gently wipe away dust and dirt. For stubborn marks, a slightly damp cloth with plain water can be used, followed by immediate drying.
- **Storage:** Store the figure away from direct sunlight, high humidity, and extreme temperatures, which can cause discoloration or material degradation.
- **Avoid Chemicals:** Do not use harsh cleaning agents, solvents, or abrasive materials, as these can damage the paint finish or plastic.

TROUBLESHOOTING

If you encounter minor issues with your action figure, consider the following:

- **Stiff Joints:** If a joint is stiff or difficult to move, gently warm the area with warm (not hot) water for a few seconds. This can help soften the plastic, making the joint easier to articulate. Do not force stiff joints.
- **Loose Joints:** For slightly loose joints, a small amount of clear nail polish or a specialized joint-tightening fluid can be applied to the joint and allowed to dry. Apply sparingly.
- **Accessory Fit:** Ensure accessories are aligned correctly before attempting to attach them. Do not force accessories into place if they do not fit easily.

SPECIFICATIONS

Brand Name	Hasbro
Toy Figure Type	Action Figure
Character	Scarlett
Model Name	F53595L00
Model Number	RXZER23
Scale	6 Inch
Item Dimensions (L x W x H)	9" x 3" x 6"
Item Weight	0.23 Pounds
Number of Pieces	1 (figure)
Material Type	Plastic
Manufacturer Minimum Age	14 Months
Manufacturer Maximum Age	70 Months

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. This product contains small components that may pose a choking hazard. It is not suitable for children under 3 years of age. Adult supervision is recommended during play, especially with younger children, to prevent accidental ingestion of small parts.

PRODUCT IMAGES



Image 1: The Scarlett action figure in a dynamic pose, holding a firearm, with three small knives displayed separately on the ground. The figure wears a gold, blue, and red uniform.



Image 2: The Scarlett action figure posed as if climbing a textured wall, holding her signature crossbow. The background suggests an industrial or combat environment.



Image 3: The Scarlett action figure standing upright, holding her crossbow in a ready position. The figure's detailed uniform and articulation are visible.



Image 4: The Scarlett action figure in a dynamic action pose, aiming her crossbow. The pose highlights the figure's articulation and detailed design.

WARRANTY AND SUPPORT

This Hasbro G.I. Joe Classified Series Scarlett Action Figure is covered by a Manufacturer's Warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the official Hasbro website or contact Hasbro customer support directly. Keep your proof of purchase for any warranty claims.

Manufacturer: Hasbro

Warranty Description: Manufactures Warranty

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question