

W-KING X10

W-KING X10 Portable Bluetooth Speaker Instruction Manual

Model: X10 | Brand: W-KING

1. INTRODUCTION

Thank you for choosing the W-KING X10 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. The W-KING X10 delivers powerful 120W peak sound with deep bass, features IPX6 waterproofing, and offers versatile connectivity options for an immersive audio experience.

2. WHAT'S IN THE BOX

- X10 Portable Outdoor Bluetooth Speaker
- Type-C Charging Cable
- 3.5mm AUX Audio Cable
- User Manual

3. PRODUCT OVERVIEW & FEATURES

The W-KING X10 is engineered for robust audio performance and durability. Key features include:

- **Powerful Audio:** 120W peak output (70W RMS) with 2*45W subwoofers and 2*15W tweeters, enhanced by triple passive radiators for deep bass and DSP intelligent crossover technology for clear sound up to 40kHz.
- **Omnidirectional HD Stereo:** Designed to fill any space with rich, balanced audio.

- **IPX6 Waterproof:** Resistant to strong water jets, making it suitable for outdoor use. Ports must be covered to ensure water resistance.
- **Extended Playtime:** Up to 42 hours of playtime on a single charge (varies with volume and content).
- **Power Bank Function:** Large capacity battery allows charging of external devices via the USB-A port.
- **Multiple Playback Modes:** Bluetooth 5.0, 3.5mm AUX input, and TF card slot.
- **EQ Modes:** Switch between Indoor mode (boosted bass) and Outdoor mode (crisp sound).
- **True Wireless Stereo (TWS):** Connect two X10 speakers for a 240W peak, immersive stereo experience.
- **Durable Design:** Sturdy ABS plastic, translucent soft rubber, and waterproof mesh surface for impact resistance.
- **Portable:** Includes a detachable, adjustable shoulder strap for easy transport.



Detailed internal view of the W-KING X10 speaker, highlighting its dual subwoofers, tweeters, and passive radiators.

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge your W-KING X10 speaker. Connect the provided Type-C charging cable to the speaker's Type-C port and a compatible 5V/2A adapter (not included). The battery indicator lights will show charging progress. A full charge takes approximately 3.5 hours.



The W-KING X10 speaker connected to a power source for charging, demonstrating its large battery capacity.

4.2 Power On/Off

- **To Power On:** Press and hold the **Power button** () for 2-3 seconds until the indicator lights illuminate.
- **To Power Off:** Press and hold the **Power button** () for 2-3 seconds until the indicator lights turn off.

4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and the Bluetooth indicator light is flashing, indicating it's in pairing mode.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "W-KING X10" from the list of devices.
4. Once connected, the Bluetooth indicator light will remain solid.

4.4 True Wireless Stereo (TWS) Pairing

For an enhanced stereo experience, you can pair two W-KING X10 speakers together. (Note: X10 and X10-1 models cannot be paired together.)

1. Ensure both W-KING X10 speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be your primary speaker), press the **TWS button** (often indicated by three dots or a chain link icon). The speaker will enter TWS pairing mode.
3. The primary speaker will automatically search for and connect to the secondary speaker.
4. Once paired, the TWS indicator light on both speakers will become solid.
5. Now, connect your mobile device to the primary speaker via Bluetooth as described in section 4.3.

5. OPERATING INSTRUCTIONS

5.1 Control Buttons



Top panel of the W-KING X10 speaker with illuminated control buttons.

Button	Function
(Power)	Press and hold to Power On/Off. Short press to check battery status.
- (Volume Down)	Short press to decrease volume. Press and hold for previous track.
▶ (Play/Pause)	Short press to Play/Pause music. Short press to Answer/End calls. Press and hold to Reject calls.
+ (Volume Up)	Short press to increase volume. Press and hold for next track.
☰ (EQ Mode)	Short press to switch between Indoor (boosted bass) and Outdoor (crisp sound) EQ modes.
... (TWS)	Press to enter TWS pairing mode (for connecting two X10 speakers).

5.2 Connectivity Options

- **Bluetooth 5.0:** Wireless connection with up to 100ft range.
- **AUX Input:** Connect external audio devices using the 3.5mm AUX audio cable.

- **TF Card:** Insert a TF card into the slot for direct music playback.



The rear panel of the W-KING X10 speaker, revealing the USB-A, Type-C, TF card, and AUX ports, protected by a waterproof flap.

5.3 EQ Modes

Optimize your listening experience by switching between two EQ modes:

- **Indoor Mode:** Delivers boosted bass, ideal for enclosed spaces.
- **Outdoor Mode:** Provides crisp, clear sound, optimized for open environments.

EXPERIENCE **HI-FI SOUND** ANYTIME, ANYWHERE!

Bring this Bluetooth speaker outdoors and captivate everyone with its sleek portability and waterproof construction!



The W-KING X10 speaker demonstrating its adaptability to different environments with dedicated EQ modes.

6. MAINTENANCE

To ensure the longevity and optimal performance of your W-KING X10 speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, damp cloth to wipe the speaker's surface. Avoid using harsh chemicals or abrasive cleaners.
- **Water Resistance:** The speaker is IPX6 waterproof. Ensure all port covers are securely closed before exposing it to water. Do not submerge the speaker directly in water.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in constant use.



The W-KING X10 speaker demonstrating its IPX6 waterproof capability, suitable for outdoor environments.

7. TROUBLESHOOTING

If you encounter issues with your W-KING X10 speaker, refer to the following common solutions:

- **No Power:** Ensure the battery is charged. Connect the speaker to a power source using the Type-C cable.
- **Cannot Pair via Bluetooth:**
 - a. Ensure the speaker is in pairing mode (flashing Bluetooth indicator).
 - b. Disable and re-enable Bluetooth on your device.
 - c. Move the speaker closer to your device.
 - d. Clear the Bluetooth device list on your phone and try pairing again.
- **No Sound:**
 - a. Check the volume levels on both the speaker and your connected device.
 - b. Ensure the correct input mode (Bluetooth, AUX, TF card) is selected.
 - c. If using AUX, ensure the cable is fully inserted and functional.
- **TWS Pairing Failure:**
 - a. Ensure both speakers are W-KING X10 models (X10 and X10-1 are not compatible for TWS).
 - b. Make sure both speakers are not connected to any other Bluetooth devices.
 - c. Place speakers close to each other during pairing.

8. SPECIFICATIONS

Feature	Specification
Brand	W-KING
Model Number	X10
Speaker Maximum Output Power	120 Watts (Peak)
Frequency Response	40000 Hz
Connectivity Technology	Bluetooth, Wireless, 3.5mm AUX, TF CARD
Audio Output Mode	Stereo
Water Resistance Level	IPX6 Waterproof
Bluetooth Range	30.48 Meters (100 Feet)
Battery Average Life	42 Hours (Playtime may vary depending on volume and audio content)
Battery Charge Time	3.5 Hours
Item Dimensions D x W x H	5.31"D x 12.41"W x 5.5"H
Item Weight	3.37 Kilograms



Detailed dimensions of the W-KING X10 Portable Bluetooth Speaker.

9. WARRANTY & SUPPORT

Your W-KING X10 Portable Bluetooth Speaker comes with a **30-day replacement policy** and a **12-month warranty**. For support or warranty claims, please refer to the contact information provided in your product packaging or visit the W-KING official website.