Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- roborock /
- proborock Main Brush Cover Replacement for S7, S7+, Q7, Q7+, Q7 Max, Q7 Max+ Robotic Vacuums (Type F, White)

roborock S7 Main Brush Cover

roborock Main Brush Cover Replacement for S7, S7+, Q7, Q7+, Q7 Max, Q7 Max+ Robotic Vacuums (Type F, White)

1. OVERVIEW

This manual provides instructions for the roborock Main Brush Cover, Type F, designed for optimal performance and protection of your robotic vacuum cleaner. This replacement part ensures efficient cleaning and extends the lifespan of your device.

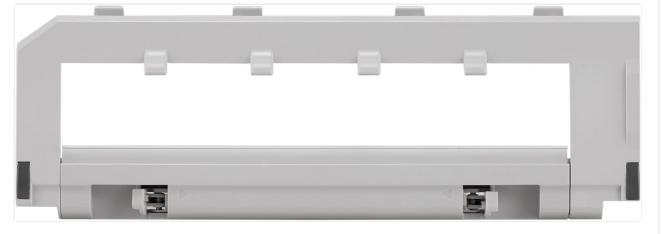


Image 1: The roborock Main Brush Cover, Type F, in white.

2. COMPATIBILITY

The roborock Main Brush Cover (Type F) is compatible with the following robotic vacuum cleaner models:

- Roborock S7
- Roborock S7+
- Roborock Q7
- Roborock Q7+
- Roborock Q7 Max



Image 2: Visual representation of the roborock Main Brush Cover and its compatible robotic vacuum models.

3. Installation and Replacement

Replacing the main brush cover is a hassle-free process that requires no special tools. Follow these steps to replace your old cover with a new one:

- 1. Turn off your robotic vacuum cleaner and place it upside down on a clean, flat surface.
- 2. Locate the main brush cover, which is typically secured by two latches.
- 3. Press the latches to release the old brush cover.
- 4. Carefully remove the old brush cover.
- 5. Align the new roborock Main Brush Cover (Type F) with the designated slot on the vacuum.
- 6. Press down firmly until you hear a click, indicating that the cover is securely latched into place.
- 7. Ensure the protective pads on the cover are properly seated to prevent scraping.

Hassle-Free Replacement

No tools are required. Our roller brush cover can be easily disassembled and replaced to maintain optimal performance.



Image 3: A hand demonstrating the replacement of the main brush cover on a roborock vacuum.

Video: Brush Back Cover Replacement

Your browser does not support the video tag.

Video 1: A demonstration of how to replace the brush back cover for Roborock S7 and S7 MaxV series.

4. MAINTENANCE

To maintain optimal performance of your robotic vacuum, the main brush cover should be cleaned regularly, in sync with the main brush. This prevents debris buildup and ensures efficient operation.

- Remove the main brush cover as described in the installation steps.
- Wipe the cover with a damp cloth to remove any dust or hair.
- Ensure the cover is completely dry before reattaching it to the vacuum.

Clean Regularly

Clean often, in sync with the main brush.



Image 4: The roborock Main Brush Cover being rinsed with water for cleaning.

5. PROTECTIVE DESIGN

The main brush cover features protective pads designed to prevent the cover from scraping against hard floors. This design helps to avoid damage to both the cover and your flooring, contributing to better cleaning results.

Protective Design Protective pads prevent the cover from scraping against the hard floor and causing damage.

Image 5: An illustration highlighting the protective pads on the roborock Main Brush Cover.

6. SPECIFICATIONS

Feature	Detail
Manufacturer	roborock
Product Dimensions	8.27 x 2.91 x 0.83 inches
Item Weight	2.89 ounces
Model Number	S7 Main Brush Cover
Color	White
Style	Main Brush Cover - Type F



Image 6: Detailed dimensions of the roborock Main Brush Cover.

7. TROUBLESHOOTING

If you encounter any issues after replacing the main brush cover, please ensure it is correctly installed and securely latched. Refer to the installation steps in Section 3. If problems persist, consult your robotic vacuum's main instruction manual or contact roborock customer support.

8. WARRANTY AND SUPPORT

For information regarding product warranty or to access customer support, please refer to the documentation included with your original roborock robotic vacuum cleaner or visit the official roborock website.

