

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal Includeo Electric Kettle 1L, Model KI533811 - User Manual

Tefal KI5338

Tefal Includeo Electric Kettle 1L

Model: KI533811

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using your Tefal Includeo electric kettle and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the kettle, power base, cord, or plug in water or any other liquid.
- This appliance is intended for household use only. Do not use outdoors.
- Ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Always place the kettle on a stable, flat, heat-resistant surface, away from hot surfaces or open flames.
- Do not operate the kettle if the power cord or plug is damaged, or if the kettle malfunctions or has been damaged in any way. Contact an authorized service center.
- Keep the appliance and its cord out of reach of children.
- Do not overfill the kettle beyond the 'MAX' mark to prevent boiling water from spilling.
- Always ensure the lid is securely closed before operating.
- Unplug the kettle from the power outlet when not in use and before cleaning.
- The surfaces of the kettle become hot during use. Avoid contact with hot parts. Use the handle.
- Only use the kettle with the power base provided.

2. PRODUCT OVERVIEW

The Tefal Includeo electric kettle is designed for ease of use and convenience, featuring an ergonomic handle, clear water level indicators, and a 360° rotational base.



This image displays the Tefal Includeo Electric Kettle, model KI533811, in black. It highlights the compact design with dimensions of 16.6 cm in width and 20 cm in height. The kettle has a 1-liter maximum capacity, clearly visible on the water level window.

Key Features:

- **Ergonomic Handle:** Designed for a comfortable and secure grip.
- **Dual Water Level Windows:** Clear markings in liters and cups for precise filling.
- **Large Push-Button Lid:** Facilitates easy opening for filling and cleaning.
- **Illuminated On/Off Switch:** Clearly indicates when the kettle is operating.
- **Removable Anti-Scale Filter:** Ensures clean water and easy maintenance.
- **360° Rotational Base:** Allows for flexible placement and easy lifting.
- **Automatic Shut-off:** For safety and energy efficiency.

3. SETUP AND FIRST USE

1. **Unpack:** Carefully remove the kettle and all accessories from the packaging.
2. **Clean:** Before first use, fill the kettle with water to the 'MAX' level. Boil the water and then discard it. Repeat this process twice to ensure the kettle is clean.
3. **Position:** Place the power base on a dry, stable, and flat surface. Ensure the power cord is not dangling or in contact with hot surfaces.

4. OPERATING INSTRUCTIONS

4.1 Filling the Kettle

1. Remove the kettle from its power base.
2. Press the large push-button on the lid to open it.
3. Fill the kettle with the desired amount of water. Observe the water level windows to ensure the water is between the 'MIN' and 'MAX' marks.



2 FENÊTRES DE NIVEAU D'EAU TRANSPARENTES AVEC LARGES GRADUATIONS

Niveau d'eau lisible, remplissage facile



A detailed view of the kettle's two transparent water level windows. These windows feature large, easy-to-read graduations in both liters (0.3L, 0.5L, 0.7L, 1L MAX) and cups (1, 2, 3, 4 cups), facilitating precise filling.

4. Close the lid firmly until it clicks into place.

4.2 Boiling Water

1. Place the filled kettle securely onto its 360° rotational power base.



BASE ROTATIVE 360°

Rangement sur le plan de travail facilité




This image illustrates the kettle's 360° rotational power base. The design allows the kettle to be placed on its base from any angle, providing ease of use for both left and right-handed users and flexible positioning on any countertop.

2. Plug the power cord into a suitable wall outlet.
3. Press the illuminated on/off switch located on the handle downwards to start the boiling process. The indicator light will illuminate.



LARGE BOUTON ON/OFF Avec indicateur lumineux

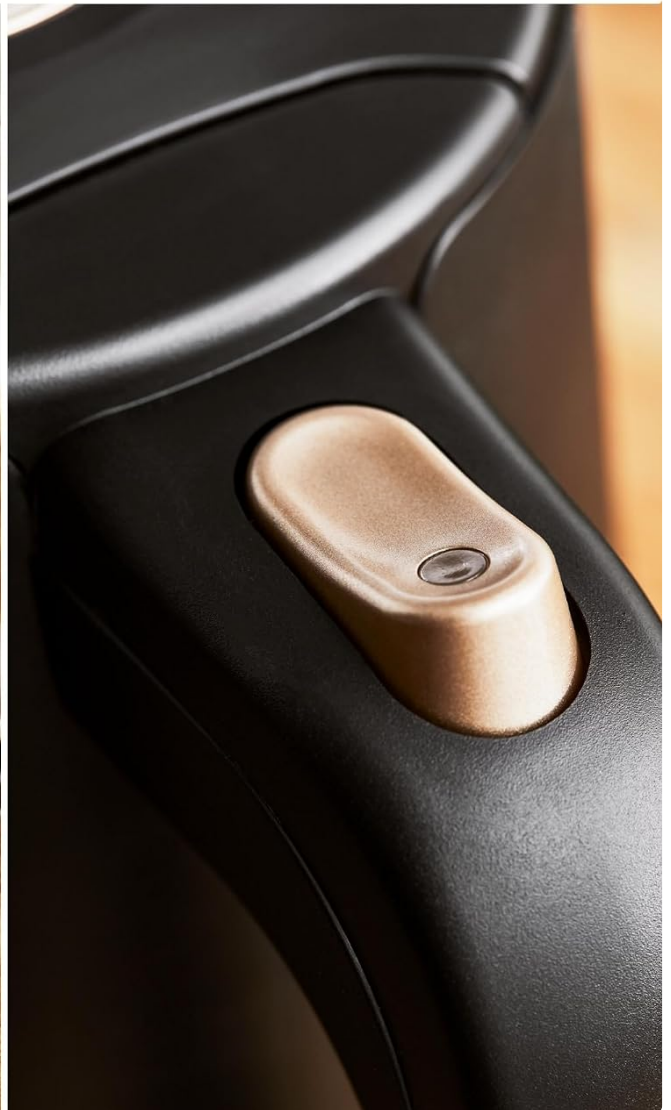

A close-up of the large on/off button located on the kettle's handle. This button features an integrated light indicator, which illuminates when the kettle is actively heating water.

4. The kettle will automatically switch off once the water has boiled, and the indicator light will turn off.

4.3 Pouring

Carefully lift the kettle from its base using the ergonomic handle. The precise spout design allows for controlled pouring. Exercise caution as the kettle and its contents will be hot.



POIGNÉE ERGONOMIQUE ÉLARGIE

Prise en main facilitée



This image shows the kettle's large, ergonomic handle, designed for a comfortable and secure grip, making pouring easier and safer.

5. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your kettle and ensure optimal performance.

5.1 Exterior Cleaning

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

5.2 Anti-Scale Filter Cleaning

1. Open the lid using the push-button.



LARGE BOUTON POUSSOIR

Ouverture du couvercle facilitée, sur simple pression



This image demonstrates the easy lid opening mechanism. A simple press on the large central button on the lid automatically opens it, allowing for convenient filling and cleaning.

2. Locate the anti-scale filter inside the spout. Gently pull it upwards to remove it.



FILTRE ANTI-CALCAIRE AMOVIBLE

Pour une eau toujours propre et un nettoyage facile



The image shows the removable anti-scale filter being taken out of the kettle. This filter helps ensure clean water and is easy to remove for regular cleaning and descaling.

3. Rinse the filter under running water and brush off any scale deposits.
4. Reinsert the filter by sliding it back into its slot until it clicks into place.

5.3 Descaling

Scale buildup can affect the kettle's performance and lifespan. Descale your kettle regularly, especially in hard water areas.

- Use a commercially available descaling solution suitable for kettles, following the manufacturer's instructions.
- Alternatively, you can use a mixture of white vinegar and water (1 part vinegar to 2 parts water). Fill the kettle with the solution, boil it, and let it stand for at least 30 minutes (or longer for heavy scale).
- After descaling, empty the kettle and rinse it thoroughly several times with fresh water to remove any residue. Boil fresh water and discard it twice before using the kettle for beverages.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not turn on.	No power supply; Kettle not properly seated on base; On/off switch not pressed.	Check power outlet; Ensure kettle is correctly placed on the base; Press the on/off switch firmly.
Water is not boiling.	Kettle not plugged in; On/off switch not activated; Faulty power outlet.	Check power connection; Activate the on/off switch; Try a different power outlet.
Water leaks from the lid.	Lid not closed properly; Kettle overfilled.	Ensure the lid is securely closed; Do not fill above the 'MAX' mark.
Excessive scale buildup.	Hard water usage; Infrequent descaling.	Descale the kettle regularly as per Section 5.3.

7. SPECIFICATIONS

- **Model Number:** KI5338
- **Capacity:** 1 Litre
- **Power:** 2400 Watts
- **Voltage:** 120 Volts
- **Material:** Plastic
- **Color:** Black
- **Dimensions (L x W x H):** 23.3 cm x 16.6 cm x 20 cm
- **Special Features:** Low water level sensor, push-button lid, removable filter, water level indicator, automatic on/off.

8. WARRANTY AND SUPPORT

Tefal is committed to providing high-quality products. This product benefits from a 15-year reparability commitment at a fair price, supported by our network of 6200 repairers worldwide. This initiative aims to contribute to environmental protection and waste reduction.

For any questions, issues, or to inquire about repairs, please contact Tefal customer service or visit the official Tefal website for support information specific to your region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08XZ6ZBYH>

More documents and user manuals: <https://manuals.plus/>