

## Oneconcept MNW4-2500-EcoPicoB

# Oneconcept Ecowash Pico Portable Washing Machine User Manual

Model: MNW4-2500-EcoPicoB

Brand: Oneconcept

## 1. INTRODUCTION

---

Thank you for choosing the Oneconcept Ecowash Pico Portable Washing Machine. This compact and energy-efficient appliance is designed for small loads, delicate garments, and situations where space is limited, such as apartments, dorms, RVs, or camping. Please read this manual thoroughly before operation to ensure safe and efficient use of your new washing machine.

## 2. SAFETY INSTRUCTIONS

---

- Read all instructions before using the appliance.
- Do not operate the machine if the power cord or plug is damaged.
- Ensure the machine is placed on a stable, level surface to prevent tipping during operation.
- Keep children and pets away from the machine during operation.
- Do not immerse the machine in water or spray water directly onto the control panel.
- Unplug the machine from the power outlet when not in use or before cleaning.
- Do not overload the machine beyond its stated capacity (3.5 kg / 7.7 lbs).
- Use only detergents suitable for washing machines.
- Avoid touching moving parts during operation.
- Ensure proper ventilation around the machine.

### 3. PRODUCT COMPONENTS

---

The Oneconcept Ecowash Pico includes the following components:

- Main Washing Unit
- Spin Basket
- Spin Basket Lid
- Drain Hose
- Water Inlet Hose
- User Manual (this document)



Figure 3.1: Main Washing Unit Overview





Figure 3.2: Unit with Lid Open





Figure 3.3: Interior View with Spin Basket



Figure 3.4: All Included Components

## 4. SETUP

---

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the washing machine on a firm, level, and dry surface. Ensure there is enough space around the unit for ventilation and operation. Avoid placing it near heat sources or in direct sunlight.
3. **Drain Hose Connection:** Attach the drain hose to the designated outlet on the side of the machine. Ensure it is securely fastened to prevent leaks. Position the other end of the drain hose into a sink or bucket for water drainage.
4. **Water Inlet:** The machine does not have an automatic water inlet. Water must be manually poured into the tub using the provided water inlet hose or a separate container.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet (220-240V ~ 50/60 Hz).



Figure 4.1: Rear View with Power Cord and Handle



Figure 4.2: Hose Connections and Timer Dial

## 5. OPERATING INSTRUCTIONS

The Oneconcept Ecowash Pico features simple controls for washing and spinning.

### 5.1. Washing Cycle

1. **Load Laundry:** Open the top lid and place your laundry into the main washing tub. Do not exceed the maximum capacity of 3.5 kg (7.7 lbs).
2. **Add Water:** Pour the desired amount of water into the tub. Ensure the water level covers the laundry but does not exceed the maximum fill line.
3. **Add Detergent:** Add an appropriate amount of laundry detergent suitable for small loads.
4. **Close Lid:** Securely close the top lid.

5. **Set Wash Timer:** Turn the timer knob to the desired wash time, ranging from 0 to 10 minutes. The machine will begin agitating.
6. **Drain Water:** Once the wash cycle is complete, position the drain hose to empty the water into a sink or bucket.

## 5.2. Spin Cycle

1. **Transfer Laundry:** After draining the wash water, transfer the laundry from the main tub into the spin basket. Ensure the laundry is evenly distributed within the spin basket to prevent imbalance.
2. **Place Spin Basket Lid:** Place the perforated spin basket lid on top of the laundry inside the spin basket. This helps to keep clothes contained during spinning.
3. **Close Lid:** Securely close the top lid of the machine.
4. **Set Spin Timer:** Turn the timer knob to the desired spin time, ranging from 1 to 3 minutes. The machine will begin spinning at up to 1320 RPM.
5. **Remove Laundry:** Once the spin cycle is complete, open the lid and carefully remove the spun laundry.

Your browser does not support the video tag.

Video 5.1: Official Oneconcept ECOWASH Product Demonstration. This video illustrates the basic setup, washing, and spinning operations of the portable washing machine.



Figure 5.1: Placing the Spin Basket Lid

## 6. MAINTENANCE

---

- **Cleaning:** After each use, wipe the interior and exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Draining:** Always ensure all water is drained from the machine after use to prevent mildew and odors.
- **Storage:** When not in use for extended periods, clean and dry the machine thoroughly. Store it in a cool, dry place away from direct sunlight.

- **Cord Care:** Coil the power cord neatly and store it in the designated area at the back of the machine.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start	Not plugged in; Power outage; Timer not set.	Check power connection; Verify power supply; Set the timer knob.
Water does not drain	Drain hose kinked or blocked; Drain hose not positioned correctly.	Straighten drain hose; Clear any blockages; Ensure drain hose is lower than the machine's outlet.
Excessive vibration/noise during spin	Laundry unevenly distributed in spin basket; Machine not on a level surface.	Redistribute laundry evenly; Place machine on a stable, level surface.
Water leaks from machine	Hose connections loose; Tub overloaded; Lid not properly closed.	Check and tighten all hose connections; Do not exceed max fill line; Ensure lid is securely closed.
Clothes not clean	Insufficient detergent; Overloaded tub; Too short wash cycle.	Use appropriate amount of detergent; Reduce load size; Increase wash time.

## 8. SPECIFICATIONS

Feature	Specification
Brand	Oneconcept
Model Number	MNW4-2500-EcoPicoB
Item Weight	15.5 pounds
Product Dimensions	13.78 x 13.78 x 17.32 inches (35 x 35 x 44 cm)
Washing Capacity	3.5 Kilograms (7.7 lbs)
Max Spin Speed	1320 RPM
Power Consumption (Wash)	380W
Power Consumption (Spin)	135W
Voltage	220-240V ~ 50/60 Hz
Material Type	Plastic

Feature	Specification
Control Console	Push Button / Rotary Knob
Access Location	Top Load
Special Features	Portable, Lightweight, Timer Function

## 9. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation provided at the time of purchase or visit the official Oneconcept website. Keep your proof of purchase for any warranty claims.