

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Teamson Home](#) /

› [Teamson Home Outdoor 20.07 inch Round Wood-Burning Fire Pit \(Model HR17501AC\) User Manual](#)

## Teamson Home HR17501AC

# Teamson Home Outdoor 20.07 inch Round Wood-Burning Fire Pit User Manual

Model: HR17501AC | Brand: Teamson Home

## IMPORTANT SAFETY INFORMATION

Please read and understand all instructions and warnings before assembling, operating, or servicing this fire pit. Failure to follow these instructions may result in property damage, bodily injury, or death.

- For outdoor use only. Do not use indoors or in any enclosed area.
- Keep children and pets away from the fire pit at all times.
- Place the fire pit on a hard, level, non-combustible surface. Do not use on wooden decks, grass, or other flammable surfaces.
- Maintain a safe distance from combustible materials such as buildings, fences, trees, and overhanging branches.
- Do not use gasoline, kerosene, diesel fuel, lighter fluid, or alcohol to start or restart a fire.
- Never leave a burning fire pit unattended.
- Ensure the fire is completely extinguished before leaving the area or storing the fire pit.
- Use caution when handling hot components. Always use the poker to adjust logs or remove the spark screen.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

## PACKAGE CONTENTS

Verify that all components listed below are present and undamaged before assembly.

- Faux Concrete Fire Pit Base
- Removable Fire Bowl
- Spark Screen
- Stainless Steel Grill Grate
- Poker
- Touch-up Paint with Brush

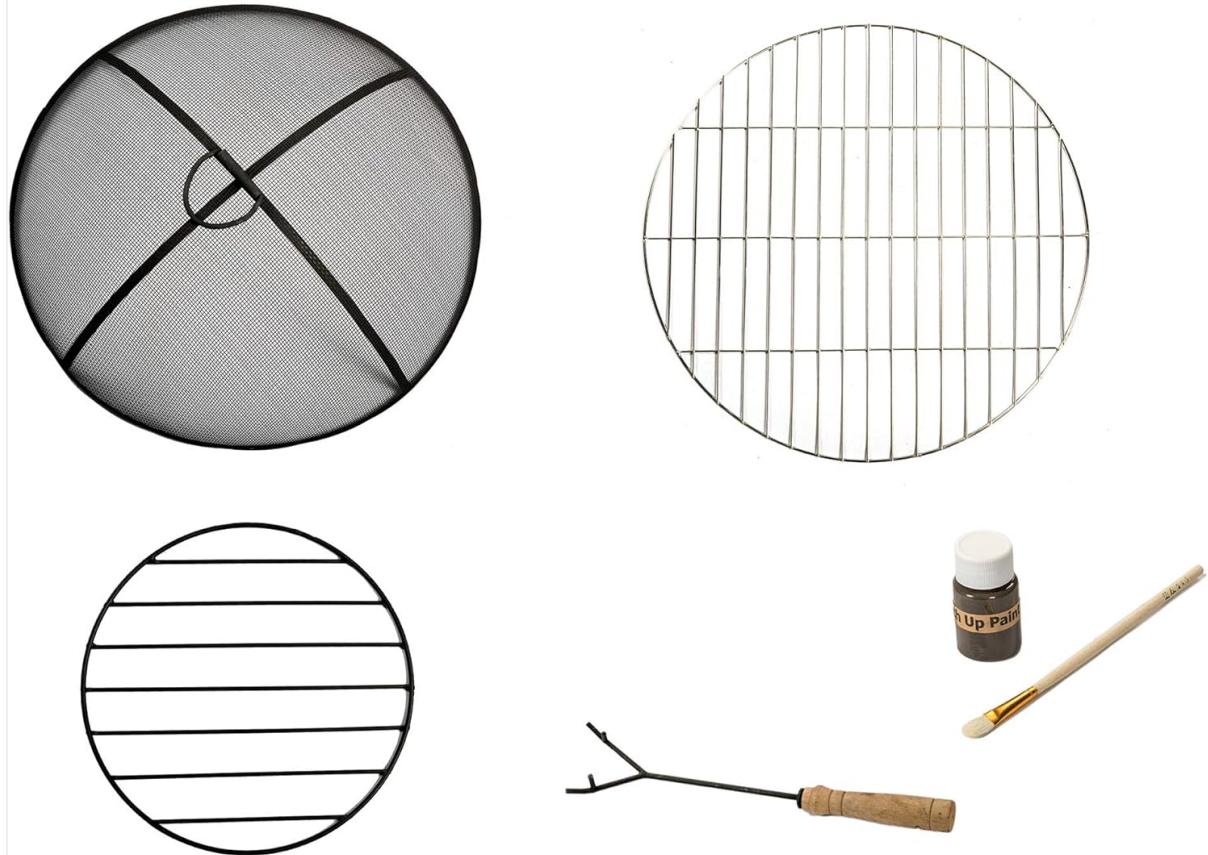


Image: All components included with the fire pit.

The image above displays all items included in the package: the main maroon faux concrete base, the internal metal fire bowl, the domed mesh spark screen, the round stainless steel grill grate, a poker with a wooden handle, and a small container of touch-up paint with a brush.

## SETUP

---

The Teamson Home Wood-Burning Fire Pit requires minimal assembly. Follow these steps for safe setup:

- 1. Unpack Components:** Carefully remove all items from the packaging.
- 2. Choose Location:** Select a flat, stable, non-combustible outdoor surface. Ensure adequate clearance from structures, vegetation, and other flammable materials.
- 3. Insert Fire Bowl:** Place the removable fire bowl securely into the faux concrete base.
- 4. Optional Grill Grate:** If using for grilling, place the stainless steel grill grate inside the fire bowl, resting on its supports.
- 5. Spark Screen Placement:** The spark screen is placed over the fire bowl once the fire is lit.



Image: Fully assembled fire pit with spark screen and grill grate.

The image shows the fire pit fully assembled, with the removable fire bowl seated in the faux concrete base, the grill grate positioned inside, and the spark screen covering the opening. The poker is visible resting against the side.

## OPERATING INSTRUCTIONS

---

Follow these guidelines for safe and effective operation of your wood-burning fire pit.

- Fuel:** Use only natural, seasoned firewood. Do not use treated wood, trash, or other materials that may produce harmful fumes or excessive sparks.
- Starting the Fire:** Place a small amount of kindling (e.g., paper, small dry twigs) at the bottom of the fire bowl. Arrange small pieces of firewood on top of the kindling. Light the kindling using a long match or lighter. Gradually add larger pieces of firewood as the fire grows.
- Spark Screen:** Once the fire is established, carefully place the spark screen over the fire bowl to contain sparks and embers. Use the poker to lift and replace the screen as needed.
- Grilling (Optional):** If using the grill grate, ensure it is clean before placing it over the hot coals. Allow coals to reach an even temperature before cooking. Use appropriate grilling tools.
- Maintaining the Fire:** Use the poker to adjust logs and ensure proper airflow. Do not overload the fire pit.
- Extinguishing the Fire:** Allow the fire to burn down naturally. Do not use water to extinguish the fire, as this can damage the fire pit and create steam hazards. Once the flames have subsided, spread out the

embers to cool. Ensure all embers are completely cold before leaving the fire pit unattended or cleaning.



Image: The fire pit in operation on a patio, with a small wood fire burning inside.

The image depicts the fire pit in an outdoor setting, with a controlled wood fire burning within the fire bowl. The spark screen is partially visible, and the poker is placed nearby for safe handling.

## MAINTENANCE

---

Regular maintenance will extend the life and appearance of your fire pit.

- **Cleaning the Fire Bowl:** After the fire pit has completely cooled, remove the spark screen and grill grate. Carefully lift out the removable fire bowl and dispose of ashes in a metal container. Clean the fire bowl with a stiff brush and mild soap, then rinse and dry thoroughly to prevent rust.
- **Cleaning Grates:** Clean the grill grate and spark screen with a wire brush and mild soap. Rinse and dry completely.
- **Faux Concrete Base:** Wipe the exterior of the base with a damp cloth. Avoid abrasive cleaners.
- **Touch-up Paint:** If the finish on the faux concrete base shows minor wear or scratches, use the provided touch-up paint and brush to restore its appearance. Ensure the surface is clean and dry before applying.
- **Storage:** When not in use, especially during inclement weather or off-season, store the fire pit in a dry,

covered area to protect it from the elements and prolong its lifespan.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Excessive Smoke	Wet or unseasoned wood; insufficient airflow.	Use dry, seasoned firewood. Ensure logs are not packed too tightly to allow for airflow.
Difficulty Lighting Fire	Insufficient kindling; wet fuel.	Use more dry kindling. Ensure firewood is dry.
Paint Peeling/Fading	Exposure to extreme heat or weather; normal wear.	Use the provided touch-up paint to restore the finish. Store in a covered area when not in use.
Rust on Metal Parts	Exposure to moisture.	Clean and dry metal components thoroughly after each use. Store in a dry location.

## SPECIFICATIONS

---

- **Model Number:** HR17501AC
- **Dimensions:** 20.87 inches (Diameter) x 18.5 inches (Height)
- **Burning Area:** 17.91 inches (Diameter) x 6.1 inches (Height)
- **Item Weight:** 17.6 pounds
- **Material:** Faux Concrete (Base), Stainless Steel (Grill Grate), Steel (Fire Bowl, Spark Screen, Poker)
- **Fuel Type:** Wood
- **Color:** Maroon
- **UPC:** 810014815695



Image: Dimensional diagram of the fire pit.

The image provides a visual representation of the fire pit's dimensions, indicating a diameter of 20.87 inches (53 cm) and a height of 18.5 inches (47 cm).

## **WARRANTY AND SUPPORT**


Teamson Home products are manufactured with quality and care. For information regarding warranty coverage or technical support, please refer to the documentation included with your purchase or visit the official Teamson Home website.

For further assistance, please contact Teamson Home customer service.

## **Related Documents - HR17501AC**



[Teamson Home HF42191AA Outdoor Rectangular Propane Gas Fire Pit Owner's Manual](#)  
Comprehensive owner's manual for the Teamson Home HF42191AA Outdoor Rectangular Propane Gas Fire Pit. Includes safety information, part lists, assembly instructions, operation guidelines, maintenance tips, troubleshooting, and warranty details.

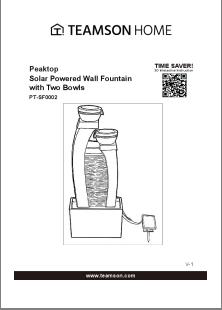	<p><a href="#"><u>Peaktop Solar Powered Wall Fountain with Two Bowls - PT-SF0002 Assembly and Operation Guide</u></a></p> <p>Detailed guide for the Peaktop Solar Powered Wall Fountain with Two Bowls (PT-SF0002) by Teamson Home, covering setup, operation, maintenance, troubleshooting, and technical specifications.</p>
	<p><a href="#"><u>Teamson Home Hatteras 2-Door Wall Cabinet Assembly Instructions and Warranty</u></a></p> <p>Assembly instructions, warranty details, and customer support information for the Teamson Home Hatteras 2-Door Wall Cabinet (Models THF4425NA, THF4425BK, THF4425WA). Includes parts list, hardware guide, and step-by-step assembly.</p>
	<p><a href="#"><u>TEAMSON HOME Hatteras Sideboard with 4 Doors - Assembly Instructions &amp; Warranty</u></a></p> <p>Comprehensive assembly instructions and warranty details for the TEAMSON HOME Hatteras Sideboard with 4 Doors (Models THF4925NA, THF4925BK, THF4925WA). Includes parts list, hardware guide, and customer support information.</p>
	<p><a href="#"><u>Teamson Home Hatteras 2-Drawer Nightstand Assembly Instructions and Warranty</u></a></p> <p>Detailed assembly instructions, parts list, hardware guide, and warranty information for the Teamson Home Hatteras 2-Drawer Nightstand (Models THF2325NA, THF2325BK, THF2325WA). Includes customer support contacts and product specifications.</p>
	<p><a href="#"><u>Teamson Home Martha Wall Cabinet 2 Doors (ELG-501) - Assembly Instructions</u></a></p> <p>Detailed assembly instructions for the Teamson Home Martha Wall Cabinet 2 Doors (Model ELG-501). Includes parts list, hardware guide, care instructions, and customer support contact information.</p>