

Suttik SK2021

Suttik Hair Clippers and Trimmers Set Instruction Manual

Model: SK2021

[Safety](#)

[Contents](#)

[Features](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

INTRODUCTION

Thank you for choosing the Suttik Professional Cordless Hair Clipper and Trimmer Set. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new grooming tools. Please read it thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, injury, or damage, always follow these basic safety precautions:

- Avoid direct contact with the blades.
- Do not allow children to use this appliance without adult supervision.
- Exercise caution when using the clippers near sensitive areas such as the face and eyes.
- Store the clippers and accessories properly to prevent damage to the blades and batteries.
- Keep the appliance dry. Do not use it in or near water.
- Unplug the appliance before cleaning or performing maintenance.
- Do not operate the appliance if it has a damaged cord or plug, or if it is not working correctly.

PACKAGE CONTENTS

Your Suttik Hair Clipper and Trimmer Set includes the following items:



Image: The Suttik Hair Clipper and Trimmer Set, showing the main clipper, the detail trimmer, various guide combs, a barber cape, cleaning brush, oil, and charging cables.

- Professional Hair Clipper (main unit)
- Detail Trimmer (smaller unit)
- 6 Guide Combs for Clipper (0.5mm, 1.5mm, 3mm, 6mm, 9mm, 12mm)
- 3 Guide Combs for Trimmer (1mm, 2mm, 3mm)
- USB Charging Cables (2)
- Cleaning Brush
- Lubricating Oil
- Barber Cape
- Hair Comb
- Instruction Manual

PRODUCT FEATURES

- **Sharp & Durable High Carbon Steel Blades:** Precision blades designed for long-term sharpness and smooth cutting without pulling hair.

Sharp Carbon Stainless Steel Blade

Professional hair cutting
performance without pulling hair



Image: A detailed view of the clipper's sharp carbon stainless steel blade and the adjustable taper lever, indicating a range of 0.8-2mm.

- **Smart Digital LED Display:** Provides real-time information on battery percentage, oiling reminders, and charging status.

Digital LED Display



Battery Indicator
Percentage



Oiled Reminder



Charging Reminder



Image: A close-up of the clipper's LED display, illustrating icons for battery power percentage, an oiling reminder, and a charging reminder.

- **Powerful & Quiet Motor:** Equipped with a 10W motor, operating at 6500 RPM with noise levels below 56dB, suitable for all ages.

Strong Power Rotating Motor



10W Power



6500 RPM Speed



Ultra Quiet 52 dB



Life 1000Hours



Image: An X-ray view illustrating the internal strong power rotating motors of both the main clipper and the detail trimmer, highlighting 10W power, 6500 RPM speed, ultra-quiet 52 dB operation, and 1000 hours life.

- **Long Battery Life & USB Quick Charging:**

- Clipper: 2500mAh Lithium battery, up to 300 minutes running time with 2.5 hours charging.
- Trimmer: 900mAh Lithium battery, up to 120 minutes running time with 1.5 hours charging.

USB Quick Charging



Image: A visual comparison of the main clipper and detail trimmer, detailing their respective lithium battery capacities (2500mAh and 900mAh), running times (300 minutes and 120 minutes), and charging times (1.5 hours and 2.5 hours).

- **Cordless Operation:** Provides flexibility and ease of use without cord restrictions.
- **Adjustable Taper Lever:** Allows for precise control over cutting length (0.8mm to 2mm) on the main clipper.
- **Multiple Guide Combs:** A variety of comb attachments for different hair lengths and styles.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all items from the packaging. Verify that all components listed in the "Package Contents" section are present.

Clipper and Trimmer Set

professional & cordless



sharp blade



Strong power



large capacity



ultra quiet



LCD display



fast charge



Image: The Suttik clipper and trimmer set laid out with its packaging box and all included accessories, such as guide combs, charging cables, and a barber cape.

- Initial Charge:** Before first use, fully charge both the hair clipper and the detail trimmer.
 - Connect the USB charging cable to the charging port on the device and to a compatible USB power adapter (not included).
 - The LED display will indicate charging status. Charge the main clipper for approximately 2.5 hours and the detail trimmer for 1.5 hours.
 - Once fully charged, the battery indicator on the LED display will show 100%.
- Lubricate Blades:** Apply a few drops of the included lubricating oil to the blades before each use to ensure smooth operation and prolong blade life. Turn the device on for a few seconds to distribute the oil.

OPERATING INSTRUCTIONS

Using the Hair Clipper

- Select Guide Comb:** Choose the desired guide comb for your preferred hair length. Attach it securely to the clipper blade.

Multi Guards Meet Different Length of Hairstyle Needs



Image: A display of the various guide combs included for both the main clipper (0.5mm, 1.5mm, 3mm, 6mm, 9mm, 12mm) and the detail trimmer (1mm, 2mm, 3mm), illustrating options for different hair lengths.

- Adjust Taper Lever:** For fine-tuning the cutting length without changing guide combs, use the adjustable taper lever on the side of the main clipper. Move it up for a shorter cut and down for a longer cut within the blade's range (0.8mm-2mm).
- Power On:** Press the power button to turn on the clipper.
- Begin Cutting:** Hold the clipper with the blade flat against the hair and move it slowly against the direction of hair growth. Use smooth, even strokes.
- Check LED Display:** Monitor the LED display for battery life and oiling reminders during use.
- Power Off:** After use, press the power button to turn off the clipper.

Using the Detail Trimmer

- Select Guide Comb (Optional):** For beard trimming or precise detailing, you may use one of the smaller guide combs (1mm, 2mm, 3mm) or use the trimmer without a comb for a close cut.
- Power On:** Press the power button to turn on the trimmer.
- Trim and Detail:** Use the trimmer for precise lines, edging, and detailing around the neckline, sideburns, and beard.



Clippers for Hair Cutting Trimmers for Precise Cutting



Image: A composite image showing a person using the main clipper for a general haircut and another person using the detail trimmer for precise edging around the hairline.

4. **Power Off:** After use, press the power button to turn off the trimmer.

MAINTENANCE AND CARE

Cleaning the Blades

1. **Power Off:** Ensure the clipper/trimmer is turned off and unplugged before cleaning.
2. **Remove Hair:** Use the included cleaning brush to brush away any loose hair from the blades and the area around them.
3. **Rinse (if applicable):** If the blades are washable (refer to product specifications), you may rinse them under running water. Ensure the main body of the device does not get wet unless explicitly stated as waterproof. Dry thoroughly.

Oiling the Blades

Regular oiling is crucial for maintaining blade performance and longevity. The LED display will provide an oiling reminder.

1. **Apply Oil:** After cleaning and drying the blades, apply 1-2 drops of the provided lubricating oil evenly across the blade teeth.

2. **Run Briefly:** Turn on the clipper/trimmer for a few seconds to allow the oil to distribute across the blades.
3. **Wipe Excess:** Wipe off any excess oil with a soft cloth.

Storage

Store the clipper and trimmer set in a cool, dry place, away from direct sunlight and moisture. Keep out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper/Trimmer does not turn on.	Battery is depleted.	Charge the device fully.
Clipper/Trimmer pulls hair or cuts poorly.	Blades are dull, dirty, or not oiled.	Clean and oil the blades. If problem persists, blades may need replacement.
Device makes unusual noise.	Blades are not properly aligned or need oiling.	Ensure blades are clean and oiled. Check for any obstructions.
LED display not working.	Device is off or battery is completely dead.	Turn on the device or connect it to a charger.

If you encounter issues not listed here or if solutions do not resolve the problem, please contact Suttik customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Suttik
Model Number	SK2021
Blade Material	High Carbon Steel
Motor Power	10W
Motor Speed	6500 RPM
Noise Level	Below 56dB
Clipper Battery	2500mAh Lithium-Ion
Clipper Running Time	Up to 300 minutes
Clipper Charging Time	Approx. 2.5 hours
Trimmer Battery	900mAh Lithium-Ion
Trimmer Running Time	Up to 120 minutes

Feature	Detail
Trimmer Charging Time	Approx. 1.5 hours
Display	LED Digital Display (Battery, Oil, Charge)
Package Dimensions	10.04 x 6.57 x 3.11 inches
Item Weight	2.12 Pounds

WARRANTY AND SUPPORT

Suttik offers a satisfaction guarantee for this product. If you experience any issues with your Suttik Hair Clipper and Trimmer Set within 30 days of purchase, a replacement or refund will be provided. For further assistance, technical support, or warranty claims, please contact Suttik customer service through the retailer where the product was purchased or visit the official Suttik store online.

[Visit the Suttik Store](#)

© 2023 Suttik. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.