

[Manuals.plus](#) /

› [L.O.L. Surprise!](#) /

› L.O.L. Surprise! 117971EUC Bubbly Surprise Doll & Pet Instruction Manual

L.O.L. Surprise! 117971EUC

L.O.L. Surprise! Bubbly Surprise Doll & Pet Instruction Manual

Model: 117971EUC

INTRODUCTION

Welcome to the exciting world of L.O.L. Surprise! Bubbly Surprise. This product offers a unique unboxing experience with a color-changing doll and pet, hidden surprises, and a special fizz effect. Please read these instructions carefully before use to ensure proper enjoyment and safety.

PACKAGE CONTENTS

Your L.O.L. Surprise! Bubbly Surprise package (Orange Style) includes the following items:

- 1 L.O.L. Surprise! Color Change Fizz
- 1 Exclusive L.O.L. Surprise! Doll
- 1 Exclusive Pet
- Multiple Surprise Accessories (outfits, themed items)
- Kinetic Sand
- Heart-shaped Case (doubles as a purse and playset)



Image: Contents of the L.O.L. Surprise! Bubbly Surprise, including the doll, pet, and various accessories.

GETTING STARTED

To begin your unboxing experience, ensure you have a clean, flat surface and a bowl of water ready for the fizz surprise.

1. **Unpack the Case:** Carefully remove the L.O.L. Surprise! Bubbly Surprise case from its outer packaging. The case itself is part of the play experience.
2. **Open the Case:** Unlatch and open the heart-shaped case to reveal the inner compartments.



Image: The L.O.L. Surprise! Bubbly Surprise case in its closed state.



Image: The L.O.L. Surprise! Bubbly Surprise case opened, showing the central heart compartment.

OPERATING INSTRUCTIONS: UNBOXING THE SURPRISES

1. **The Fizz Surprise:** Locate the large heart-shaped fizz bomb inside the central compartment of the case. Fill a separate bowl with water. Carefully place the fizz bomb into the water. Observe as it fizzes and dissolves, revealing your exclusive L.O.L. Surprise! doll and pet. The fizz itself will change color as it dissolves.



Image: The fizz bomb and surprise balls positioned within the open case.



FIZZ SURPRISE

Image: The fizz bomb actively dissolving in water, showing the color change effect.

2. **Reveal Doll and Pet:** Once the fizz has completely dissolved, retrieve your exclusive doll and pet from the water. Gently rinse them with clean water to remove any residue.
3. **Color Change Feature:** To activate the color change effect on your doll and pet, immerse them in **ice-cold water**. Observe the transformation of their features or outfits. The color change is reversible; warm water will return them to their original state.
4. **Additional Surprises:** Located around the central fizz compartment, you will find smaller surprise balls and kinetic sand. Open the surprise balls to discover outfits and accessories for your doll and pet. Dig through the kinetic sand to find more hidden treasures.
5. **Assemble and Play:** Dress your doll and pet in their new outfits and accessories. The heart-shaped case can be used as a playset or a carrying purse for your L.O.L. Surprise! collection.

CARE AND MAINTENANCE

- **Cleaning Dolls and Pets:** Wipe dolls and pets with a damp cloth to clean. For stubborn dirt, use mild soap and water, then rinse thoroughly. Allow to air dry completely.
- **Cleaning the Case:** The plastic case can be wiped clean with a damp cloth. Avoid abrasive cleaners.
- **Kinetic Sand Storage:** Store kinetic sand in an airtight container to prevent it from drying out.

- **Avoid Extreme Temperatures:** Do not expose the product to extreme heat or prolonged direct sunlight, as this may affect the color change feature and material integrity.

TROUBLESHOOTING

- **Color Change Not Working:** Ensure the water used is genuinely **ice-cold**. The colder the water, the more pronounced the effect. If the doll/pet has been recently exposed to warm temperatures, it may take longer to react.
- **Fizz Bomb Not Dissolving:** Ensure the fizz bomb is fully submerged in water. If the water is too cold, it might slow down the fizzing process. Use room temperature water for optimal fizzing.
- **Missing Parts:** Carefully check all packaging materials and kinetic sand for any small accessories. If parts are genuinely missing, contact customer support.

PRODUCT SPECIFICATIONS

- **Model Number:** 117971EUC
- **Product Dimensions:** 9.13 x 5 x 8.75 inches
- **Item Weight:** 2.2 pounds
- **Manufacturer:** L.O.L. Surprise!
- **Release Date:** July 7, 2021

SAFETY INFORMATION

WARNING: Not suitable for children under 36 months due to small parts which may present a choking hazard. Adult supervision is recommended during play, especially during the fizzing process.

- **Recommended Age:** 3 years and up.
- Do not ingest the fizz bomb or kinetic sand.
- Wash hands thoroughly after playing with the product.

CUSTOMER SUPPORT

For further assistance or inquiries regarding your L.O.L. Surprise! Bubbly Surprise, please refer to the contact information provided on the product packaging or visit the official L.O.L. Surprise! website for support resources.

© 2024 L.O.L. Surprise! All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08Y178Y47>

More documents and user manuals: <https://manuals.plus/>