

## Mio Mivue C314

# Mio MiVue C314 Dashcam User Manual

Your guide to safe and reliable recording on the road.

## INTRODUCTION

---

This manual provides essential instructions for the installation, operation, and maintenance of your Mio MiVue C314 dashcam. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience. The Mio MiVue C314 is designed to record your journeys in Full HD 1080p, featuring a 3-axis G-sensor for event detection and automatic power-on for convenience.

## SETUP

---

### 1. Package Contents

Before proceeding, ensure all items are present:

- Mio MiVue C314 Dashcam
- Suction Cup Mount
- Car Charger
- User Manual (this document)

### 2. Inserting a Memory Card

A Class 10 or higher microSD card (not included) is required for recording. Insert the microSD card into the designated slot until it clicks into place. Ensure the dashcam is powered off before inserting or removing the card.

### 3. Mounting the Dashcam

1. Clean the windshield surface where you intend to mount the dashcam.
2. Attach the suction cup mount to the dashcam.
3. Press the suction cup firmly against the windshield and flip the lever to secure it. Position the dashcam to ensure a clear view of the road without obstructing your driving visibility.

4. Adjust the camera angle to capture the desired field of view.



Image: Side view of the Mio MiVue C314 dashcam, illustrating its compact form factor and how it might appear when mounted.

#### **4. Connecting to Power**

Connect the car charger to the dashcam's power input port and plug the other end into your vehicle's 12V power outlet (cigarette lighter socket). The dashcam will automatically power on and begin recording when your vehicle starts.

### **OPERATING THE DASHCAM**

---

#### **1. Automatic Recording**

Once powered on, the MiVue C314 automatically starts continuous loop recording. Video files are saved to the microSD card in segments.



Image: Front view of the Mio MiVue C314, highlighting the display screen and the arrangement of control buttons on the right side.

## **2. Event Recording (G-Sensor)**

The built-in 3-axis G-sensor detects sudden movements or impacts (e.g., hard braking, collisions). When an event is detected, the dashcam automatically saves the current recording segment to a protected folder on the microSD card, preventing it from being overwritten by continuous loop recording.

## **3. Manual Event Recording**

You can manually trigger an event recording by pressing the designated button on the dashcam. This will save the current video segment to the protected folder.

## **4. Display and Menu Navigation**

The 2-inch LCD screen allows you to view live footage, playback recorded videos, and access settings. Use the buttons on the side of the device to navigate through the menu options and confirm selections.



Image: Detailed view of the Mio MiVue C314's camera lens, emphasizing its Full HD 1080p wide-angle capabilities.

## 5. Playback and File Management

To review recordings, stop recording (if active) and enter playback mode via the menu. You can browse through video files and play them directly on the dashcam's screen. For detailed viewing or backup, remove the microSD card and insert it into a computer.

## MAINTENANCE

---

### 1. Cleaning the Device

Use a soft, dry cloth to clean the dashcam's lens and screen. Avoid using abrasive cleaners or solvents, as they may damage the surfaces. Keep the device free from dust and moisture.

### 2. Memory Card Management

It is recommended to format the microSD card regularly (e.g., once a month) to maintain optimal performance and prevent data corruption. Formatting will erase all data on the card, so back up any important files beforehand. You can usually format the card through the dashcam's settings menu.

### 3. Firmware Updates

Periodically check the Mio official website for available firmware updates. Updating the firmware can improve performance, add new features, or fix bugs. Follow the instructions provided with the firmware update carefully.

## TROUBLESHOOTING

---

- **Dashcam does not power on:** Ensure the car charger is securely connected to both the dashcam and the vehicle's 12V power outlet. Check if the vehicle's power outlet is functioning.
- **Recording stops unexpectedly:** The microSD card may be full or corrupted. Format the card or replace it with a new one. Ensure you are using a Class 10 or higher microSD card.
- **Video quality is poor:** Clean the dashcam lens. Ensure the protective film has been removed from the lens. Check the video resolution settings in the menu.
- **G-sensor is too sensitive/not sensitive enough:** Adjust the G-sensor sensitivity level in the dashcam's settings menu.

- **Date and time are incorrect:** Set the correct date and time in the dashcam's settings. Ensure the internal battery is charged (by keeping the device powered for some time) to retain settings.

## SPECIFICATIONS

Feature	Specification
Model Name	Mio MiVue C314
Display Size	2 Inch LCD
Video Recording Resolution	1080p Full HD
Frames Per Second (FPS)	30
Special Features	G-sensor
Mounting Type	Suction Cup Holder
Battery Type	1 Lithium Ion battery (included)
Product Dimensions	50 x 50 x 28 cm
Product Weight	240 g
Connectivity Technology	External

## WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance, please visit the official Mio website or contact their customer service. Keep your proof of purchase for warranty claims. Specific warranty terms and conditions may vary by region.