

Jensen JBS-210

JENSEN JBS-210 Stereo Music System User Manual

Model: JBS-210

1. INTRODUCTION

This user manual provides detailed instructions for the JENSEN JBS-210 3-Piece Stereo 4-Watt-RMS CD Music System. It covers setup, operation, maintenance, troubleshooting, and specifications to ensure optimal performance and longevity of your device.

Key Features:

- 2 watts RMS x 2 speakers
- Frequency response: 100 Hz to 10 kHz
- Stereo speaker system with volume control and light ring
- Front-loading CD player with multifunction LCD display with dimmer
- CD-R/RW compatible
- Bluetooth wireless connectivity
- Digital AM/FM tuner with 40 total presets
- Front-mounted Aux-in and Headphone jacks
- Clock with sleep timer and battery backup
- Included remote control

2. SAFETY INFORMATION

Please read all safety and operating instructions carefully before using this product. Keep these instructions for future reference.

- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

3. PACKAGE CONTENTS

Ensure all items are present in the package:

- JENSEN JBS-210 Main Unit
- 2 x Speakers
- Remote Control (with 1 Lithium Metal battery included)
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your JBS-210 system.



Figure 4.1: Front view of the JENSEN JBS-210 main unit and speakers.



Figure 4.2: JENSEN JBS-210 system including the remote control.

Main Unit Controls:

- **Volume Knob:** Adjusts the overall sound level. Features a light ring.

- **MODE Button:** Switches between CD, Bluetooth, AM/FM, and AUX modes.
- **PRESET/TIME SET Button:** Used for setting radio presets and clock time.
- **PLAY/PAUSE Button:** Controls playback for CD and Bluetooth.
- **SKIP/SEARCH Buttons:** Navigates tracks on CD or Bluetooth, and tunes radio frequencies.
- **STOP Button:** Stops CD playback.
- **POWER Button:** Turns the unit on/off.
- **AUX-IN Jack:** For connecting external audio devices.
- **Headphone Jack:** For private listening.
- **LCD Display:** Multifunction display showing mode, track, frequency, and time.

Remote Control Functions:

The included remote control provides convenient access to all major functions from a distance.

- Power On/Off
- Mode Selection (CD, Bluetooth, AM/FM, AUX)
- Volume Up/Down
- Play/Pause, Stop, Skip/Search
- Radio Tuning and Preset Recall
- Clock and Timer Settings

5. SETUP

5.1 Unpacking and Placement

Carefully remove all components from the packaging. Place the main unit and speakers on a stable, flat surface. Ensure adequate ventilation around the unit.

The JENSEN JBS-210 is a compact bookshelf Bluetooth CD music system that's perfect for any room in the house.



Figure 5.1: Example placement of the JBS-210 system in a home environment.

5.2 Connecting the Speakers

Connect the speaker wires from the back of each speaker to the corresponding speaker terminals on the rear of the main unit. Ensure correct polarity (positive to positive, negative to negative) for optimal sound quality.

5.3 Power Connection

Plug the AC power cord into a standard wall outlet. The unit will enter standby mode.

5.4 Remote Control Battery Installation

The remote control requires one Lithium Metal battery (included). Open the battery compartment on the back of the remote and insert the battery, observing correct polarity.

6. OPERATING INSTRUCTIONS

6.1 Basic Operation

1. Press the **POWER** button to turn the unit on.

2. Press the **MODE** button repeatedly to select your desired source: CD, Bluetooth, AM/FM, or AUX.
3. Adjust the volume using the **VOLUME** knob or the Volume Up/Down buttons on the remote.

6.2 CD Playback

1. Select CD mode using the **MODE** button.
2. Press the **OPEN/CLOSE** button to open the CD tray.
3. Place a CD (CD-R/RW compatible) on the tray with the label side facing up.
4. Press the **OPEN/CLOSE** button again to close the tray. The unit will begin reading the disc.
5. Press **PLAY/PAUSE** to start or pause playback.
6. Use the **SKIP/SEARCH** buttons to navigate between tracks. Hold to fast forward/rewind.
7. Press **STOP** to end playback.



Figure 6.1: Front-loading CD player in operation.

6.3 Bluetooth Operation

1. Select Bluetooth mode using the **MODE** button. The display will show "BT" and begin flashing, indicating pairing mode.

2. On your Bluetooth-enabled device, search for "JBS-210" in the Bluetooth settings.
3. Select "JBS-210" to pair. Once connected, the "BT" indicator will stop flashing.
4. Start playing music on your device. Audio will stream wirelessly to the JBS-210.
5. Use the **PLAY/PAUSE** and **SKIP/SEARCH** buttons on the unit or remote to control playback.

6.4 AM/FM Radio

1. Select AM or FM mode using the **MODE** button.
2. Use the **SKIP/SEARCH** buttons to manually tune to a desired frequency. Hold the button to auto-scan for the next available station.
3. **Setting Presets:** To save a station, press and hold the **PRESET/TIME SET** button until the preset number flashes. Use the **SKIP/SEARCH** buttons to select a preset number, then press **PRESET/TIME SET** again to confirm.
4. **Recalling Presets:** Briefly press the **PRESET/TIME SET** button to cycle through saved stations.

6.5 AUX-IN Operation

1. Connect an external audio device (e.g., MP3 player, smartphone) to the **AUX-IN** jack on the front of the unit using a 3.5mm audio cable (not included).
2. Select AUX mode using the **MODE** button.
3. Start playback on your external device.
4. Adjust the volume using the JBS-210's volume control and/or your external device's volume control.

6.6 Headphone Use

Plug 3.5mm headphones into the **Headphone Jack** on the front of the unit for private listening. The speakers will automatically mute when headphones are connected.

7. MAINTENANCE

7.1 Cleaning the Unit

Wipe the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents as they may damage the finish. Ensure the unit is unplugged before cleaning.

7.2 CD Lens Care

To ensure proper CD playback, occasionally use a CD lens cleaning disc (not included) to clean the CD player's lens.

7.3 Storage

If storing the unit for an extended period, unplug it from the power outlet and remove the battery from the remote control. Store in a cool, dry place away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not securely plugged in.	Check power cord connection to the unit and wall outlet.
No sound	Volume too low; Speakers not connected; Incorrect mode selected; Headphones plugged in.	Increase volume; Check speaker connections; Select correct mode; Unplug headphones.

Problem	Possible Cause	Solution
CD not playing/skipping	CD is dirty or scratched; CD inserted incorrectly; CD format not supported.	Clean or replace CD; Insert CD with label side up; Ensure CD is CD-R/RW compatible.
Bluetooth pairing failed	Device too far; Bluetooth not enabled on device; Unit not in pairing mode.	Move device closer; Enable Bluetooth; Ensure unit is in BT mode and flashing.
Poor radio reception	Antenna not extended/positioned correctly.	Adjust the FM wire antenna for better reception. For AM, rotate the unit.

9. SPECIFICATIONS

Model: JBS-210

Brand: Jensen

Product Dimensions (Main Unit): 7.1 x 6.5 x 2.6 inches (L x W x H)

Item Weight: 5.89 pounds

Speaker Output: 2 watts RMS x 2 speakers

Frequency Response: 100 Hz to 10 kHz

Connectivity Technology: Bluetooth

Color: Black

Speaker Type: Bookshelf

Power Source: AC 120V ~ 60Hz

Battery for Remote: 1 Lithium Metal battery (included)



Figure 9.1: Dimensions of the JBS-210 main unit and speakers.

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Jensen website. Keep your purchase receipt as proof of purchase for warranty claims.

Online Resources:

- Official Jensen Store: [Visit the Jensen Store on Amazon](#)
- User Manual (PDF): [Download PDF Manual](#)



[\[pdf\]](#) User Manual Installation Guide Instructions

THOMAS KWOK JENSEN JBS 210 3 Piece Stereo 4 Watt RMS CD Music System with Bluetooth Digital AM FM Receiver 2 Speakers and Remote User Manual Jensen SPECTRA MERCHANDISING A1pw7tdfbl m media amazon images I |||

BLUETOOTH CD MUSIC SYSTEM WITH DIGITAL AM/FM STEREO RECEIVER AND REMOTE CONTROL MODEL: **JBS-210** USER MANUAL PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE. Please contact Spectra Customer Service at 1-800-777-5331 if you have any questi...

lang:en score:27 filesize: 1 M page_count: 20 document date: 2022-08-23



[\[pdf\]](#) User Manual Quick Start Guide Installation Guide Instructions

THOMAS KWOK BLUETOOTH CD MUSIC SYSTEM WITH DIGITAL AM FM PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING UNIT AND RETAIN BOOKLET FOR FUTURE REFERENCE Please contact Spectra Customer Service at JBS-210_EIB spectraintrl images stories pdf jn UM read this user manual completely Model: JBS-210 before operating unit and retain booklet for PDF Getting Started WARNING TO PREVENT FIRE OR SHOCK HAZARD DO NOT USE PLUG AN EXTENSION CORD RECEPTACLE OTHER OUTLET UNLESS THE BLADES CAN BE FULLY BLUETOOTH CD MUSIC SYSTEM WITH DIGITAL AM/FM STEREO RECEIVER AND REMOTE CONTROL MODEL: **JBS-210** USER MANUAL PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE. Please contact Spectra Customer Service at 1-800-777-5331 if you have any questi...

lang:en score:21 filesize: 1 M page_count: 20 document date: 2021-06-10



[\[pdf\]](#) User Manual

THOMAS KWOK Estimado cliente JENSEN ADVERTENCIA PARA REDUCIR EL RIESGO DE INCENDIO O CHOQUE ELÉCTRICO NO EXPONGA ESTE EQUIPO A LA LLUVIA HUMEDAD EXISTE ALTO VOLTAJE PELIGROSO JBS 210 SIB spectraintrl images stories jn UM SISTEMA MUSICAL CD BLUETOOTH CON RECEPTOR ESTREO DIGITAL AM/FM Y CONTROL REMOTO MODELO: **JBS-210** MANUAL DEL PROPIETARIO Por favor lea y observe cuidadosamente este manual de Instrucciones cuidadosamente antes de utilizar la unidad y retengalo para futura referencia Pngase en contacto con el Servicio d...

lang:es score:18 filesize: 868.32 K page_count: 22 document date: 2021-06-10



BLUETOOTH CD MUSIC SYSTEM WITH
DIGITAL AM/FM STEREO RECEIVER AND
REMOTE CONTROL



MODEL: JBS-210
USER MANUAL



PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND
RETAIN THIS BOOKLET FOR FUTURE REFERENCE.
Please contact Spectra Customer Service at 1-800-777-5331 if
you have any questions about operating this product.

[\[pdf\]](#) User Manual Installation Guide Instructions

User Manual MET INDUSTRIAL LTD METYH6005 Bluetooth CD Music System with Digital AM FM
Stereo Receiver 2AB4KMETYH6005 metyh6005

BLUETOOTH CD MUSIC SYSTEM WITH DIGITAL AM/FM STEREO RECEIVER
AND REMOTE CONTROL MODEL: **JBS-210** USER MANUAL PLEASE READ THIS
USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN
THIS BOOKLET FOR FUTURE REFERENCE. Please contact Spectra Customer
Service at 1-800-777-5331 if you have any questi...

lang:en score:17 filesize: 3.05 M page_count: 20 document date: 2021-06-18