

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN Replacement Remote Control User Manual for Element TV Models

PERFASCIN PFS-ELEMENT-2.5

PERFASCIN Replacement Remote Control User Manual

Model: PFS-ELEMENT-2.5

INTRODUCTION

This manual provides instructions for the PERFASCIN Replacement Remote Control, designed for use with various Element TV models. This remote operates via infrared (IR) technology and offers direct functionality without programming for compatible models.

Compatible Element TV Models:

- ELEFW231
- ELEFW328
- ELEFW408
- ELEFW601
- ELEFW605
- ELEFW606

PACKAGE CONTENTS

- 1 x PERFASCIN Replacement Remote Control (Model: PFS-ELEMENT-2.5)

Note: AAA batteries are not included and must be purchased separately.

SETUP: BATTERY INSTALLATION

To begin using your remote control, you must install two AAA batteries.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment.

Important: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

OPERATING INSTRUCTIONS

This remote control is designed for immediate use with compatible Element TV models without requiring any programming. Ensure there are no obstructions between the remote control and the TV's infrared sensor.



Image: Front view of the remote control, displaying all buttons.

Basic Functions:

- **Power ():** Turns the TV on or off.

- **Number Buttons (0-9):** Directly select channels.
- **VOL (+/-):** Adjusts the volume level.
- **CH (+/-):** Changes channels sequentially.
- **Mute ():** Mutes or unmutes the TV audio.
- **SOURCE:** Selects input sources (e.g., HDMI, AV).
- **MENU:** Accesses the TV's main menu.
- **OK / Directional Buttons:** Navigates through menus and confirms selections.
- **EXIT:** Exits the current menu or screen.
- **INFO:** Displays information about the current program.
- **SLEEP:** Sets a sleep timer for the TV.

Advanced Functions:

- **MTS:** Multi-channel Television Sound (audio options).
- **ASPECT:** Changes the screen aspect ratio.
- **FREEZE:** Pauses the current image on screen.
- **ADD/ERASE:** Function related to channel management.
- **FAV:** Accesses favorite channels.
- **USB:** Accesses USB media playback.
- **REPEAT:** Media playback repeat function.
- **V-CHIP:** Accesses V-Chip parental control settings.
- **CC:** Closed Captioning.
- **Media Playback Controls:** Play, Pause, Stop, Fast Forward, Rewind, Skip.

MAINTENANCE

Battery Replacement:

Replace batteries when the remote control's response becomes sluggish or stops working. Follow the battery installation steps outlined in the "Setup" section.

Cleaning:

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

Storage:

If the remote control will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure new AAA batteries are correctly installed with proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the TV's IR sensor.

- Ensure you are within the operating range (up to 10 meters) and pointing the remote directly at the TV.
- **Some buttons not working:**
 - This remote is a replacement and may not support all advanced functions of every specific Element TV model. Verify if the function is supported by your TV.
 - Clean the remote control surface, especially around the non-working buttons, to ensure no debris is interfering.
- **TV not listed as compatible:**
 - This remote is specifically designed for the listed Element TV models. Compatibility with other models is not guaranteed.

SPECIFICATIONS

Feature	Detail
Brand	PERFASCIN
Model Number	PFS-ELEMENT-2.5
Compatible Devices	Element Televisions (ELEFW231, ELEFW328, ELEFW408, ELEFW601, ELEFW605, ELEFW606)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Maximum Range	10 Meters
Power Source	2 x AAA Alkaline Batteries (not included)
Color	Black
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

This product is typically covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to your purchase documentation or contact the seller for specific warranty terms and duration. For technical support or inquiries regarding your PERFASCIN Replacement Remote Control, please contact the seller directly through the platform where the purchase was made. They can provide assistance with product functionality, compatibility, and troubleshooting.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08Y5HKTF>

More documents and user manuals: **<https://manuals.plus/>**