

[Manuals.plus](#) /

› [Smeg](#) /

› Smeg C41721F Built-in Refrigerator User Manual

Smeg C41721F

Smeg C41721F Built-in Refrigerator User Manual

Model: C41721F

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your new Smeg C41721F Built-in Refrigerator. Please read these instructions carefully before installation, operation, or maintenance to ensure proper functioning and to prevent damage or injury. Keep this manual for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments.
- Unplug the appliance before cleaning or performing maintenance.
- Keep ventilation openings clear of obstruction.
- This appliance is intended for household use only.

3. SETUP AND INSTALLATION

The Smeg C41721F is designed as a built-in appliance. Professional installation is recommended to ensure correct fitting and operation.

3.1 Unpacking and Placement

- Remove all packaging materials.
- Inspect the appliance for any damage during transit.
- Place the refrigerator in a suitable cabinet opening. Ensure adequate ventilation around the unit as specified in the installation guide (not provided here, but implied for built-in).
- The door hinge is located on the right side.

3.2 Dimensions and Weight

- Product Dimensions (H x W x D): 184 cm x 59 cm x 54.9 cm
- Product Weight: 56.81 kg

3.3 Electrical Connection

Connect the appliance to a properly grounded electrical outlet. Refer to the rating label inside the refrigerator for specific voltage and frequency requirements.



Image: The Smeg C41721F refrigerator integrated into a kitchen cabinet, showcasing its built-in design with the doors open to reveal the interior compartments.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the controls and features of your refrigerator.

4.1 Initial Start-up

- After installation, wait at least 2-4 hours before plugging in the appliance to allow refrigerants to settle.
- Once plugged in, the refrigerator will begin cooling. Allow several hours for the internal temperature to stabilize before storing food.

4.2 Temperature Control

The refrigerator features an **LED display** for temperature control. Use the controls on the display to adjust the desired temperature settings for both the refrigerator and freezer compartments. Refer to the specific icons and buttons on your appliance for detailed adjustment procedures.

4.3 Storage Compartments

- The refrigerator compartment has a net capacity of **195 L** and includes **5 shelves/compartments** and **2 vegetable drawers**.
- The freezer compartment has a net capacity of **72 L**.
- An **interior light** illuminates the refrigerator compartment.
- The freezing capacity is **4 kg/24h**, indicating the maximum amount of fresh food that can be frozen within 24 hours.



Image: The interior of the Smeg C41721F refrigerator and freezer compartments, showing shelves, door bins, and vegetable drawers.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your appliance.

5.1 Cleaning the Interior

- Always unplug the refrigerator before cleaning.
- Clean the interior with a soft cloth dampened with a solution of lukewarm water and a mild, non-abrasive detergent.
- Rinse with clean water and dry thoroughly.
- Do not use abrasive cleaners, solvents, or harsh chemicals.

5.2 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.

- For stubborn marks, use a mild detergent and then wipe clean with a damp cloth.

5.3 Defrosting

Refer to your appliance's specific features for automatic or manual defrosting instructions. If manual defrosting is required, unplug the unit, remove all food, and allow ice to melt naturally. Clean and dry the interior before restarting.

6. TROUBLESHOOTING

Before contacting customer service, review the following common issues and their potential solutions.

- **Appliance does not operate:** Check if the power cord is properly plugged in and if there is power to the outlet.
- **Temperature is not cold enough:** Ensure the temperature settings are correct. Check if the door is fully closed and not frequently opened. Avoid placing hot food inside.
- **Unusual noises:** Some operational noises (e.g., refrigerant circulation, compressor) are normal. Ensure the appliance is level and not touching walls or other objects.
- **Water on the floor:** Check if the drain hole is blocked or if the drip tray is overflowing (if applicable).

If the problem persists after checking these points, please contact Smeg customer support.

7. SPECIFICATIONS

Model	Smeg C41721F
Total Net Capacity	267 L
Refrigerator Net Capacity	195 L
Freezer Net Capacity	72 L
Energy Efficiency Class (New Scale)	F
Annual Energy Consumption	272 kWh/annum
Noise Level	35 dB
Climate Class	SN-T
Freezing Capacity	4 kg/24h
Display Type	LED
Door Hinge	Right
Dimensions (H x W x D)	184 cm x 59 cm x 54.9 cm
Weight	56.81 kg

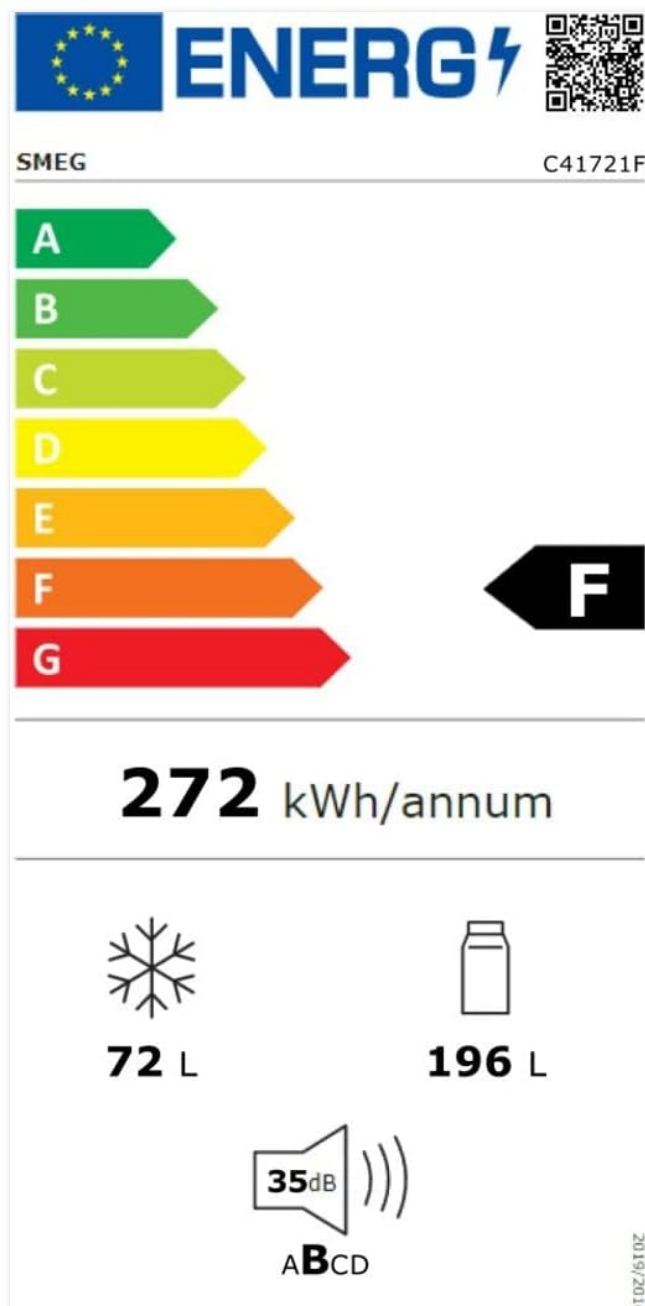


Image: The energy efficiency label for the Smeg C41721F, indicating an F energy class, 272 kWh annual energy consumption, 72L freezer capacity, 196L refrigerator capacity, and 35 dB noise level.

For more detailed information, please refer to the EPREL database: <https://eprel.ec.europa.eu/qr/267828>

8. WARRANTY AND SUPPORT

Your Smeg C41721F Refrigerator is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty period and coverage details.

For technical assistance, spare parts, or to schedule a service appointment, please contact Smeg customer support through their official website or the contact information provided in your warranty documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08Y5LJYC5>

More documents and user manuals: <https://manuals.plus/>