

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Dell](#) /
- > [Dell Latitude 7200 Tablet User Manual](#)

Dell 7200

Dell Latitude 7200 Tablet User Manual

Model: 7200

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Dell Latitude 7200 Tablet. The Dell Latitude 7200 is a versatile 2-in-1 PC designed for business use, featuring an Intel Core i7-8665U processor, 16GB RAM, and a 256GB SSD, running Windows 10 Pro.



Figure 1: Dell Latitude 7200 Tablet with Windows 10 interface.

1. Unpacking and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed in the "What's in the Box" section are present and undamaged.

2. Connecting the Power Adapter

Connect the provided Type-C power adapter to the USB Type-C port on the tablet and then to a power outlet. Allow the tablet to charge for at least 30 minutes before initial use, or until the battery indicator shows sufficient charge.



Figure 2: Type-C power adapter for the Dell Latitude 7200 Tablet.

3. Initial Power On and Windows Setup

Press the power button located on the side of the tablet. The tablet will boot into the Windows 10 Pro setup wizard. Follow the on-screen instructions to configure your language, region, network settings, and user account.

4. Connecting Peripherals

- **USB Devices:** Connect USB devices such as external keyboards, mice, or storage drives to the USB 3.1 Gen 1 port or the USB Type-C ports.

- **SD Cards:** Insert an SD card into the dedicated SD Card Reader slot.
- **Headphones:** Plug headphones into the universal audio jack.
- **Bluetooth Devices:** Enable Bluetooth in Windows settings to pair with wireless keyboards, mice, or audio devices.

OPERATING INSTRUCTIONS

1. Power On/Off and Sleep Mode

- **Power On:** Press the power button.
- **Sleep Mode:** Briefly press the power button to put the tablet into sleep mode. Press again to wake it.
- **Shut Down:** From the Windows Start Menu, select Power > Shut down.
- **Restart:** From the Windows Start Menu, select Power > Restart.

2. Using the Touch Screen

The Dell Latitude 7200 features a 12.3-inch Full HD (1920 x 1280) touch screen. Use standard touch gestures for navigation, selection, and interaction with applications.

3. Port Overview

Familiarize yourself with the various ports available on your tablet:

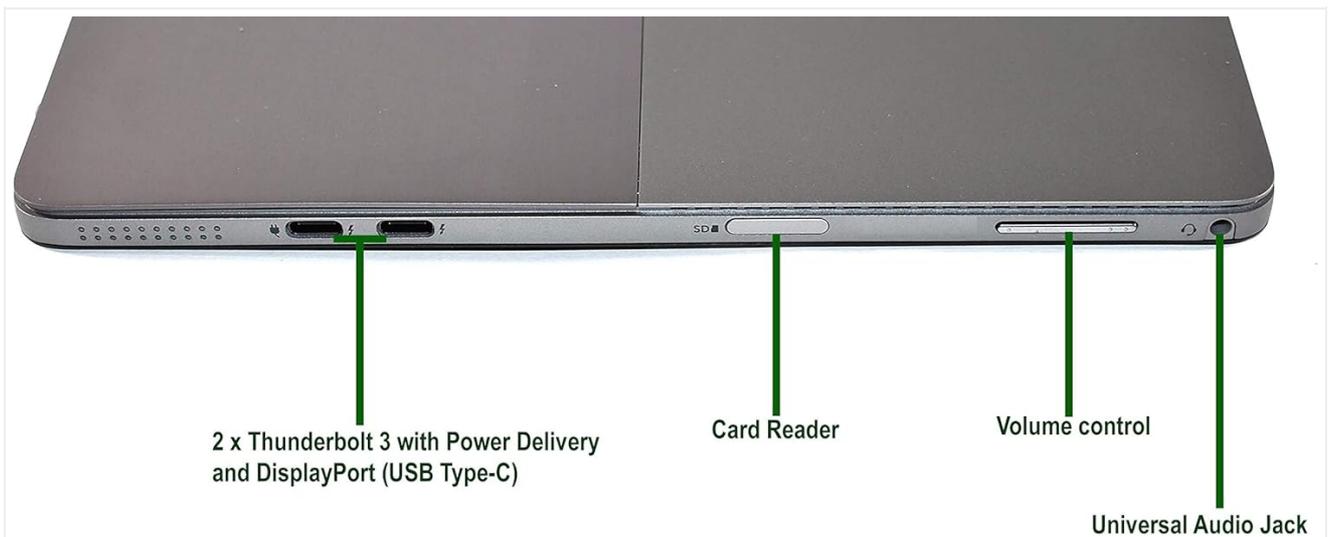


Figure 3: Left side ports including Thunderbolt 3 (USB Type-C), Card Reader, Volume control, and Universal Audio Jack.

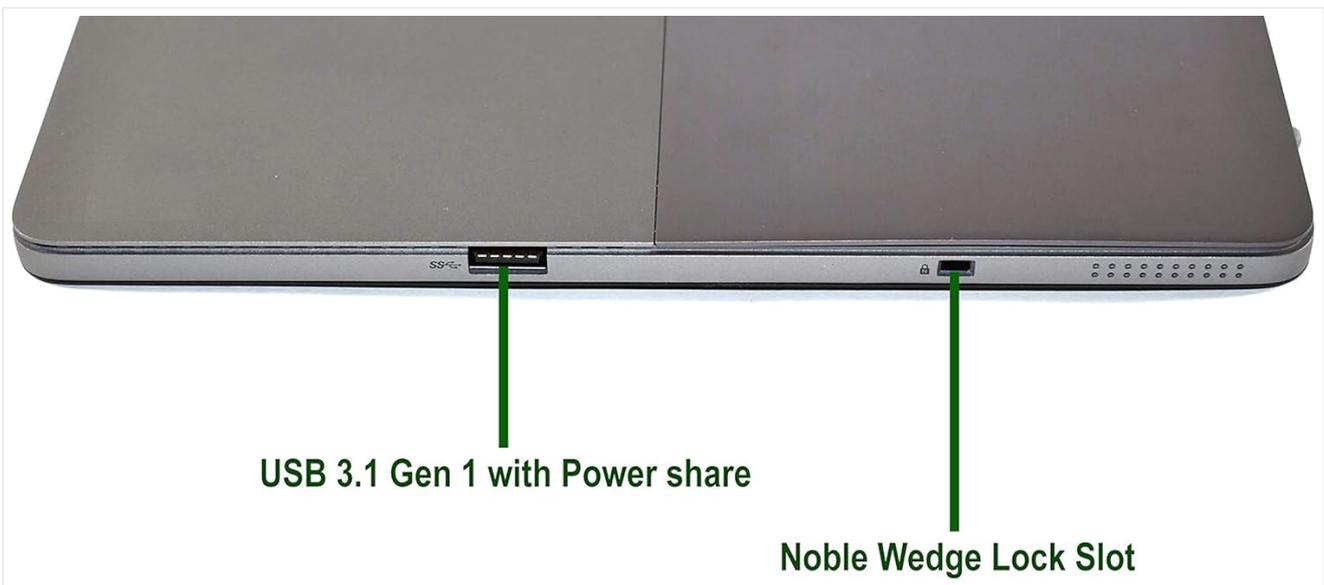


Figure 4: Right side ports including USB 3.1 Gen 1 with Power Share and Noble Wedge Lock Slot.

- **USB 3.1 Gen 1 Port:** For connecting standard USB devices.
- **USB Type-C Ports (Thunderbolt 3):** Supports power delivery, data transfer, and DisplayPort for external displays.
- **SD Card Reader:** For reading and writing to SD memory cards.
- **Universal Audio Jack:** For connecting headphones or headsets.
- **Volume Control:** Buttons to adjust the system volume.
- **Noble Wedge Lock Slot:** For securing the tablet with a compatible security cable.

4. Camera Usage

The tablet is equipped with both front and rear HD cameras. Access the camera application through the Windows Start Menu to take photos or record videos.

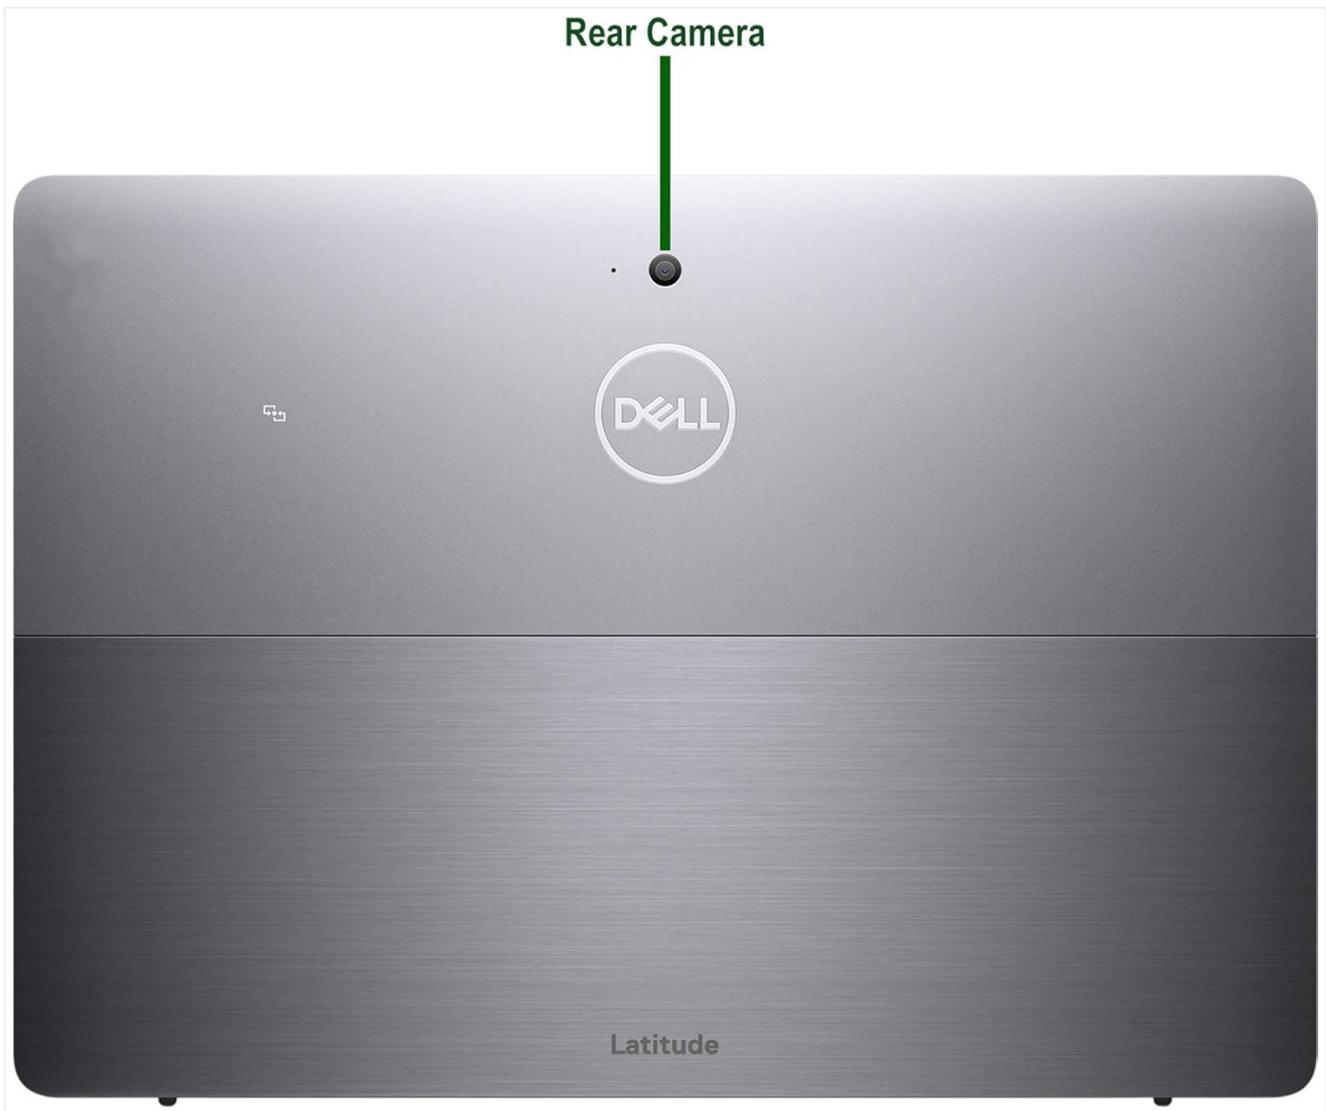


Figure 5: Rear camera location on the Dell Latitude 7200 Tablet.

5. Wireless Connectivity

- **Wi-Fi:** Connect to wireless networks via the AC 9560 160MHz Dual Band (2x2) Wireless Adapter. Manage Wi-Fi connections through the network icon in the Windows taskbar.
- **Bluetooth:** The tablet supports Bluetooth 3.0. Enable Bluetooth in Windows settings to pair with compatible devices.

MAINTENANCE

1. Cleaning the Tablet

- Use a soft, lint-free cloth dampened with water or a screen cleaner specifically designed for electronics.
- Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays directly on the tablet.
- Ensure the tablet is powered off and unplugged before cleaning.

2. Battery Care

- To prolong battery life, avoid extreme temperatures.
- It is recommended to fully discharge and recharge the battery periodically.
- If the tablet is stored for an extended period, ensure it has at least a 50% charge.

3. Software Updates

Regularly check for and install Windows updates to ensure optimal performance, security, and compatibility. Access updates via Windows Settings > Update & Security > Windows Update.

TROUBLESHOOTING

Problem	Possible Solution
Tablet does not power on.	Ensure the power adapter is securely connected and the tablet has sufficient charge. Try holding the power button for 10-15 seconds for a hard reset.
Battery drains quickly or does not charge.	Verify that the provided Type-C adapter is functioning correctly and is properly connected. Ensure the power outlet is active. If using a third-party charger, confirm it meets the tablet's power requirements.
Wi-Fi or Bluetooth connectivity issues.	Check if Wi-Fi/Bluetooth is enabled in Windows settings. Restart the tablet and your router/Bluetooth device. Update wireless drivers if necessary.
Touch screen is unresponsive.	Restart the tablet. Ensure the screen is clean and free of debris. If the issue persists, contact support.
System is slow or unresponsive.	Close unnecessary applications. Check for and install Windows updates. Run a system scan for malware. Consider freeing up storage space.

SPECIFICATIONS

Feature	Detail
Brand	Dell
Model Name	Dell Latitude 7200 Tablet
Processor	Intel 8th Generation Core i7-8665U (1.90 GHz, up to 3.00 GHz, 8MB Cache)
RAM	16 GB DDR3 SDRAM
Storage	256 GB M.2 Solid State Drive (SSD)
Operating System	Windows 10 Professional
Display	12.3-inch FHD (1920 x 1280) Touch Screen
Graphics	Integrated Intel UHD 620 Graphics
Ports	1x USB 3.1 Gen 1, 2x USB Type-C (Thunderbolt 3 with Power Delivery & DisplayPort), 1x SD Card Reader, 1x Universal Audio Jack
Wireless Connectivity	AC 9560 160MHz Dual Band (2x2) Wireless Adapter, Bluetooth 3.0
Cameras	Built-in HD Webcam (Front), Rear Camera
Audio	High Quality Speakers, Headphone Jack
Weight	2.0 Lb (approximately 0.91 kg)
Power Device	Type C Adapter (45 Watts)

WARRANTY INFORMATION

This Dell Latitude 7200 Tablet is a renewed product and comes with a **90-day seller refurbished warranty**. This warranty covers defects in materials and workmanship under normal use. Please refer to your purchase documentation for specific terms and conditions of the seller's warranty.

Note: This product does not carry a Dell manufacturer's warranty as it is a renewed item.

SUPPORT

For technical assistance, warranty claims, or further inquiries regarding your Dell Latitude 7200 Tablet, please contact the seller from whom you purchased the device. They will be able to provide support specific to your renewed product. For general information about Windows 10 Pro, visit the official Microsoft support website.