

[Manuals.plus](#) /

> [UBay](#) /

> UBay Remote Control for Sceptre Smart Android TV Instruction Manual

UBay UB-Sceptre-280401010470

UBay Remote Control for Sceptre Smart Android TV Instruction Manual

Model: UB-Sceptre-280401010470

INTRODUCTION

This instruction manual provides detailed information on how to set up and operate your UBay Remote Control, compatible with Sceptre Smart Android TV UMC and SRC Series. Please read this manual carefully before use to ensure optimal performance and longevity of your device.

PRODUCT OVERVIEW





Image 1: Front view of the UBay Remote Control. This image displays the full layout of the remote control, including the power button, number pad, navigation buttons, volume and channel controls, and dedicated app buttons for Netflix, YouTube, Google Play, and Vudu.





Image 2: Back view of the UBay Remote Control. This image shows the smooth, ergonomic design of the remote's rear

casing, including the battery compartment cover at the bottom.

The UBay Remote Control is designed for seamless compatibility with Sceptre Smart Android TVs. It features dedicated buttons for popular streaming services and essential TV functions, providing a convenient user experience.

SETUP INSTRUCTIONS

1. **Insert Batteries:** Open the battery compartment cover on the back of the remote control. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals are aligned correctly according to the indicators inside the compartment. Close the battery cover securely.
2. **No Programming Required:** This remote control is pre-programmed for compatible Sceptre Smart Android TVs (UMC and SRC Series). No additional programming or pairing steps are needed. Once batteries are inserted, the remote is ready for immediate use.
3. **Line of Sight:** The remote operates using infrared (IR) signals. Ensure there is a clear line of sight between the remote control and the TV's IR sensor. Obstacles can block the signal.

OPERATING INSTRUCTIONS

The remote control provides intuitive access to your Sceptre Smart Android TV's functions. Below are key operational features:

- **Power Button (●):** Press to turn the TV on or off.
- **Number Pad (0-9):** Use to directly input channel numbers or other numerical selections.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Navigate through menus, select items, and confirm choices.
- **Volume Control (VOL +/-):** Adjust the TV's volume level.
- **Channel Control (CH +/-):** Change TV channels.
- **Mute Button ():** Mute or unmute the TV's audio.
- **Home Button (HOME):** Return to the TV's main home screen.
- **Back Button (BACK):** Go back to the previous screen or menu.
- **Menu Button (MENU):** Access the TV's main menu for settings and options.
- **Guide Button (GUIDE):** Open the electronic program guide (if available).
- **Dedicated App Buttons:**
 - **NETFLIX:** Directly launch the Netflix application.
 - **Google Play:** Directly launch the Google Play Store or Google Play Movies & TV.
 - **YouTube:** Directly launch the YouTube application.
 - **VUDU:** Directly launch the Vudu application.
- **Source Button (SOURCE):** Cycle through input sources (HDMI, AV, etc.).
- **Color Buttons (Red, Green, Yellow, Blue):** These buttons may have specific functions depending on the application or TV menu. Refer to your TV's on-screen prompts.

TROUBLESHOOTING

If your remote control is not functioning as expected, please follow these troubleshooting steps:

1. **Check for Obstacles:** Ensure there are no objects blocking the line of sight between the remote control and the TV's infrared sensor. The sensor is typically located in the bottom left or bottom right corner of the television.
2. **Replace Batteries:** Insert new AAA alkaline batteries into the remote control. Verify that the positive (+) and negative (-) ends are correctly installed.
3. **Power Cycle the Remote:**
 - Remove the batteries from the remote.
 - Press every button on the remote at least once to drain any residual power. This also helps to check for stuck buttons.
 - Re-insert the batteries back into the remote.
4. **Power Cycle the TV:** If the remote still does not work, try power cycling your TV. Unplug the TV from the power outlet, press and hold its power button for five seconds, then plug the TV back in and turn it on. Test the remote control again.

If these steps do not resolve the issue, please refer to the support information provided with your Sceptre TV or contact UBay customer support.

SPECIFICATIONS

Brand	UBay
Model Number	UB-Sceptre-280401010470
Compatible Devices	Sceptre Smart Android TV (UMC and SRC Series)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	8 x 1.8 x 0.5 inches
Item Weight	2.11 ounces
Color	Black

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or aerosol sprays, as they may damage the device.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact UBay customer service through the retailer where the product was acquired. Keep your purchase receipt for warranty claims.

© 2023 UBay. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question