

Manuals.plus /
› TOPPING /
› Topping A30 Pro NFCA Headphone Amplifier User Manual

TOPPING A30 Pro

Topping A30 Pro NFCA Headphone Amplifier

User Manual

Model: A30 Pro | Brand: TOPPING

INTRODUCTION

Thank you for purchasing the Topping A30 Pro NFCA Headphone Amplifier. This high-performance audio device is designed to deliver exceptional sound quality for a wide range of headphones, from sensitive in-ear monitors (IEMs) to high-impedance over-ear headphones. Featuring a new specifically redesigned NFCA-based circuit, the A30 Pro offers ultra-low distortion and noise, ensuring an accurate and transparent audio experience. Please read this manual thoroughly before operating the device to ensure proper use and optimal performance.



Figure 1: Front view of the Topping A30 Pro Headphone Amplifier, showing inputs, gain switch, and volume knob.

SETUP GUIDE

Follow these steps to set up your Topping A30 Pro amplifier:

1. **Power Connection:** Connect the provided power cable to the AC input on the rear panel of the A30 Pro and then to a suitable power outlet. Ensure the power switch is in the 'OFF' position before connecting.

2. Audio Source Connection:

- **RCA Input:** Connect your audio source (e.g., DAC, preamplifier) to the RCA (L/R) input jacks on the rear panel using high-quality RCA cables.
- **XLR Input:** Alternatively, connect a balanced audio source to the XLR (L/R) input jacks on the rear panel using XLR cables.

3. Headphone Connection:

Connect your headphones to one of the output jacks on the front panel:

- **4-PIN XLR:** For balanced headphones with a 4-pin XLR connector.
 - **4.4mm:** For balanced headphones with a 4.4mm Pentaconn connector.
 - **6.35mm:** For single-ended headphones with a 6.35mm (1/4 inch) stereo plug.
4. **Input Selection:** On the front panel, use the 'INPUT' switch to select between 'RCA' or 'XLR' depending on your connected source. Set to 'OFF' when not in use.
5. **Gain Setting:** Adjust the 'GAIN' switch to 'L' (Low), 'M' (Medium), or 'H' (High) based on the sensitivity of your headphones. Start with 'L' for highly sensitive headphones (like IEMs) and increase if more volume is needed for less sensitive headphones.



Figure 2: Front and rear views of the Topping A30 Pro, illustrating input and output connections.

OPERATING INSTRUCTIONS

Once the A30 Pro is set up, follow these steps for operation:

1. **Power On:** Ensure the volume knob is turned down to its minimum position. Flip the power switch on the rear panel to 'ON'. The front panel indicator will illuminate.
2. **Select Input:** Use the 'INPUT' toggle switch on the front panel to select the active audio source (RCA or XLR).
3. **Adjust Gain:** Select the appropriate gain setting (L, M, H) using the 'GAIN' switch. This allows the A30 Pro to adapt

to a wide range of headphone sensitivities and impedances. For most headphones, start with 'M' and adjust as needed.

4. **Volume Control:** Slowly rotate the large volume knob clockwise to increase the listening volume. Adjust to a comfortable listening level. Avoid excessively high volumes to prevent hearing damage and potential damage to your headphones.
5. **Power Off:** When finished listening, turn the volume knob down to its minimum, then flip the power switch on the rear panel to 'OFF'.

The A30 Pro utilizes Topping's NFCA (Nested Feedback Composite Amplifier) module, which contributes to its extremely low distortion (THD+N no higher than 0.00006%) and high dynamic range, providing a clean and powerful audio signal.

MAINTENANCE

Proper care will ensure the longevity and optimal performance of your A30 Pro:

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the unit. Do not use liquid cleaners, aerosols, or abrasive chemicals, as they may damage the finish or internal components.
- **Ventilation:** Ensure the amplifier has adequate ventilation. Do not block the ventilation holes on the top or sides of the unit. Avoid placing it in enclosed spaces or on soft surfaces that could impede airflow.
- **Environment:** Keep the unit away from direct sunlight, heat sources, excessive dust, moisture, and strong electromagnetic fields.
- **Handling:** Handle the unit with care. Avoid dropping or subjecting it to strong impacts.

TROUBLESHOOTING

If you encounter issues with your A30 Pro, please refer to the following common problems and solutions:

- **No Power:**
 - Check if the power cable is securely connected to both the amplifier and the power outlet.
 - Verify that the power outlet is functional.
 - Ensure the power switch on the rear panel is in the 'ON' position.
- **No Sound:**
 - Confirm that your audio source is playing and properly connected to the A30 Pro's input.
 - Ensure the 'INPUT' switch on the front panel matches the connected source (RCA or XLR).
 - Check that your headphones are securely plugged into the correct output jack.
 - Increase the volume knob slowly.
 - Verify that the gain setting ('L', 'M', 'H') is appropriate for your headphones.
 - Test with a different audio source or headphones to isolate the issue.
- **Distorted Sound:**
 - Reduce the volume level.
 - Check if the gain setting is too high for your headphones. Try a lower gain setting.
 - Ensure all cables are securely connected and not damaged.
 - Test with a different audio source or headphones to determine if the distortion originates from the amplifier or another component.

If the problem persists after trying these solutions, please contact customer support.

TECHNICAL SPECIFICATIONS

Below are the key specifications for the Topping A30 Pro Headphone Amplifier:

Feature	Specification
Model Number	A30 Pro
Dimensions (Package)	11.1 x 7.95 x 3.07 inches
Item Weight	2.72 pounds
Manufacturer	Fanmusic
ASIN	B08Y87LK94
THD+N	No higher than 0.00006%
Circuit Design	NFCA-based circuit with OPA1656
Output Connectors	4-PIN XLR, 4.4mm, 6.35mm
Gain Settings	3-step (L, M, H)
Date First Available	February 7, 2021

WARRANTY INFORMATION

Topping products typically come with a limited manufacturer's warranty. Please refer to the warranty card included with your product packaging or visit the official TOPPING website for detailed warranty terms and conditions. Retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries, please contact TOPPING customer support through their official website or the retailer from whom you purchased the product. Provide your product model number (A30 Pro) and purchase details when contacting support.

Official TOPPING Website: <https://www.tpdz.net/>

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08Y87LK94>

More documents and user manuals: <https://manuals.plus/>