

[Manuals.plus](#) /

› [Aoslen](#) /

› Aoslen Wireless Headphones L8-3 W User Manual

Aoslen L8-3 W

Aoslen Wireless Headphones L8-3 W User Manual

Model: L8-3 W

INTRODUCTION

Thank you for choosing Aoslen Wireless Headphones. These in-ear headphones feature Bluetooth 5.0 technology for a stable connection and touch controls for easy operation. This manual provides detailed instructions to help you get the most out of your device.



Image: Aoslen Wireless Headphones L8-3 W, showcasing the earbuds and charging case.

WHAT'S IN THE BOX

- Aoslen Wireless Earbuds (Left and Right)
- Wireless Charging Case
- USB Charging Cable
- User Manual

SETUP

1. Charging the Headphones and Case

Before first use, fully charge the headphones and the charging case. Connect the provided USB charging cable to the charging case and a power source. The LED display on the case will indicate the charging status.

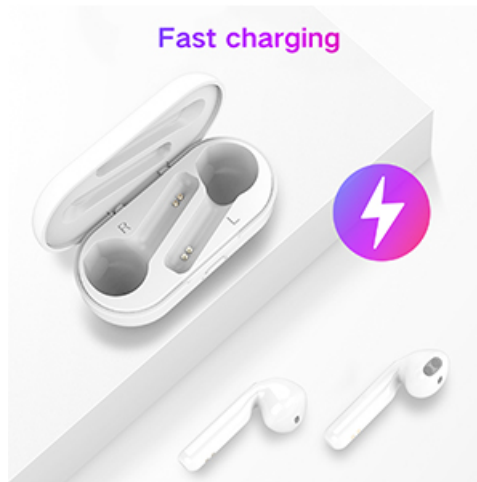


Image: Illustration of the fast charging capability for the earbuds within their charging case.

2. Pairing with Your Device

1. **Automatic Power On:** Remove both earbuds from the charging case. They will automatically power on and enter pairing mode.
2. **Bluetooth Connection:** On your device (smartphone, tablet, etc.), go to Bluetooth settings and search for available devices. Select "TWS L8" or "L8" from the list.
3. **Confirmation:** Once connected, a voice prompt will confirm successful pairing. The earbuds are now ready for use.

One-click pairing

Take out the earphones from the charging case
Choose the connection "TWS L8"



Image: A smartphone screen showing the Bluetooth pairing menu, with "TWS L8" selected for connection. The headphones utilize Bluetooth 5.0 for a stable and low-latency connection.

Bluetooth 5.0



Image: Visual representation of Bluetooth 5.0 technology integrated into the earbuds.

The Aoslen L8-3 W headphones feature intuitive touch controls on each earbud.

Super Easy Operate



Turn ON/OFF
Long Touch 5 Seconds



Answer phone call
Quickly touch 1 times



Refuse phone call
Touch 2 Seconds



Play/Pause
Quickly Touch 1 times



Previous Track
Quickly Touch 2 times at Left Side



Next Track
Quickly Touch 2 times at Right Side



Wake up/Quit SIRI or
Google Assistant
Touch 3 times



Image: Diagram illustrating the touch control functions on the earbud, including power, call management, music playback, and voice assistant activation.

Touch Control Functions:

- **Power ON/OFF:** Long touch for 5 seconds.
- **Answer/End Call:** Quickly touch 1 time.

- **Refuse Call:** Touch for 2 seconds.
- **Play/Pause Music:** Quickly touch 1 time.
- **Previous Track:** Quickly touch 2 times on the Left earbud.
- **Next Track:** Quickly touch 2 times on the Right earbud.
- **Activate Voice Assistant (Siri/Google Assistant):** Touch 3 times.

Mono Mode

You can use either the left or right earbud independently. Simply take one earbud out of the charging case, and it will automatically connect to your device. This is useful for calls or when you need to be aware of your surroundings.

Mono Modus & Freigabemodus



Image: Depiction of using a single earbud in mono mode, allowing for individual use.

MAINTENANCE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.
- **Water Resistance:** The headphones are IPX6 sweat and water resistant, suitable for workouts and light rain. Do not submerge them in water.



IPX6 Sweat & Water Resistant

Absolutely ideal and perfect for the gym, sports lovers and all kinds of outdoor activities.

Image: A person exercising while wearing the earbuds, highlighting their IPX6 sweat and water resistance.

TROUBLESHOOTING

- **Earbuds not pairing with each other:** Place both earbuds back into the charging case, then remove them simultaneously. They should automatically pair.
- **Earbuds not connecting to device:** Ensure Bluetooth is enabled on your device. Forget the device in your Bluetooth settings and try pairing again. Ensure earbuds are charged.
- **No sound from one earbud:** Check if both earbuds are charged. Try re-pairing them.
- **Charging issues:** Ensure the charging cable is securely connected to both the case and the power source. Clean the charging contacts on the earbuds and inside the case.
- **Uncomfortable fit:** The earbuds feature an ergonomic design for comfort. Adjust their position in your ear for the best fit.

All-day Comfort Fit

Ergonomic in-ear design (only 4g)



Image: Diagram showing the ergonomic in-ear design of the earbuds for a comfortable and secure fit.

SPECIFICATIONS

Feature	Detail
Brand	Aoslen
Model Number	L8-3 W
Connectivity Technology	Bluetooth 5.0
Ear Placement	In Ear
Form Factor	In Ear

Control Method	Touch
Noise Control	None
Included Components	Wireless Charging Case
Product Features	Lightweight, Microphone Included, Touch Control
Material	Plastic

SAFETY INFORMATION

- Do not expose the product to extreme temperatures or humidity.
- Avoid dropping or applying excessive force to the earbuds or charging case.
- Keep out of reach of children and pets.
- Do not attempt to disassemble or modify the product.
- Use only the provided charging cable or a certified equivalent.
- Prolonged listening at high volume levels may cause hearing damage.

WARRANTY AND SUPPORT

Aoslen products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Aoslen website. Please retain your proof of purchase for any warranty claims.

© 2026 Aoslen. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question