

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA TX6 Remote Control User Manual for Android TV Box

ASHATA TX6

ASHATA TX6 Remote Control User Manual

For Android TV Boxes: Tanix TX5 Max, TX3 Max, TX6, TX92, Allwinner H6

1. INTRODUCTION

Welcome to the user manual for your ASHATA TX6 Remote Control. This guide provides essential instructions for setting up, operating, and maintaining your new remote control, ensuring optimal performance with your compatible Android TV Box.

2. PRODUCT OVERVIEW

The ASHATA TX6 is a dedicated replacement infrared remote control designed for various Android TV Box models. It offers a straightforward, plug-and-play solution for controlling your compatible device without complex setup procedures.

Key Features

- No programming required for immediate use.
- Provides full access to all standard remote control functions.
- Constructed with a durable ABS shell and comfortable silicone buttons.
- Effective remote distance of up to 10 meters (33 feet).

Compatibility

This remote control is specifically designed for and compatible with the following Android TV Box models:

- Tanix TX5 Max
- Tanix TX3 Max
- TX6
- TX92
- Android devices featuring the Allwinner H6 processor







Figure 1: Front view of the ASHATA TX6 Remote Control.

3. SETUP

Installing Batteries

To begin using your ASHATA TX6 remote control, you must first install the batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: AAA batteries are not included with the remote control and must be purchased separately.





Figure 2: Battery compartment on the back of the remote control.

4. OPERATING INSTRUCTIONS

The ASHATA TX6 remote control operates using infrared (IR) technology. For reliable operation, ensure there is a clear, unobstructed line of sight between the remote control and the IR receiver on your Android TV Box.

Basic Functions

- **Power Button (Red):** Located at the top left, this button turns your Android TV Box on or off.
- **Mute Button:** Mutes or unmutes the audio output.
- **Volume Up/Down:** Adjusts the audio volume level.
- **Navigation Pad (Arrows and OK):** The central circular pad allows you to navigate through menus (Up, Down, Left, Right) and confirm selections (OK button).
- **Home Button:** Returns you to the main home screen of your Android TV Box.
- **Menu Button:** Accesses context-sensitive menus or options within applications.
- **Back Button:** Returns to the previous screen or menu.
- **Number Pad (0-9):** For direct input of numbers, such as channel selection or passwords.
- **Mouse/Cursor Button:** Activates or deactivates a virtual mouse cursor on screen, if supported by your TV Box.
- **Mail/Message Button:** Provides quick access to mail or messaging applications, if available on your device.



Figure 3: ASHATA TX6 remote control in use.

5. MAINTENANCE

Proper care and maintenance will extend the lifespan of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's responsiveness decreases or it stops functioning. Always replace both AAA batteries simultaneously to ensure consistent power.
- **Storage:** Store the remote control in a cool, dry place, away from direct sunlight, high humidity, and extreme temperatures.
- **Disposal:** Dispose of used batteries and the remote control itself according to local environmental regulations. Do not dispose of batteries in household waste.

6. TROUBLESHOOTING

If you encounter issues with your ASHATA TX6 remote control, refer to the following troubleshooting steps:

Remote is not responding:

- Ensure that the batteries are inserted correctly with the positive (+) and negative (-) terminals aligned.
- Replace old batteries with a fresh pair of AAA batteries.
- Check for any physical obstructions between the remote control and the infrared receiver on your Android TV Box.
- Verify that your Android TV Box model is listed as compatible with the ASHATA TX6 remote control.

Buttons are not working correctly:

- Clean the remote control to remove any dirt, dust, or debris that might be interfering with button presses.
- Ensure the remote is pointed directly at the TV Box's IR receiver.

Short remote distance:

- Replace the batteries, as low battery power can reduce the effective range.
- Ensure there are no strong light sources (e.g., direct sunlight, fluorescent lights) or other infrared devices interfering with the signal.

Fitment:
Fit for Android TV Box for Tanix TX5 Max TX3 Max
Fit for TX6 TX92
Fit for android for allwinner H6

- Made of ABS material
Wear-resistant and durable, ensuring long-term service life.
- High sensitivity, remote distance is up to 10m/33ft



Figure 4: Remote control with signal graphic, emphasizing its range and compatibility.

7. SPECIFICATIONS

Feature	Detail
Brand	ASHATA
Model	TX6
Material	ABS Shell + Silicone Button
Color	Black
Remote Distance	Up to 10 meters (33 feet)

Feature	Detail
Battery Type	2 x AAA batteries (not included)
Connectivity Technology	Infrared
Compatible Devices	Android TV Box (Tanix TX5 Max, TX3 Max, TX6, TX92, Allwinner H6)

8. WARRANTY AND SUPPORT

For specific warranty information and customer support regarding your ASHATA TX6 remote control, please refer to the documentation provided with your original Android TV Box or contact the seller directly through your purchase platform. ASHATA is committed to providing quality products, and any specific warranty details for this replacement remote would typically be handled by the point of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08Y8ZF4GD>

More documents and user manuals: <https://manuals.plus/>