

[Manuals.plus](#) /

› [Bosch](#) /

› Bosch MoveOn Bagged Vacuum Cleaner BGL35MOV24 User Manual

Bosch BGL35MOV24

Bosch MoveOn Bagged Vacuum Cleaner BGL35MOV24 User Manual

Model: BGL35MOV24

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using your Bosch MoveOn BGL35MOV24 vacuum cleaner. Keep this manual for future reference.

- Always ensure the voltage rating on the appliance matches your mains supply voltage.
- Do not use the vacuum cleaner on wet surfaces or to pick up liquids.
- Do not pick up burning or smoking objects, such as cigarettes, matches, or hot ashes.
- Do not use the appliance without the dust bag and filters correctly installed.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug the appliance from the mains socket before cleaning or maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. PRODUCT OVERVIEW

The Bosch MoveOn BGL35MOV24 is a powerful bagged vacuum cleaner designed for efficient cleaning of various floor types. It features a robust motor and a HEPA filter for improved air quality.



Figure 2.1: Front view of the Bosch MoveOn BGL35MOV24 Bagged Vacuum Cleaner with hose and nozzle attached.



Figure 2.2: Top-down view of the vacuum cleaner, highlighting the control panel and carrying handle.



Figure 2.3: Detail of the 'move on' wheel, indicating smooth maneuverability.

3. SETUP

Follow these steps to assemble your vacuum cleaner before first use:

1. **Attach the Hose:** Insert the flexible hose into the suction inlet on the main unit until it clicks securely into place.
2. **Assemble the Telescopic Tube:** Connect the telescopic tube to the hose handle. Adjust the tube length to a comfortable working height by pressing the release button and extending or retracting.
3. **Attach the Floor Nozzle:** Securely attach the universal floor nozzle to the end of the telescopic tube. Ensure it is firmly seated.
4. **Check Dust Bag:** Verify that a dust bag is correctly inserted into the dust bag compartment. Refer to Section 5 for dust bag replacement instructions.
5. **Power Connection:** Extend the power cord and plug it into a suitable mains socket.

4. OPERATING INSTRUCTIONS

Operating your Bosch MoveOn vacuum cleaner is straightforward:

1. **Power On/Off:** Press the On/Off push button (usually located on the main unit) to start or stop the vacuum cleaner.
2. **Adjust Suction Power:** Use the rotary control or slide switch (if present) on the main unit or hose handle to adjust the suction power according to the surface being cleaned. Lower settings are suitable for delicate fabrics or light cleaning, while higher settings are for carpets and heavily soiled areas.
3. **Floor Nozzle Adjustment:** The universal floor nozzle typically has a switch to adjust between hard floor and carpet settings. Ensure the correct setting is selected for optimal cleaning performance.
4. **Retract Power Cord:** After use, unplug the power cord from the socket. Press the cord rewind button (if available) to automatically retract the cord into the appliance. Guide the cord to prevent whipping.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

5.1 Replacing the Dust Bag

1. Unplug the vacuum cleaner from the power supply.
2. Open the dust bag compartment cover.
3. Carefully remove the full dust bag from its holder. Most bags have a self-closing mechanism to prevent dust

leakage.

4. Insert a new, genuine Bosch dust bag into the holder, ensuring it is correctly seated and sealed.
5. Close the dust bag compartment cover until it clicks shut.

5.2 Cleaning the HEPA Filter

The HEPA filter should be checked regularly and replaced when heavily soiled, typically every 6-12 months depending on usage.

1. Unplug the vacuum cleaner.
2. Locate the HEPA filter compartment, usually at the rear or side of the appliance.
3. Remove the filter. Some HEPA filters are washable; if yours is, rinse it under cold running water without detergents and allow it to air dry completely for at least 24 hours before reinserting. If it's not washable, replace it with a new one.
4. Reinsert the clean or new HEPA filter and close the compartment cover.

5.3 Cleaning the Nozzle and Accessories

Periodically check the floor nozzle and other accessories for blockages (e.g., hair, threads). Remove any obstructions to maintain effective suction.

6. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not switch on.	No power supply.	Check if the plug is correctly inserted into the socket. Check the fuse/circuit breaker.
Low suction power.	Full dust bag, blocked filter, or obstruction in hose/nozzle.	Replace the dust bag. Clean or replace the HEPA filter. Check hose, tube, and nozzle for blockages and remove them.
Unusual noise during operation.	Foreign object in the fan or motor, or a worn component.	Switch off and unplug. Check for foreign objects in the nozzle, hose, or main unit. If the noise persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand Name	Bosch
Model Number	BGL35MOV24
Power Source	Corded Electric
Wattage	2400 Watts
Voltage	240 Volts
Filter Type	HEPA Filter

Feature	Detail
Surface Recommendation	All Floors
Bagged/Bagless	Bagged
Item Weight	6 Kilograms
Product Dimensions (LxWxH)	44 x 30 x 28 cm
Control Type	Push Button
Form Factor	Canister

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Bosch MoveOn BGL35MOV24 vacuum cleaner comes with **atwo-year warranty** from the date of purchase. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects under normal household use. It does not cover damage caused by misuse, neglect, accidental damage, or unauthorized repairs.

8.2 Customer Support

For technical assistance, spare parts, or warranty service, please contact Bosch customer support in your region. You can usually find contact details on the official Bosch website or in the packaging materials.

When contacting support, please have your model number (BGL35MOV24) and proof of purchase ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08Y8ZRFKC>

More documents and user manuals: <https://manuals.plus/>