

[Manuals.plus](#) /

> [Accutime](#) /

> Minecraft Kids Smart Watch – Touchscreen Interactive Watch with 10 Customizable Clock Faces, Built-in Camera, Video Recorder, Alarm, Calculator, Games & Pedometer – Fits Wrists 5.5" to 8"

Accutime MIN4045AZ

Minecraft Kids Smart Watch Instruction Manual

Brand: **Accutime**

Model: **MIN4045AZ**

PRODUCT OVERVIEW

The Accutime Minecraft Kids Smart Watch is an interactive device designed for young Minecraft enthusiasts. It features a touchscreen display with customizable Minecraft-themed clock faces, a built-in camera for photos and videos, and a voice recorder. Beyond entertainment, it includes practical tools such as an alarm, calculator, games, and a pedometer to encourage learning and healthy habits. This smartwatch operates independently, without internet, Wi-Fi, Bluetooth, or other wireless technologies, ensuring a safe experience for children.





Figure 1: Front view of the Minecraft Kids Smart Watch, showcasing its vibrant green color and touchscreen display.





Figure 2: A collage highlighting key features of the smartwatch, including the selfie camera, changeable watch faces, and interactive games.

WHAT'S IN THE BOX

- Minecraft Kids Smart Watch (Model: MIN4045AZ)
- USB Cable (for charging and data transfer)
- Instruction Manual



Figure 3: The Minecraft Smart Watch displayed with its included USB charging cable and packaging.

SETUP

Initial Charging

Before initial use, fully charge the smartwatch for at least two hours to ensure optimal battery performance. Locate the USB port on the side of the watch (refer to Figure 4). Open the protective flap and connect the provided USB cable. Connect the other end of the USB cable to a compatible USB power source (e.g., computer USB port, USB wall adapter).



Figure 4: Side view of the smartwatch, indicating the location of the USB charging port.

Powering On/Off

To power on the watch, press and hold the power button located on the side until the Minecraft logo appears. To power off, press and hold the power button until the screen prompts you to shut down.

OPERATING INSTRUCTIONS

Basic Navigation

The smartwatch features a touchscreen for easy navigation. Swipe left or right on the screen to browse through different applications and features. Tap on an icon to select and open an application.

Changing Watch Faces

The watch comes with 10 customizable Minecraft-themed clock faces. To change the watch face, press and hold on the center of the current watch face. Swipe left or right to preview the available designs, then tap to select your preferred one.



Figure 5: A selection of the 10 customizable Minecraft watch faces available on the device.

Your browser does not support the video tag.

Video 1: Demonstrates how to switch between the different watch faces on the Minecraft Smart Watch.

Camera and Video Recorder

Capture fun moments with the built-in selfie camera and video recorder. Tap the 'Camera' icon to take photos or the 'Video' icon to record videos. Photos and videos can be viewed in the 'Album Viewer'.

Your browser does not support the video tag.

Video 2: Overview of the camera and video recording features available on the smartwatch.

Voice Recorder

Record and playback voice messages using the voice recorder feature. This can be found under 'Time Tools' or as a dedicated 'Voice Recorder' icon.

Games

The smartwatch comes preloaded with various mini-games for entertainment. Navigate to the 'Games' section to explore and play. These games are designed to be kid-friendly and engaging.

Pedometer

The built-in pedometer tracks steps, encouraging physical activity. Access the pedometer feature to view daily step counts.

Alarm, Timer, and Calculator

Utilize the 'Time Tools' section for the alarm, stopwatch, and timer functions. A separate 'Calculator' application is also available for basic arithmetic.

MAINTENANCE

Charging

Regularly charge the watch using the provided USB cable. Avoid charging for more than 3 hours or overnight, as this may weaken the battery life. The screen may be blank while charging for the first 30 minutes.

Cleaning

Wipe the watch and strap with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials that could damage the device.

TROUBLESHOOTING

Problem	Solution
Watch does not turn on.	Ensure the watch is fully charged. Press and hold the power button for several seconds.
Screen is blank during charging.	This is normal for the first 30 minutes of charging. If it persists, ensure the cable is properly connected.
Features are not responding.	Try restarting the watch by powering it off and then on again. If issues persist, a factory reset may be necessary (refer to Settings).

SPECIFICATIONS

- **Model Number:** MIN4045AZ
- **Dimensions:** 8.5 x 1.57 x 0.47 inches
- **Item Weight:** 1.41 ounces
- **Battery:** 1 Lithium Ion battery (included)
- **Strap Material:** Durable silicone
- **Wrist Fit:** 5.5" to 8"
- **Connectivity:** No internet, Wi-Fi, Bluetooth, or wireless technology
- **Manufacturer:** Accutime Watch Corp.
- **Country of Origin:** China

- **Release Date:** March 9, 2021



Figure 6: Close-up view of the smartwatch strap, highlighting its durable silicone material and pixelated Minecraft-inspired design.

WARRANTY AND SUPPORT

The Accutime Minecraft Kids Smart Watch comes with a one-year warranty from Accutime Watch. For support or warranty claims, please refer to the contact information provided in the included instruction manual or visit the official Accutime website.

Additional protection plans are available for purchase separately:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect (monthly plan covering eligible purchases)