

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Tefal](#) /

› [Tefal Pure Tex Garment Steamer User Manual](#)

Tefal DT9530E1

Tefal Pure Tex Garment Steamer User Manual

Model: DT9530E1

1. INTRODUCTION

Thank you for choosing the Tefal Pure Tex Garment Steamer, Model DT9530E1. This innovative handheld steamer is designed to simplify your daily textile care with its unique multi-pad system, offering four essential functions: sterilization, wrinkle removal, cleaning, and fragrancing. It is suitable for a wide range of home textiles, providing efficient and hygienic results. Please read this manual carefully before first use to ensure safe and optimal operation of your appliance.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Use the appliance only for its intended use.
- To protect against a risk of electric shock, do not immerse the appliance in water or other liquids.
- Always turn the appliance off before plugging or unplugging from the outlet.
- Do not allow the cord to touch hot surfaces. Let the appliance cool completely before putting away.
- Never pull on the cord to disconnect from the outlet; instead, grasp the plug and pull to disconnect.
- Do not operate the appliance with a damaged cord or if the appliance has been dropped or damaged.
- Close supervision is necessary for any appliance being used by or near children.
- Do not leave the appliance unattended while it is connected or operating.
- Use only attachments recommended by the manufacturer.
- Do not direct steam at people, animals, or electrical appliances.
- The appliance heats up quickly. Wait until the appliance is fully heated and ready for use before operating.

3. PRODUCT OVERVIEW

The Tefal Pure Tex Garment Steamer is designed for ease of use and versatility. Familiarize yourself with its main components:



Figure 3.1: Front view of the Tefal Pure Tex Garment Steamer, showcasing its ergonomic design and steam head.



Figure 3.2: Side view of the Tefal Pure Tex Garment Steamer, highlighting the water tank and handle.

3.1 Multi-Pad System

The Pure Tex features an exclusive multi-pad system with intelligent, replaceable, and reversible pads. These pads are key to its multi-functional capabilities.



Figure 3.3: Exploded view showing the various pads and accessories that attach to the steamer head, including the cleaning pad and fragrance pad.

- **Cleaning Pad:** The microfiber side of this reversible pad effectively removes hair, lint, and dust from all types of fabrics, even those difficult to clean or wash.
- **Fragrance Pad (MonParfum):** Use this pad with your preferred fragrance to infuse textiles with a fresh scent while steaming.
- **Steam Head:** Equipped with a heated soleplate and continuous steam output for efficient wrinkle removal and sanitization.
- **Water Tank:** Removable tank for easy refilling.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Fill Water Tank:** Remove the water tank from the appliance. Fill it with clean tap water up to the maximum fill line. Do not overfill. Reattach the water tank securely.
3. **Attach Desired Pad:** Select the appropriate pad (e.g., cleaning, fragrance) for your task and attach it firmly to the steam head.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet (230 Volts).
5. **Heat-up:** The appliance will begin to heat up. It takes approximately 15 seconds to reach operating temperature. An indicator light will signal when the steamer is ready for use.

5. OPERATING INSTRUCTIONS

5.1 General Steaming Guidelines

- Always test on an inconspicuous area of the fabric first.
- Hold the fabric taut with one hand while steaming with the other.
- Move the steam head slowly over the fabric, allowing the steam to penetrate.
- For best results, steam vertically.

5.2 Wrinkle Removal (Smoothing)

The Pure Tex's unique heated soleplate technology and powerful steam output (up to 30 g/min continuous steam, with an exclusive pressing effect up to 90 g/min) efficiently remove wrinkles.



Figure 5.1: A user demonstrating the wrinkle removal function on a shirt, holding the fabric taut for effective steaming.

1. Ensure the water tank is filled and the appliance is heated.
2. Hold the steamer vertically and gently press the steam trigger.
3. Glide the steam head over the wrinkled areas of your garment.
4. For stubborn wrinkles, apply the pressing effect by pressing the dedicated button (if available on your model) or by pressing the steam head more firmly against the fabric.

5.3 Sterilization and Odor Removal

The powerful steam eliminates odors and kills up to 99.9% of viruses, bacteria, and germs on textiles.



Figure 5.2: The steamer being used to sanitize and refresh a pillow on a sofa, demonstrating its use on home textiles.



Figure 5.3: A user applying steam to a baby stroller, illustrating the sterilization capability for various fabric items.

1. Hold the steamer close to the fabric surface.
2. Move the steam head slowly and evenly over the area you wish to sterilize or deodorize.
3. Ensure adequate ventilation in the room.

5.4 Cleaning (Lint and Dust Removal)

Attach the cleaning pad to remove lint, hair, and dust from your textiles.

1. Attach the microfiber cleaning pad to the steam head.
2. Without activating steam, gently brush the fabric surface with the pad to collect debris.
3. Periodically remove and clean the pad as it collects lint.

5.5 Fragrancing

Use the MonParfum pad to add your favorite scent to your textiles.

1. Apply a few drops of your chosen fragrance to the MonParfum pad.
2. Attach the fragrance pad to the steam head.
3. Steam your textiles as usual. The steam will help diffuse the fragrance.

6. MAINTENANCE

6.1 Cleaning the Appliance

- Always unplug the appliance and allow it to cool completely before cleaning.
- Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Empty any remaining water from the tank after each use.

6.2 Cleaning the Pads

- The cleaning and fragrance pads can be hand-washed with mild soap and water, or machine-washed according to their care instructions.
- Allow pads to air dry completely before reattaching or storing.

6.3 Descaling

Depending on the hardness of your water, mineral deposits may build up in the appliance over time. Regular descaling is recommended to maintain optimal performance.

1. Consult the full instruction manual for detailed descaling procedures specific to your model.
2. Generally, this involves using a descaling solution or a mixture of water and white vinegar.
3. Never use harsh chemicals or abrasive materials for descaling.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or very little steam.	Water tank empty or low. Appliance not heated sufficiently. Mineral buildup.	Refill water tank. Wait for the appliance to fully heat up (approx. 15 seconds). Perform descaling.
Water leaking from steam head.	Appliance not hot enough. Overfilled water tank.	Allow appliance to heat up completely. Do not overfill the water tank.
Appliance not turning on.	Not plugged in correctly. Power outlet issue.	Check power cord connection. Try a different power outlet.
Pads not staying attached.	Pads worn out or incorrectly attached.	Ensure pads are correctly aligned and clicked into place. Replace worn pads if necessary.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Brand: Tefal

Model Number: DT9530E1

Color: White/Blue

Power: 1700 Watts

Voltage: 230 Volts

Dimensions (L x W x H): 18 x 12 x 28.2 cm (7.09 x 4.72 x 11.1 inches)

Item Weight: 1.23 Kilograms (2.71 pounds)

Material: Aluminum

Heat-up Time: 15 seconds

Key Features: Interchangeable pads, Eliminates up to 99.9% of viruses, bacteria, and germs, 4 functions in one device.

9. WARRANTY AND SUPPORT

Tefal products are designed for durability and ease of repair. This appliance is backed by Tefal's commitment to reparability for 15 years at a fair price, with access to 6200 recognized repair workshops worldwide.



Figure 9.1: Tefal's commitment to 15-year repairability.

For warranty claims, technical support, or to find a repair center, please visit the official Tefal website or contact their customer service department. Keep your proof of purchase for warranty validation.

Online Support: [Visit the official Tefal Brand Store](#)

