

[Manuals.plus](#) /

› [SRJTEK](#) /

› Instruction Manual for SRJTEK 10.1 Inch Touch Screen Replacement for Digiland DL1016 Tablet PC

SRJTEK DL1016

Instruction Manual for SRJTEK 10.1 Inch Touch Screen Replacement

BRAND: SRJTEK

Model: DL1016

INTRODUCTION

This manual provides essential information for the installation and care of your SRJTEK 10.1 Inch Touch Screen Replacement, specifically designed for the Digiland DL1016 Tablet PC. This product is intended to repair broken or malfunctioning touch screens, restoring full functionality to your device.

PACKAGE CONTENTS

Upon opening the package, please verify that all components are present and undamaged. The standard package includes:

- 1 x Touch Screen Digitizer for Digiland DL1016
- 1 x Repair Tool Kits (typically includes screwdrivers, prying tools, suction cup, etc.)
- 1 x Adhesive strip for secure installation



Image: The SRJTEK 10.1 inch touch screen replacement for Digiland DL1016, shown alongside the included repair tool kit and adhesive strips. The kit typically contains various small tools necessary for tablet disassembly and reassembly.

SETUP AND INSTALLATION

The installation of a touch screen digitizer requires precision and technical knowledge. **We highly recommend professional installation** to avoid damage to the replacement part or your device. Parts damaged during installation are not accepted for return.

General Installation Guidelines (for reference only):

1. **Preparation:** Power off your tablet completely and disconnect all cables. It is advisable to discharge any static electricity from your body before handling electronic components.
2. **Disassembly:** Carefully open the tablet casing using the provided prying tools. Locate and disconnect the flex cable of the old touch screen from the motherboard.
3. **Remove Old Screen:** Gently remove the damaged touch screen, being mindful of any adhesive or small components.
4. **Clean Surface:** Thoroughly clean the frame where the new screen will be installed, ensuring no dust, debris, or old adhesive remains.
5. **Connect New Screen:** Carefully connect the flex cable of the new SRJTEK touch screen to the motherboard. Ensure the connection is exact and secure.
6. **Test Functionality (Before Final Assembly):** Before applying adhesive and fully reassembling, temporarily power on the tablet to test the touch screen's functionality. Verify that the touch response is accurate across the entire screen and there are no dead pixels or display issues.
7. **Apply Adhesive:** If the test is successful, power off the tablet again. Apply the new adhesive strips to the frame, ensuring even distribution.
8. **Install New Screen:** Carefully position the new touch screen onto the tablet frame, pressing gently to secure it with the adhesive.
9. **Reassembly:** Reassemble the tablet casing, ensuring all clips and screws are properly secured.

Important Note: The flex cable connection to the motherboard must be exact and correct. Incorrect connection can lead

to non-functional touch or damage to the component.

OPERATING INSTRUCTIONS

Once the SRJTEK touch screen replacement is successfully installed, the tablet's touch functionality will be restored. Operate your tablet as you normally would, utilizing the touch screen for navigation, input, and interaction with applications.

- **Touch Response:** The screen is designed for precise and responsive touch input.
- **Multi-touch:** Supports multi-touch gestures as per your tablet's original specifications.
- **Display Quality:** The digitizer is for touch input; the display quality is dependent on your tablet's LCD panel.

MAINTENANCE

Proper maintenance will extend the lifespan of your new touch screen:

- **Cleaning:** Use a soft, lint-free cloth, slightly dampened with water or a screen-specific cleaner, to gently wipe the screen. Avoid harsh chemicals, abrasive materials, or excessive moisture.
- **Protection:** Consider using a screen protector to guard against scratches and minor impacts.
- **Handling:** Avoid applying excessive pressure to the screen or dropping the tablet, as this can cause damage to the digitizer or the underlying LCD.
- **Environment:** Keep the tablet away from extreme temperatures and high humidity.

TROUBLESHOOTING

If you encounter issues after installation, consider the following common troubleshooting steps:

- **No Touch Response:**
 - Ensure the flex cable is securely and correctly connected to the motherboard. A loose or misaligned connection is a common cause.
 - Restart the tablet.
 - Verify that the correct screen model was installed for your tablet.
- **Inaccurate Touch Response / Ghost Touches:**
 - Check for any debris or foreign objects between the screen and the frame.
 - Ensure the screen is seated properly and evenly in the frame. Uneven pressure can cause issues.
 - Perform a factory reset of the tablet (*Note: This will erase all data. Back up important information first*).
- **Screen Not Lighting Up / No Display:**
 - This replacement part is a touch screen digitizer, not the LCD display. If the display itself is not working, the issue is with the LCD, not this touch screen.
 - Ensure the LCD flex cable (separate from the digitizer cable) is also securely connected.

If problems persist after attempting these steps, professional assistance may be required.

SPECIFICATIONS

Feature	Detail
---------	--------

Compatibility	Digiland DL1016 Tablet PC
Screen Size	10.1 Inches
Type	Capacitive Touch Screen Digitizer Panel
Package Dimensions	7.6 x 4.41 x 1.26 inches
Item Weight	4.5 ounces
Manufacturer	SRJTEK
Country of Origin	China
Date First Available	March 10, 2021

WARRANTY AND SUPPORT

SRJTEK provides a **6-month after-sale service** for this product. If the item received has any problems, such as defects or malfunctions not caused by improper installation, you can contact SRJTEK customer service for assistance. We are committed to providing a new replacement or a satisfied solution for valid warranty claims. For support, please contact the seller directly through the platform where the purchase was made. The seller for this product is **srjtek**.

© 2023 SRJTEK. All rights reserved.

This manual is for informational purposes only. SRJTEK is not responsible for any damage or injury caused by improper installation or misuse of the product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08YJBYPHM>

More documents and user manuals: **<https://manuals.plus/>**