

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [binbok](#) /

› **binbok Switch 2 Controller Instruction Manual**

binbok sw021

binbok Switch 2 Controller Instruction Manual

Model: sw021

INTRODUCTION

Thank you for choosing the binbok Wireless Switch 2 Controller. This high-performance gamepad is designed to enhance your gaming experience on Nintendo Switch, Switch Lite, and Switch OLED consoles. Featuring a unique cracking process design, adjustable 8-color LED lighting, precise motion controls, and a comfortable ergonomic grip, this controller offers superior responsiveness and immersive gameplay.

PACKAGE CONTENTS

- 1 x binbok Wireless Switch 2 Controller
- 1 x USB-C Charging Cable
- 1 x User Manual

CONTROLLER LAYOUT

Familiarize yourself with the various buttons and features of your binbok controller:



Figure 1: Front view of the binbok Switch 2 Controller, showcasing its unique crack pattern and illuminated buttons.

Left Analog Stick: For movement and camera control.

D-Pad: Directional input for menus and specific game actions.

Minus (-) Button: Select button.

Screenshot Button: Capture screenshots during gameplay.

Home Button: Return to the console's home screen, power on/off.

Right Analog Stick: For camera control and aiming.

A/B/X/Y Buttons: Standard action buttons.

Plus (+) Button: Start button.

T Button (Turbo): Activates and adjusts Turbo function.

LED Button: Controls LED lighting modes and colors.

L/R Buttons: Shoulder buttons.

ZL/ZR Buttons: Trigger buttons.

USB-C Port: For charging the controller.

Pairing Button: For initial connection with the console.

UNIQUE DESIGN

The binbok controller features a distinctive surface coating with a unique cracking process, making each controller's pattern completely random and unparalleled. This design not only provides a unique aesthetic but also enhances the tactile feel during gameplay.

Unique Crack Process

BINBOK has developed a unique pattern technology.
(Three possible cracks: large, medium and small.)



Figure 2: Examples of the unique crack patterns on binbok controllers.

SETUP AND CONNECTION

Follow these steps to connect your binbok controller to your Nintendo Switch console:

1. Ensure your Nintendo Switch console is powered on and updated to the latest system version.
2. From the Nintendo Switch HOME Menu, select "**Controllers**", then "**Change Grip/Order**".
3. On your binbok controller, press and hold the **Pairing Button** (located on the top edge, near the USB-C port) for more than two seconds.
4. The 4 LED lights on the bottom of the controller will begin to flash, indicating it is in pairing mode.
5. Once successfully connected, the LED lights will stop flashing and indicate the corresponding player number.
6. The controller connects wirelessly via Bluetooth, providing a stable connection up to 23 feet.
7. The controller supports the console's wake-up function. Press the **Home Button** to wake up your console.

OPERATING INSTRUCTIONS

Adjustable LED Lighting Modes

The binbok controller features adjustable 8-color LED lights with various modes. Press the **LED Button** to cycle through the modes:

8-Color Breathing Light

Eight colors difference LED lights with difference modes.



Figure 3: Visual representation of the 8-color adjustable LED lighting modes.

- **Regular Mode:** Cycle through 8 static colors (blue, red, green, yellow, cyan, orange, purple, pink) by pressing the LED button.
- **Breathing Light Mode:** Colors smoothly transition in a breathing pattern.
- **Vibration Mode:** Lights illuminate with controller vibration.
- **Joystick Mode:** Light color changes as you move the joystick.
- **Axis Mode:** All lights illuminate with the movement of the 6-axis gyro.

Your browser does not support the video tag.

Video 1: Demonstration of the binbok Switch Pro Controller's unique adjustable LED lighting modes.

Turbo Function

The Turbo function allows for rapid, continuous button presses, ideal for action games. You can customize the Turbo function for any button and adjust its speed:



Figure 4: Illustration of the Turbo function button and speed adjustment.

1. To activate Turbo: Press and hold the **T Button**, then press the desired action button (A/B/X/Y, L/R, ZL/ZR) once. The LED will flash to confirm.
2. To adjust Turbo speed: While holding the **T Button**, press the **Plus (+) Button** to increase speed or the **Minus (-) Button** to decrease speed.
3. To deactivate Turbo: Press and hold the **T Button**, then press the desired action button twice.

6-Axis Gyro Motion Control

The controller features a built-in 6-axis gyro sensor for precise motion controls, allowing for improved accuracy and responsiveness in games that support motion sensing.

6-Axis Gyro Motion Control

With the 6-axis built-in gyro sensor, we provide you with optimal precision and comfort.



Figure 5: Examples of gameplay utilizing the 6-Axis Gyro Motion Control.

Adjustable Dual Vibration

Experience immersive feedback with dual vibration motors. The controller offers three levels of vibration intensity to suit your preference and game requirements.

Adjustable Dual Vibration

Three levels of vibrations provide great shock feedback, bring the real game experience



Figure 6: Visual representation of the three adjustable vibration levels.

CHARGING AND BATTERY

The binbok controller is equipped with a built-in rechargeable battery. To charge the controller, connect the provided USB-C charging cable to the USB-C port on the top of the controller and plug the other end into a USB power source (e.g., Nintendo Switch dock, USB wall adapter, computer USB port).

The LED indicators on the controller will show the charging status. Once fully charged, the indicators will change or turn off.

MAINTENANCE

- Keep the controller dry and away from moisture.
- Avoid exposing the controller to extreme temperatures.
- Clean the controller with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the controller in a safe place when not in use to prevent damage.

TROUBLESHOOTING

- **Controller not connecting:**
 - Ensure the console is updated to the latest version.
 - Repeat the connection steps in the "Setup and Connection" section.
 - Ensure the controller is charged.
 - Try restarting the Nintendo Switch console.
- **Input lag or disconnection:**
 - Ensure the controller is within the effective wireless range (up to 23 feet).
 - Minimize interference from other wireless devices.
 - Ensure the controller is fully charged.
- **LED lights not working:**
 - Press the LED button to cycle through modes or turn them on.
 - Ensure the controller has sufficient battery charge.

SPECIFICATIONS

Brand	binbok
Model Number	sw021
Product Dimensions	0.79 x 1.18 x 0.5 inches
Item Weight	10.2 ounces
Connectivity Technology	Bluetooth

Compatible Devices	Nintendo Switch, Switch Lite, Switch OLED
Controller Type	Switch Pro Controller
Color	White

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official binbok website. Keep your purchase receipt for warranty claims.