

manuals.plus /

› [LEICKE](#) /

› [LEICKE Portable Bluetooth Speaker Instruction Manual - Model 40502961817](#)

## LEICKE 40502961817

# LEICKE Portable Bluetooth Speaker

Model: 40502961817

## 1. INTRODUCTION

Thank you for choosing the LEICKE Portable Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

## 2. PRODUCT OVERVIEW

The LEICKE Portable Bluetooth Speaker is designed to deliver high-fidelity audio with powerful bass and clear treble. It features Bluetooth 5.0 connectivity, a built-in microphone for hands-free calls, and support for True Wireless Stereo (TWS) pairing for an enhanced audio experience. Its compact design and long battery life make it suitable for various indoor and outdoor activities.



Image 1: LEICKE Portable Bluetooth Speaker with a hand interacting with the control buttons on top.

### 3. PACKAGE CONTENTS

Please check the package for the following items:

- LEICKE Portable Bluetooth Speaker
- USB Charging Cable
- User Manual

If any items are missing or damaged, please contact customer support.

### 4. SETUP

#### 4.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB charging cable to the speaker's

charging port and to a standard USB power adapter (not included) or a computer's USB port. The charging indicator light will illuminate during charging and turn off or change color when fully charged.

- Battery Capacity: 3000 mAh
- Playback Time: Up to 10 hours (actual time may vary based on volume and content)

## 4.2 Powering On/Off

To power on the speaker, press and hold the Power button ( ) for a few seconds until you hear an audible prompt or see an indicator light. To power off, press and hold the Power button again.

## 4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (usually indicated by a flashing LED).
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "LEICKE Speaker" (or similar name) from the list of devices.
4. Once paired, the speaker will emit a confirmation sound, and the LED indicator will stop flashing.

The speaker will automatically attempt to reconnect to the last paired device when powered on.

## 4.4 True Wireless Stereo (TWS) Pairing

To achieve a stereo sound experience, you can pair two LEICKE Portable Bluetooth Speakers together:

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker, press and hold the Mode button (M) for a few seconds. The speaker will enter TWS pairing mode.
3. The two speakers will automatically connect to each other. A confirmation sound will indicate successful pairing.
4. Once TWS paired, connect your device to one of the speakers via Bluetooth as described in section 4.3. Both speakers will then play audio in stereo.

# 5. OPERATING INSTRUCTIONS

## 5.1 Control Buttons

The speaker features intuitive control buttons on its top surface (refer to Image 1 for visual reference):

- **Power Button ( ):** Press and hold to power on/off. Short press for play/pause in Bluetooth mode.
- **Volume Up (+):** Short press to increase volume. Long press for next track.
- **Volume Down (-):** Short press to decrease volume. Long press for previous track.
- **Mode Button (M):** Short press to switch between Bluetooth, SD card, and AUX modes. Long press may activate TWS pairing (refer to 4.4).

## 5.2 Hands-Free Calling

When connected to your smartphone via Bluetooth, the speaker can be used for hands-free calls:

- **Answer Call:** Short press the Power/Play/Pause button.
- **End Call:** Short press the Power/Play/Pause button during a call.
- **Reject Call:** Press and hold the Power/Play/Pause button.

## 5.3 SD Card Playback

Insert a microSD card (TF card) with your audio files into the designated slot. The speaker will automatically switch to SD card mode or you can select it using the Mode button. Playback controls

(play/pause, next/previous track) will function as in Bluetooth mode.

## 5.4 AUX Input

Connect an external audio device (e.g., MP3 player) to the speaker's AUX port using a 3.5mm audio cable (not included). Switch the speaker to AUX mode using the Mode button. Audio will be played through the speaker, but controls will typically need to be managed from the connected device.

## 6. MAINTENANCE

- Keep the speaker away from extreme temperatures, direct sunlight, and moisture.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid dropping the speaker or subjecting it to strong impacts.
- If not used for a long period, charge the speaker at least once every three months to maintain battery health.

## 7. TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source and try again.
Cannot pair via Bluetooth.	<ul style="list-style-type: none"><li>• Ensure the speaker is in pairing mode.</li><li>• Make sure Bluetooth is enabled on your device.</li><li>• Move the speaker closer to your device (within 20 meters).</li><li>• Forget the speaker from your device's Bluetooth list and try pairing again.</li><li>• Restart both the speaker and your device.</li></ul>
No sound.	<ul style="list-style-type: none"><li>• Check the volume levels on both the speaker and your connected device.</li><li>• Ensure the speaker is in the correct mode (Bluetooth, SD, AUX).</li><li>• If using AUX, ensure the cable is fully inserted and functional.</li></ul>
TWS pairing fails.	<ul style="list-style-type: none"><li>• Ensure both speakers are the same model and not connected to any other Bluetooth device.</li><li>• Place speakers close to each other during pairing.</li><li>• Restart both speakers and try TWS pairing again.</li></ul>

## 8. SPECIFICATIONS

Feature	Detail
Brand	LEICKE
Model Number	40502961817

Feature	Detail
Product Dimensions (L x W x H)	7.2 x 7.2 x 16.2 cm
Weight	520 grams
Maximum Speaker Output Power	10 Watts
Connectivity Technology	Bluetooth 5.0
Audio Output Mode	Stereo
Mounting Type	Table Mount
Speaker Type	Surround Sound (when TWS paired)
Waterproof	No
Power Source	Battery Powered
Control Type	Button Control
Bluetooth Range	20 Meters
Special Product Features	Outdoor Use, Music Playback, Hands-Free Calling, SD Card Support, TWS Function
Battery Capacity	3000 mAh

## 9. SAFETY INFORMATION

- Do not disassemble, repair, or modify the speaker. This may cause damage, electric shock, or fire.
- Do not expose the speaker to fire or high temperatures.
- Dispose of the battery according to local regulations. Do not dispose of it in household waste.
- Keep the speaker out of reach of children.
- Avoid listening at high volumes for extended periods to prevent hearing damage.

## 10. WARRANTY AND SUPPORT

LEICKE products are covered by a manufacturer's warranty. For detailed warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official LEICKE website. Please have your model number (40502961817) and purchase date available when contacting support.