

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY EN3D39 Remote Control Instruction Manual for Hisense TVs

ALLIMITY EN3D39

ALLIMITY EN3D39 Remote Control Instruction Manual

For Hisense TV Models: H55NU8700, H65N5750, H45N5750, H65N6800, H65NU8700, H55N6800, H50N6800, H60N3500, H70NU9700, H75N6800, H50N5900

1. PRODUCT OVERVIEW

The ALLIMITY EN3D39 is a replacement remote control designed for various Hisense television models. It provides direct functionality without requiring any programming. This remote control is compatible with the following Hisense TV models:

- H55NU8700
- H65N5750
- H45N5750
- H65N6800
- H65NU8700
- H55N6800
- H50N6800
- H60N3500
- H70NU9700
- H75N6800
- H50N5900



This image displays the front of the ALLIMITY EN3D39 remote control, highlighting the layout of all operational buttons, including power, number pad, volume, channel, navigation, and dedicated app buttons.

2. PACKAGE CONTENTS

Upon opening the package, you will find the following item:

- 1 x ALLIMITY EN3D39 Remote Control

3. SETUP

The ALLIMITY EN3D39 remote control is designed for immediate use with compatible Hisense TV models. No programming or pairing is required.

Battery Installation

To begin using your remote control, follow these steps for battery installation:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open it.
3. Insert two AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





This image shows the back of the remote control with the battery cover detached, revealing the two slots for AAA batteries and the correct polarity markings.

4. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready to operate your compatible Hisense TV. Point the remote control directly towards the TV's infrared receiver.

Key Functions

- **Power Button** (Red, top right): Turns the TV on or off.
- **Input Button** (Top right): Selects the input source (HDMI, AV, etc.).
- **Number Pad** (0-9): Direct channel selection.
- **Volume Up/Down** (VOL +/-): Adjusts the TV volume.
- **Channel Up/Down** (CH +/-): Changes TV channels.
- **Navigation Buttons** (Up, Down, Left, Right, OK): Used to navigate menus and confirm selections.
- **Back Button**: Returns to the previous menu or screen.
- **Exit Button**: Exits the current menu or application.
- **Netflix, YouTube, Wuaki.tv Buttons**: Direct access to these streaming applications.



This image provides an angled perspective of the remote control, offering a clearer view of the button labels and their arrangement for easier identification during operation.

5. MAINTENANCE

To ensure optimal performance and longevity of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote control's response becomes inconsistent or stops working. Always replace both batteries simultaneously with new AAA batteries.
- **Storage:** Store the remote control in a dry place, away from direct sunlight and extreme temperatures.

- **Avoid Drops:** Protect the remote control from physical impact, as drops can damage internal components.

6. TROUBLESHOOTING

If you experience issues with your ALLIMITY EN3D39 remote control, refer to the following common troubleshooting steps:

- **Remote not responding:**
 - Check if the batteries are inserted correctly, observing the positive (+) and negative (-) polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Confirm the remote control is pointed directly at the TV.
- **Specific buttons not working:**
 - Clean the remote control surface, especially around the non-responsive buttons, to remove any debris that might be preventing proper contact.
 - If only certain buttons are affected after battery replacement, the remote control may require replacement.
- **TV not compatible:**
 - Verify that your Hisense TV model is listed among the compatible models for the EN3D39 remote control.

7. SPECIFICATIONS

The following are the technical specifications for the ALLIMITY EN3D39 remote control:

Product Dimensions	4.33 x 1.3 x 0.6 inches
Item Weight	3.36 ounces
Batteries Required	2 x AAA (not included)
Connectivity Technology	Infrared
Special Feature	No Programming Required
Compatible Devices	Hisense Televisions

8. WARRANTY AND SUPPORT

No specific warranty information is provided with this product. For any support inquiries, technical assistance, or warranty claims, please contact the seller or manufacturer directly through your purchase platform.