

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Rowenta](#) /

› [Rowenta Turbo Silence Extreme+ Pedestal Fan VU5870 Instruction Manual](#)

Rowenta VU5870

Rowenta Turbo Silence Extreme+ Pedestal Fan

MODEL: VU5870

Introduction

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Rowenta Turbo Silence Extreme+ Pedestal Fan VU5870. Please read all instructions carefully before use and retain this manual for future reference.





Figure 1: Rowenta Turbo Silence Extreme+ Pedestal Fan VU5870

Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the voltage indicated on the fan's rating label corresponds to your mains supply.
- Do not operate the fan with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Unplug the fan from the outlet when not in use, when moving it from one location to another, and before cleaning.
- Do not immerse the fan in water or other liquids.
- Do not insert fingers or any objects through the grille when the fan is operating.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Place the fan on a stable, flat surface to prevent it from tipping over.

Setup

Your Rowenta Turbo Silence Extreme+ Pedestal Fan VU5870 requires minimal assembly. A Phillips head screwdriver may be needed for securing the base.

1. Carefully unpack all components from the box.
2. Attach the base to the main stand pole. Ensure it is securely fastened.
3. Connect the fan head to the top of the stand pole.
4. Adjust the height of the fan as desired. The fan is adjustable up to 53 inches.
5. Place the fan on a stable, indoor surface, such as a bedroom floor.
6. Plug the power cord into a suitable electrical outlet.

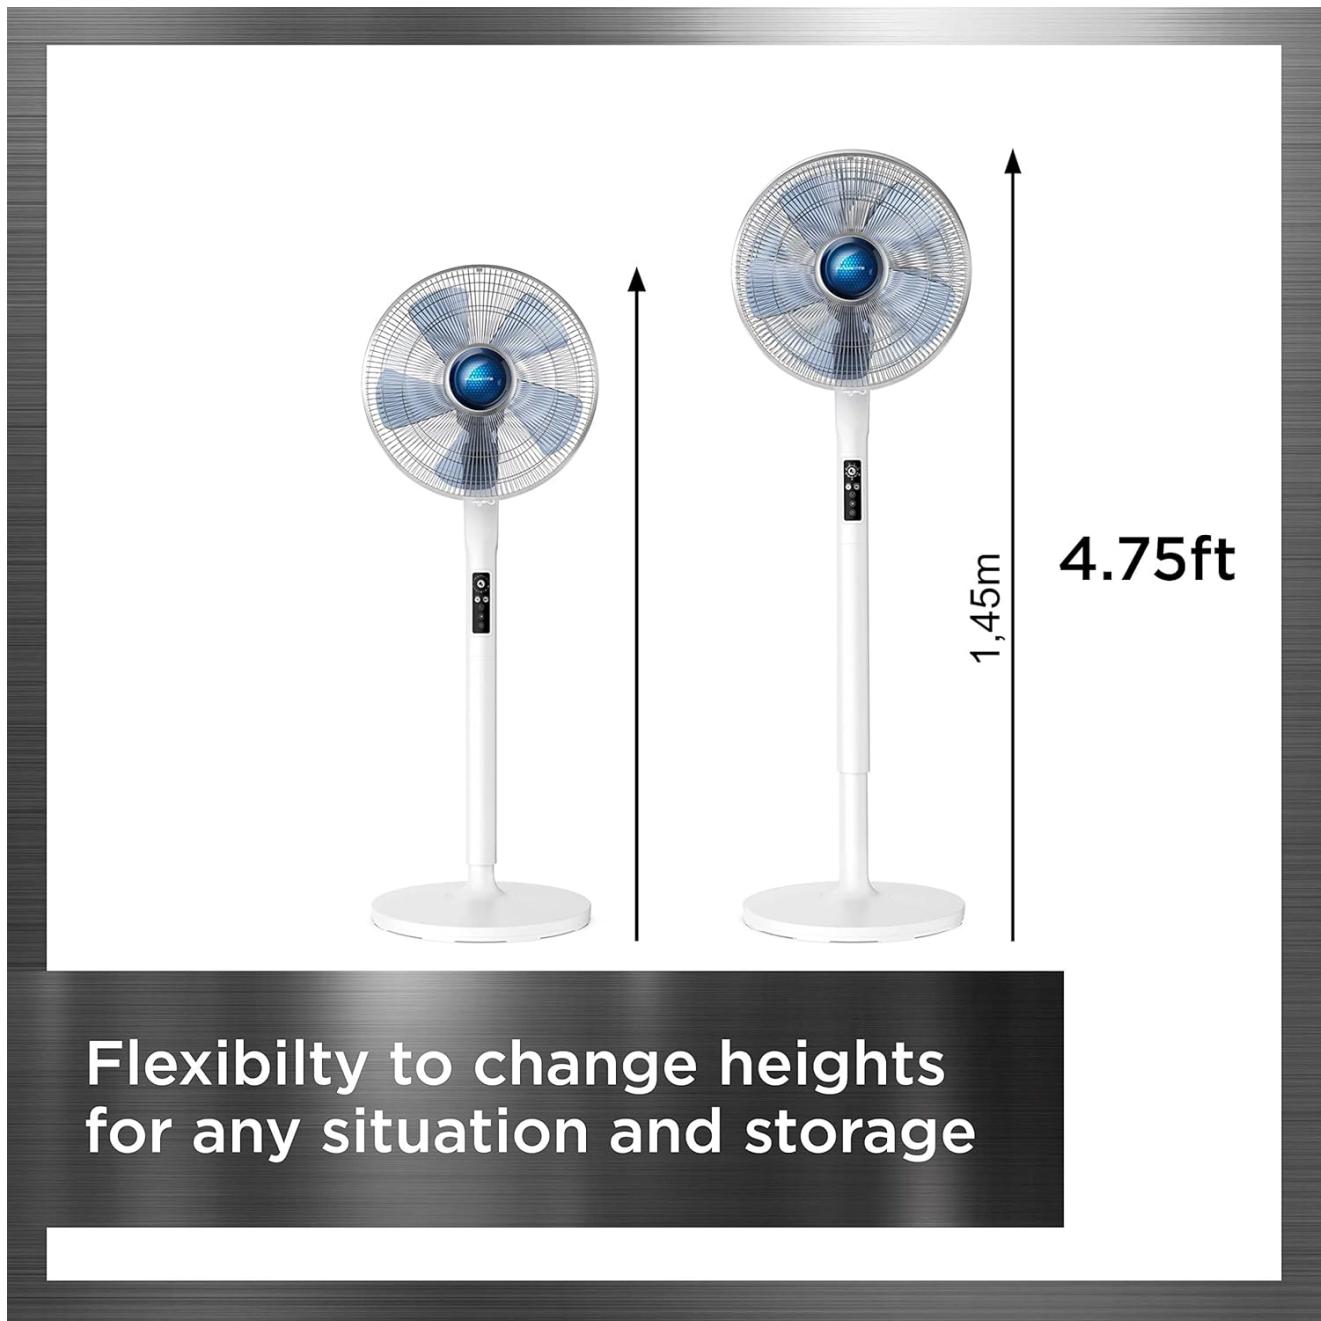


Figure 2: Adjustable height feature of the Rowenta Pedestal Fan

Operating Instructions

Your fan offers various settings for personalized comfort.

1. **Power On/Off:** Press the power button on the control panel or remote control to turn the fan on or off.
2. **Speed Settings:** The fan features 5 speed settings. Use the '+' and '-' buttons on the control panel or remote to adjust the fan speed.
3. **Modes:**
 - *Natural Breeze Mode:* Simulates natural airflow patterns.
 - *Decrescendo Mode:* Automatically reduces airflow every fifteen minutes to save energy.
 - *Auto-Off Function:* Automatically turns off the fan after a set period.
4. **Oscillation:** Press the oscillation button on the control panel or remote to activate or deactivate the fan's oscillating movement.
5. **Adjustable Height:** Loosen the height adjustment knob on the stand, raise or lower the fan head to your desired height, and then tighten the knob to secure it.
6. **Remote Control:** The fan comes with a remote control for convenient operation. It has a dedicated storage space at the back of the pedestal for easy access.

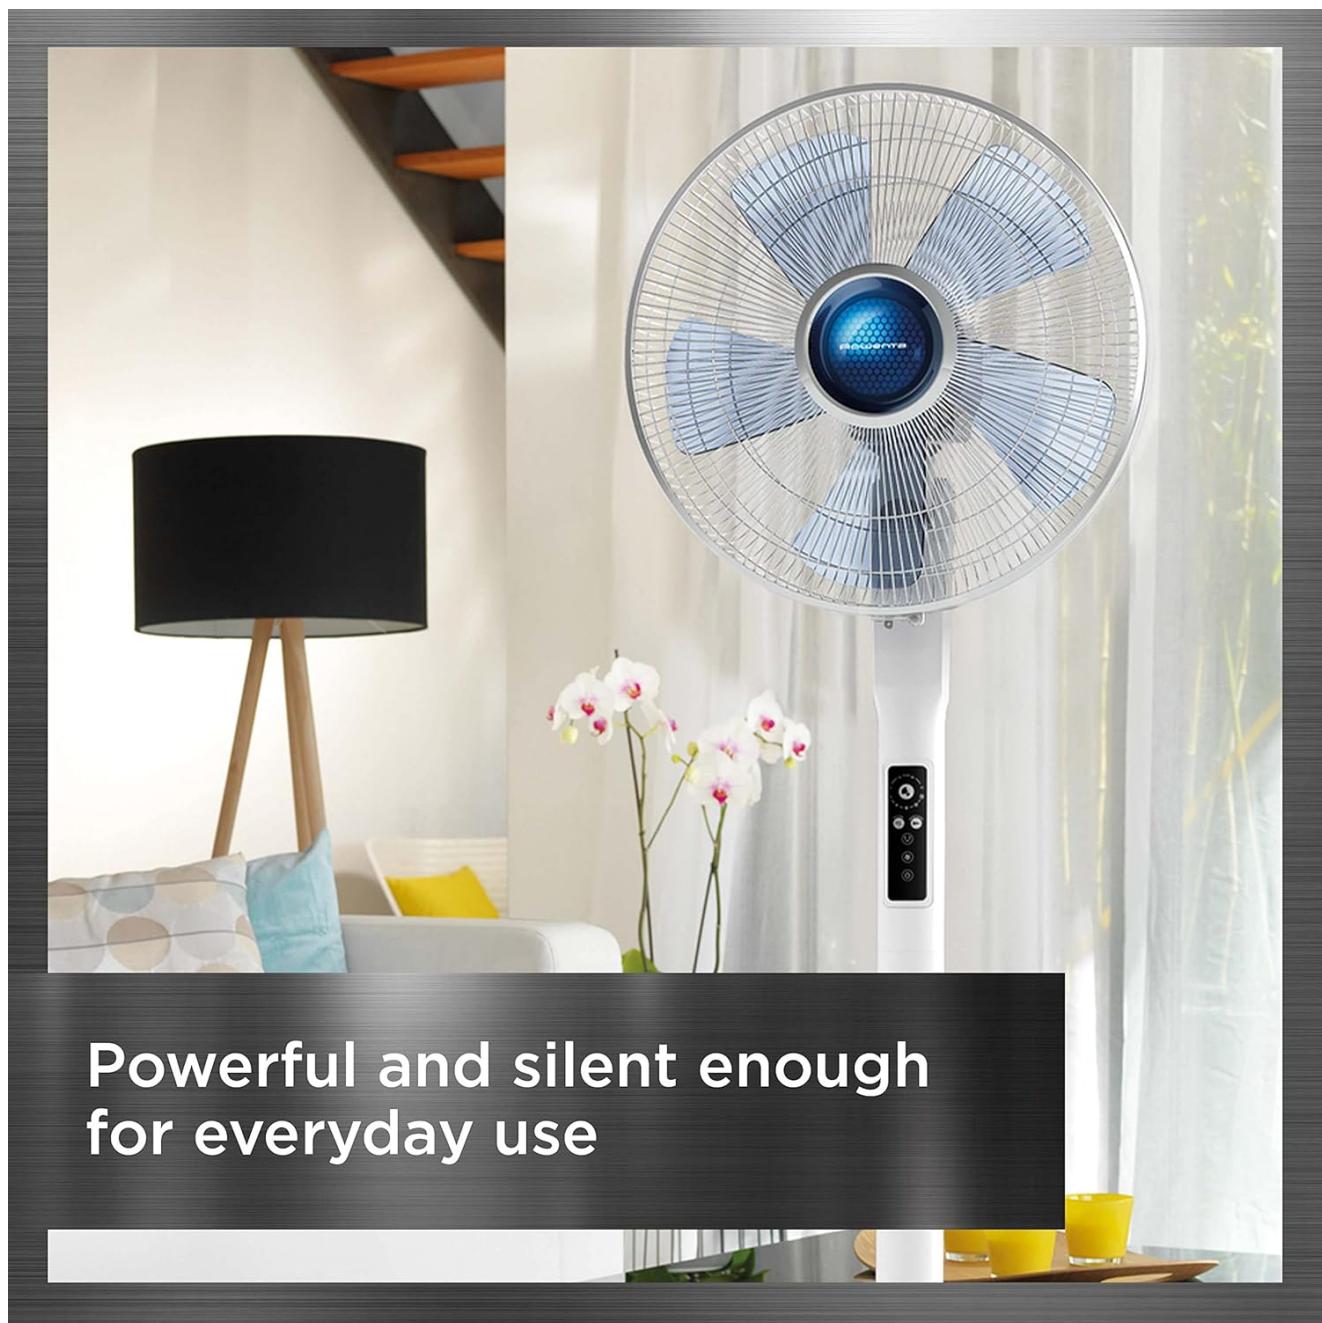


Figure 3: Control Panel and Remote Control Features

For a visual guide on the fan's features and operation, please watch the official product video below:

Maintenance

Regular cleaning ensures optimal performance and longevity of your fan.

- Before Cleaning:** Always unplug the fan from the power outlet before attempting any cleaning or maintenance.
- Exterior Cleaning:** Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Grille Cleaning:** The fan features an ultra-safe grid. For deeper cleaning, the front grille can be carefully removed (refer to assembly instructions in reverse) to access the fan blades. Ensure the fan is completely unplugged.
- Blade Cleaning:** The care instructions recommend hand washing for components. Carefully wipe the fan blades with a soft, damp cloth. Ensure all parts are completely dry before reassembling and operating the fan.
- Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging.

Troubleshooting

If you encounter issues with your fan, refer to the following common troubleshooting steps:

- **Fan Not Turning On:**

- Check if the power cord is securely plugged into a working electrical outlet.
- Ensure the power button on the fan or remote is pressed.

- **Reduced Airflow:**

- Check if the fan grilles or blades are obstructed by dust or debris. Clean as per maintenance instructions.
- Ensure the fan speed is set to a higher level.

- **Unusual Noise or Vibration:**

- Ensure all assembled parts, especially the base and grilles, are securely tightened.
- Check for any foreign objects caught in the fan blades. Unplug the fan before inspecting.

- **Remote Control Not Working:**

- Ensure there are no obstructions between the remote and the fan's sensor.
- Check if the remote control battery needs replacement (if applicable, though product specs state no batteries required for the fan itself, implying the remote might have one).

If problems persist after following these steps, please contact Rowenta customer support.

Specifications

Feature	Detail
Brand	Rowenta
Model Name	Turbo Silence Extreme+
Model Number	VU5870

Color	White
Electric Fan Design	Floor Fan
Power Source	Corded Electric
Style	Floor
Product Dimensions	17"D x 18"W x 53"H
Room Type	Bedroom
Special Feature	Remote Control, Timer, Adjustable Height
Noise Level	35 Decibels
Wattage	70 watts
Number of Blades	3
Air Flow Capacity	68 Cubic Meters Per Minute
Number of Power Levels	5
Motor Type	Brushless
Indoor/Outdoor Usage	Indoor
Assembly Required	Yes
Item Weight	17.6 Pounds
UPC	023108815901

Warranty and Support

This Rowenta Turbo Silence Extreme+ Pedestal Fan VU5870 comes with a **1-year warranty** from the date of purchase.

For warranty claims, technical support, or any questions regarding your product, please refer to the contact information provided in your product packaging or visit the official Rowenta website.