



Manuals.plus /

- › **Magic Motion** /
- › Magic Motion Umi Smart Wearable Dual-Motor Vibrator User Manual

Magic Motion Umi

Magic Motion Umi Smart Wearable Dual-Motor Vibrator User Manual

Model: Umi

1. PRODUCT OVERVIEW

The Magic Motion Umi is a smart wearable dual-motor vibrator designed for discreet and versatile use. It features app control, allowing for various vibration patterns, remote interaction, and an alarm clock function. The device is waterproof and USB rechargeable.



Image 1.1: The Magic Motion Umi device shown alongside a smartphone displaying its control application.

2. SETUP GUIDE

2.1 Unboxing

Upon opening the package, ensure all components are present:

- Magic Motion Umi device
- USB charging cable
- Storage pouch
- User manual



Image 2.1: The Magic Motion Umi device, its packaging, charging cable, and storage pouch.

2.2 Charging the Device

Before first use, fully charge the device. Connect the provided USB charging cable to the device's charging port and a USB power source (e.g., computer, wall adapter). The indicator lights will show charging status.

Video 2.2: This video demonstrates the charging process for the Magic Motion Umi device (relevant segment starts at 2:11).

2.3 App Installation and Connection

The Magic Motion Umi is controlled via a dedicated smartphone application. Follow these steps to install and connect:

1. Download the 'Whats Sense' app from your device's app store.
2. Ensure your smartphone's Bluetooth is enabled.
3. For Android systems, accept location permissions for the app to function correctly.
4. Open the app and power on your Magic Motion Umi device.
5. Within the app, follow the prompts to connect to your device.

Video 2.3: This video illustrates the app installation, permission granting, and device connection process (relevant segment

starts at 0:02).

3. OPERATING INSTRUCTIONS

3.1 App Interface Overview

The app provides various control options. After successful connection, you will see options for different modes and settings.

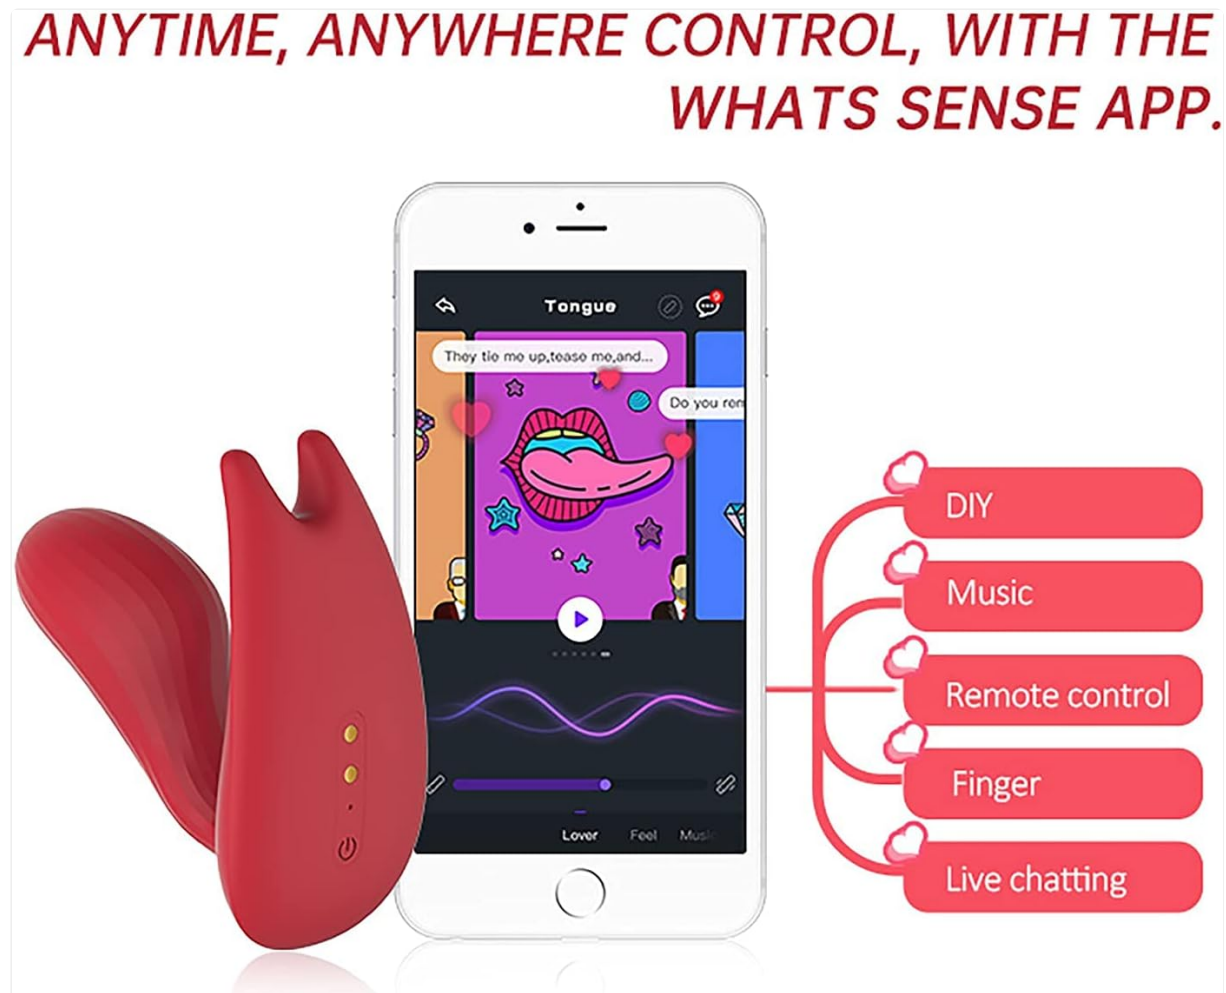


Image 3.1: The 'Whats Sense' app interface displaying various control modes.

3.2 Vibration Modes

The Magic Motion Umi offers multiple vibration modes accessible through the app:

- **Preset Patterns:** Choose from a selection of pre-programmed vibration sequences.
- **Finger Mode (Hand-painting):** Draw patterns on your phone screen, and the device will replicate the vibrations.
- **Music Mode:** The device vibrates in sync with music played through the app.
- **Voice Mode:** The device responds to sound and voice input.

Video 3.2: This video demonstrates various vibration modes including Preset (0:18), Finger/Hand-painting (0:30), and Music (0:46).

3.3 Remote Chat Control

The app allows for remote control functionality over the internet, enabling interactive experiences with a partner. Share an invitation code to connect with another user and control each other's devices or send vibration patterns through chat.

Video 3.3: This video illustrates the remote chat control feature, showing two phones interacting (relevant segment starts at 1:17).

3.4 Alarm Clock Function

The Magic Motion Umi can be set as a vibrating alarm clock. Configure the wake-up time and desired vibration mode within the app's alarm settings.

Video 3.4: This video demonstrates how to set and use the vibrating alarm clock function (relevant segment starts at 0:57).

4. MAINTENANCE

4.1 Cleaning

The Magic Motion Umi is waterproof. For cleaning, wash the device by hand with mild soap and warm water. Rinse thoroughly and allow it to air dry completely before storage.

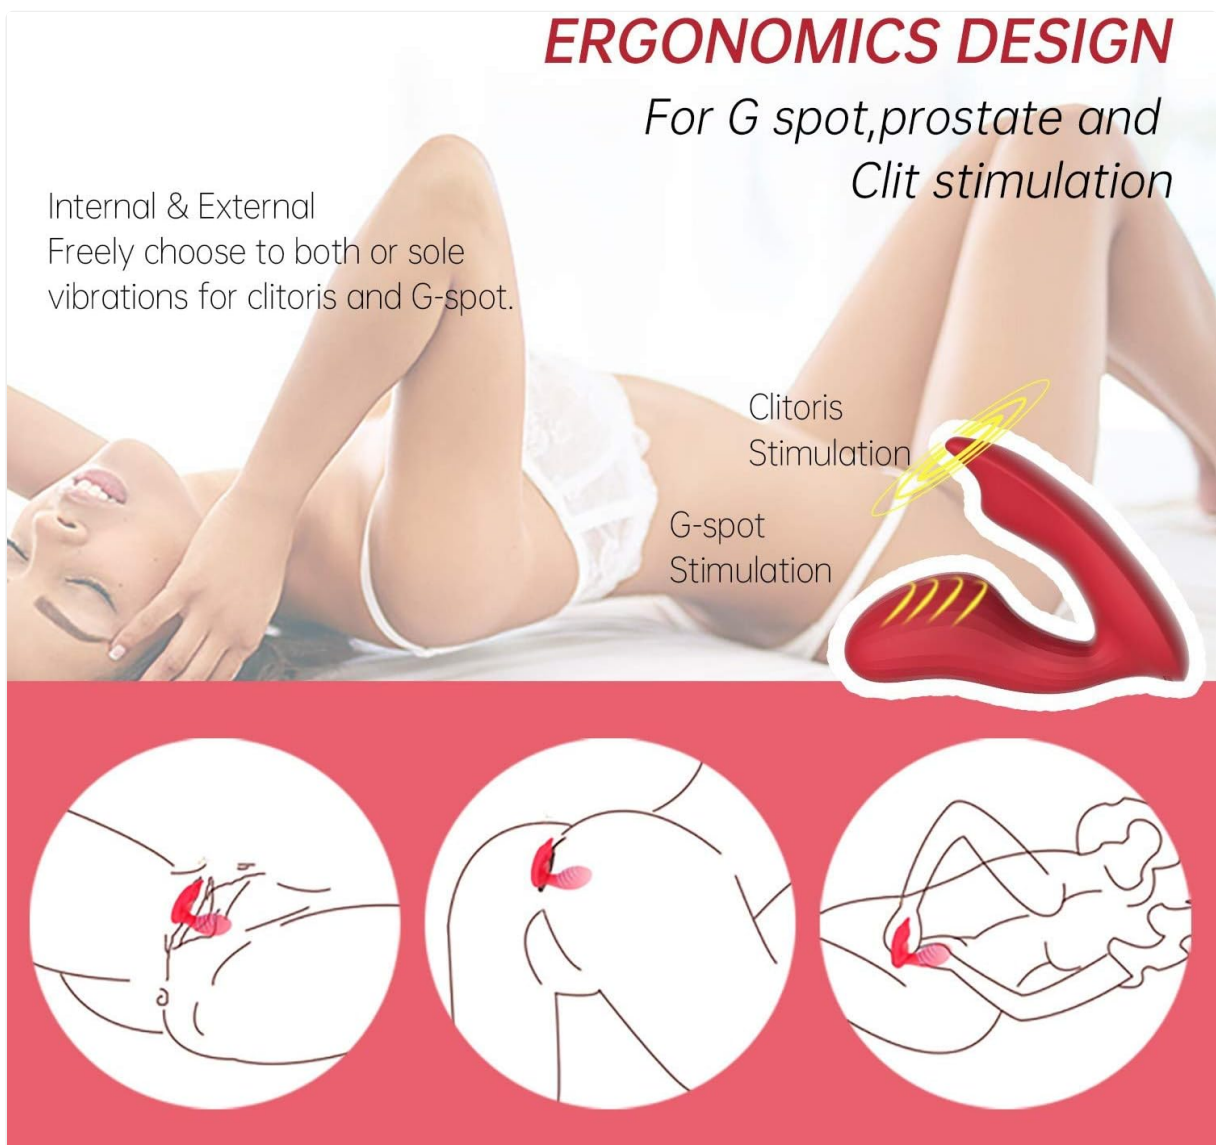


Image 4.1: The Magic Motion Umi device is waterproof, allowing for easy cleaning.

Video 4.1: This video briefly shows the device's waterproof capability (relevant segment starts at 2:09).

4.2 Storage

Store the device in its provided storage pouch in a clean, dry place away from direct sunlight and extreme temperatures.

Video 4.2: This video demonstrates placing the device into its storage pouch (relevant segment starts at 2:20).

5. TROUBLESHOOTING

5.1 Device Not Connecting to App

- Ensure the device is fully charged.
- Verify Bluetooth is enabled on your smartphone.
- Check that the app has necessary location permissions (especially for Android).
- Restart both the device and the app.
- If using remote chat control, ensure a stable internet connection for both devices.

5.2 Weak or No Vibration

- Charge the device fully. Low battery can affect vibration intensity.
- Check the intensity settings within the app for the selected mode.

6. SPECIFICATIONS

Feature	Detail
Product Dimensions	1.2 x 1.2 x 3 inches; 8.15 ounces
Batteries	1 Lithium Polymer battery (included)
Water Resistance Level	Waterproof
Product Care Instructions	Hand Wash
Manufacturer	vtrump

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Magic Motion customer service directly. Specific warranty terms and conditions may vary.