

[manuals.plus](#) /

› [DTKID](#) /

› [DTKID Digital Kids Watch Model 8563B Instruction Manual](#)

DTKID 8563B

DTKID Digital Kids Watch Model 8563B Instruction Manual

Model: 8563B

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your DTKID Digital Kids Watch Model 8563B. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.



Image 1: Front view of the DTKID Digital Kids Watch Model 8563B in bright blue.

2. KEY FEATURES

- **Multifunctional Display:** Time, date, day of the week, and alarm.
- **7-Color Backlight:** Customizable backlight colors (dark blue, green, red, light blue, yellow, purple, pink).
- **Water Resistance:** 30M (3 ATM) for daily use (rain, hand washing, face washing).
- **Hourly Chime:** Optional audible alert every hour.
- **Stopwatch:** For timing activities.
- **12/24 Hour Format:** Selectable time display format.
- **Durable Construction:** Acrylic dial mirror, stainless steel back, and resin strap.

3. WATCH COMPONENTS AND BUTTON FUNCTIONS



Image 2: Diagram illustrating the watch buttons and their primary functions.

- **LIGHT Button (Top Left):** Activates the backlight. Press and hold for 3 seconds to change backlight color.
- **MODE Button (Bottom Left):** Cycles through display modes (Time, Alarm, Stopwatch).
- **START Button (Top Right):** Used to start/stop stopwatch, adjust values during setting.

- **RESET Button (Bottom Right):** Used to reset stopwatch, select items during setting.

4. SETUP INSTRUCTIONS

4.1 Setting Time and Date

1. From the normal time display, press the **MODE** button three times to enter time setting mode. The seconds will flash.
2. Press the **RESET** button to cycle through the setting options: seconds → hours → minutes → month → date → day of the week.
3. Use the **START** button to adjust the flashing value.
4. Press the **MODE** button once to exit setting mode and return to the normal time display.

4.2 Setting the Alarm

1. From the normal time display, press the **MODE** button twice to enter alarm setting mode. The hour digits will flash.
2. Press the **RESET** button to switch between setting hours and minutes.
3. Use the **START** button to adjust the flashing value (hours or minutes).
4. Press the **MODE** button once to exit alarm setting mode.
5. To turn the alarm ON/OFF: In normal time display, press and hold the **START** button, then press the **RESET** button. An alarm icon will appear/disappear to indicate status.

4.3 12/24 Hour Format Selection

In normal time display, press the **START** button to toggle between 12-hour and 24-hour formats.

5. OPERATING INSTRUCTIONS

5.1 Using the Backlight

Press the **LIGHT** button (top left) to illuminate the display. The backlight will stay on for a few seconds.



Image 3: The watch display showing various backlight color options.

5.2 Changing Backlight Color

While the backlight is active, press and hold the **LIGHT** button for approximately 3 seconds. The backlight color will change. Release and press again to cycle through the 7 available colors.

5.3 Using the Stopwatch

1. From the normal time display, press the **MODE** button once to enter stopwatch mode.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **START** button to resume timing.
5. While paused, press the **RESET** button to clear the stopwatch to zero.
6. Press the **MODE** button to exit stopwatch mode.

5.4 Hourly Chime (Hourly Alert)

To turn the hourly chime ON/OFF: In normal time display, press and hold the **RESET** button, then press the **MODE** button. A small icon (often a bell or signal) will appear/disappear to indicate the hourly chime status.

6. WATER RESISTANCE

The DTKID Digital Kids Watch is rated 30M (3 ATM) water-resistant. This means it is suitable for daily use and can withstand:

- Splashes from hand washing or face washing.
- Rain exposure.
- Sweating.

Important Precautions:

- **DO NOT** press any buttons while the watch is submerged in water.
- **DO NOT** use the watch in extreme cold or high-temperature environments (e.g., hot showers, saunas) as this can compromise the water seals.
- The watch is **NOT** suitable for swimming, diving, or prolonged submersion.



Image 4: Visual representation of the watch's 30M water resistance for daily activities.

7. MAINTENANCE AND CARE

- Clean the watch regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used,

followed by drying.

- Avoid exposing the watch to strong magnetic fields, as this can affect timekeeping accuracy.
- Store the watch in a cool, dry place when not in use.
- Avoid contact with harsh chemicals, solvents, or detergents, which can damage the watch case and strap.

8. TROUBLESHOOTING

Problem: Watch sounds an alarm every hour.

Solution: The hourly chime is activated. To turn it off, press and hold the **RESET** button, then press the **MODE** button simultaneously. Repeat the action to turn it back on if desired.

Problem: Time is incorrect or changes randomly.

Solution:

- Re-set the time and date following the instructions in Section 4.1.
- Ensure buttons are not being accidentally pressed, especially by young users.
- If the issue persists, the battery may be low and require replacement. Contact customer support for assistance.

Problem: Display is dim or not visible.

Solution:

- Press the **LIGHT** button to activate the backlight.
- If the display remains dim or blank, the battery may need replacement.

9. SPECIFICATIONS

Feature	Detail
Model Number	8563B
Product Dimensions	3.54 x 3.54 x 2.36 inches
Item Weight	1.02 ounces (29g)
Water Resistance	30M (3 ATM)
Battery Type	1 Lithium Metal battery (included)
Display Type	Digital
Backlight Colors	7 colors (dark blue, green, red, light blue, yellow, purple, pink)



Image 5: Detailed dimensions of the DTKID Digital Kids Watch.

10. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact DTKID customer service directly. Specific warranty details are not provided in this manual.

© 2025 DTKID. All rights reserved.

Documents - DTKID – 8563B
no relevant documents