

AROMAPLAN PD-201-PRO300

AROMAPLAN Authentic Plug-in Waterless Diffuser User Manual

Model: PD-201-PRO300

1. INTRODUCTION

Thank you for choosing the AROMAPLAN Authentic Plug-in Waterless Diffuser. This device utilizes advanced nanotechnology to convert liquid essential oils into a dry, vaporous mist, effectively scenting spaces up to 500 sq ft without the need for water or heat. Designed for ease of use and efficiency, it provides a mess-free and quiet aromatherapy experience for your home or office.

This manual provides essential information for the safe and optimal use of your diffuser, including setup, operation, maintenance, and troubleshooting.

2. SAFETY INFORMATION

- **Avoid direct skin contact with undiluted essential oils.** Essential oils are concentrated and can cause irritation.
- **Keep out of reach of children and pets.** Store essential oils and the diffuser in a secure location.
- **Ensure proper ventilation during use.** While the diffuser is designed for safe operation, good airflow is always recommended.
- Do not disassemble or attempt to repair the device yourself. Contact customer support for assistance.
- Use only AROMAPLAN recommended essential oils or high-quality, pure essential oils. Using inferior oils may damage the device or affect performance.
- Do not block the mist outlet during operation.
- Unplug the diffuser from the power outlet when not in use or before cleaning.

3. PRODUCT OVERVIEW

The AROMAPLAN Plug-in Waterless Diffuser is a compact and efficient device designed for optimal scent dispersion.

Components

- Diffuser Unit (main body with plug)
- Essential Oil Bottle (pre-installed or separate, depending on package)
- Control Panel (buttons/indicators for intensity and mode)

Key Features

- **Waterless Operation:** No water required, eliminating mess and residue.
- **Nanotechnology:** Converts liquid perfume into dry vaporous microparticles for even scenting.
- **Wide Coverage:** Effectively scents areas up to 500 sq ft.
- **Adjustable Intensity:** Multiple working grades to choose from.
- **Quiet Operation:** Designed for silent performance.
- **Pet & Kid Safe:** Uses natural scents free of harsh chemicals.
- **Automatic Mode:** Can be set to operate based on light conditions or scheduled times.



Figure 3.1: AROMAPLAN Authentic Plug-in Waterless Diffuser with its packaging.

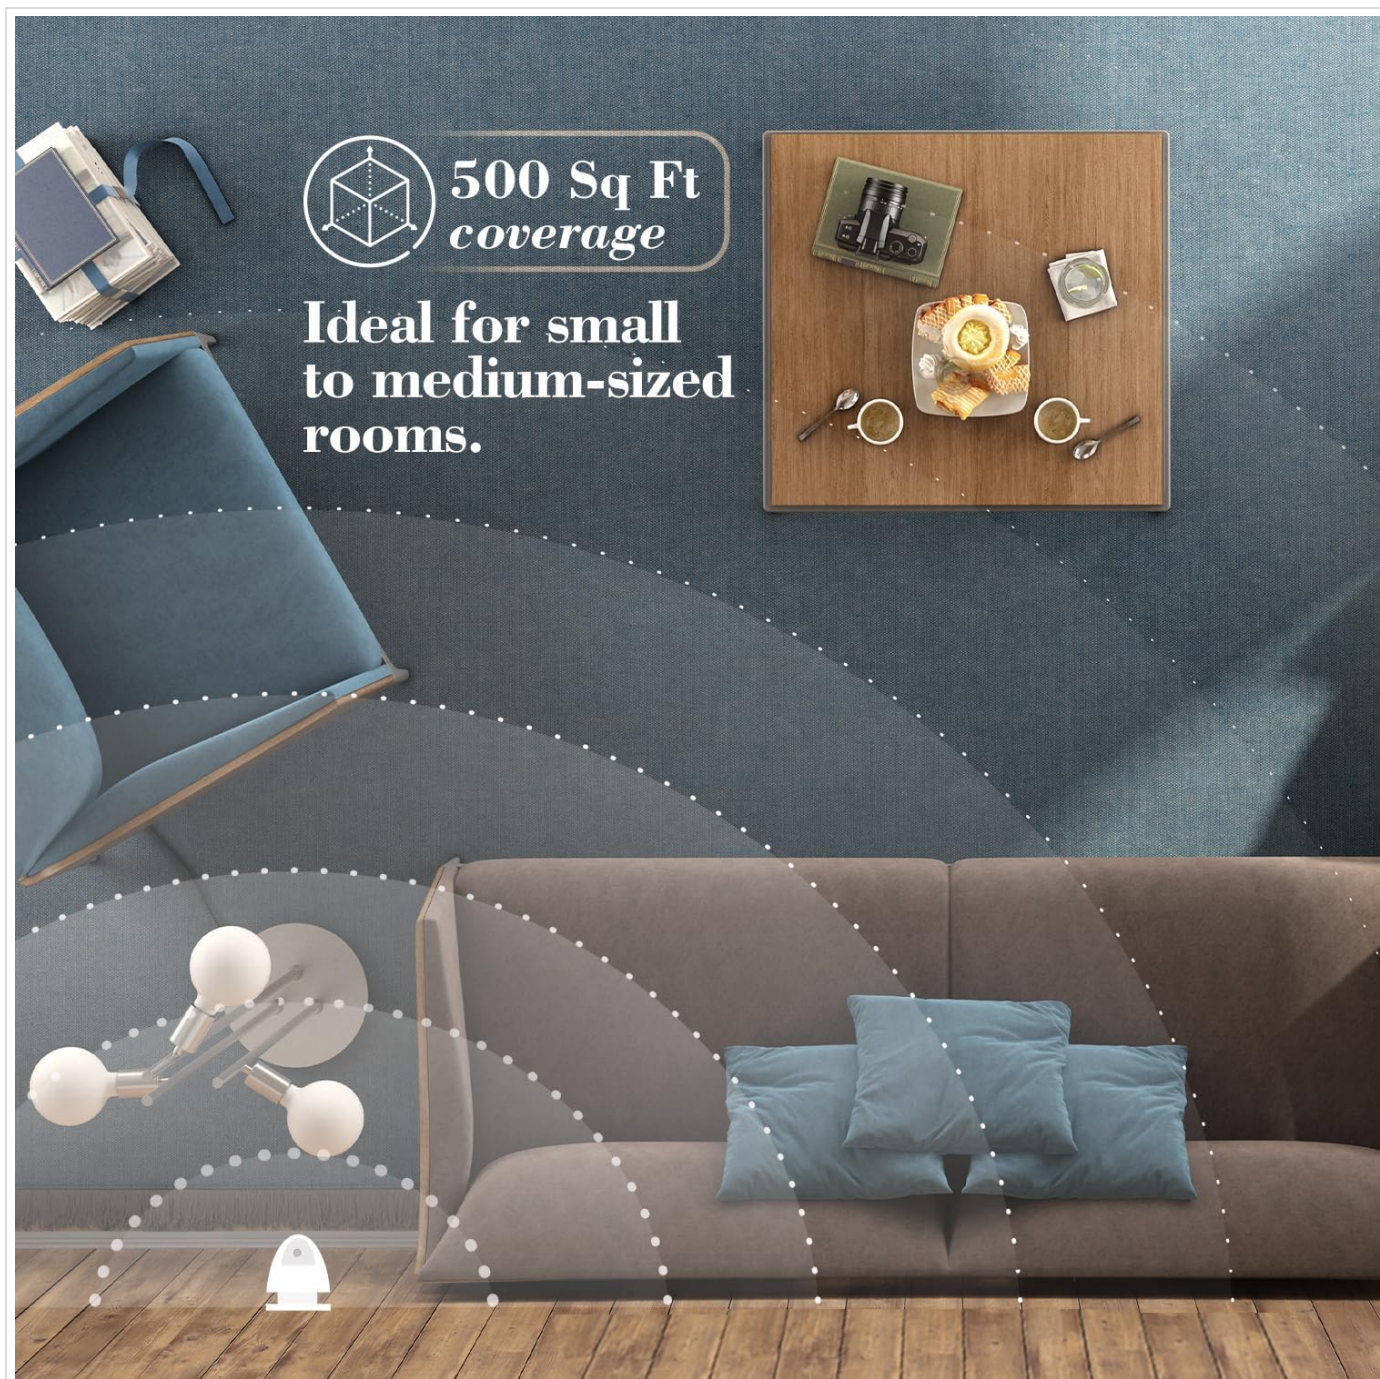


Figure 3.2: Overview of the diffuser's key features.



PLUG DIFFUSER

MODEL: PDAP 201

Input voltage:

AC100V-240V 60/60HZ

Power:

1W

Bottle capacity:

100ml

Coverage:

500 sq ft

N.W.:

300g

Consumption:

0.07-0.3ml/h



Figure 3.3: Product dimensions and specifications.

Product Overview Video

Your browser does not support the video tag.

Video 3.1: A detailed product overview guide for the AROMAPLAN Plug-in Waterless Diffuser, demonstrating its features and functionality.

4. SETUP

Setting up your AROMAPLAN diffuser is a simple three-step process:

1. **Prepare the Essential Oil Bottle:** Ensure your essential oil bottle is securely attached to the diffuser unit. The diffuser is designed to work directly with AROMAPLAN oil bottles.
2. **Plug in the Diffuser:** Insert the diffuser directly into a standard wall outlet. Ensure it is firmly seated.
3. **Adjust Settings:** Once plugged in, the diffuser will power on. You can then adjust the intensity level and operating mode as needed using the controls on the device or via the associated app (if applicable).



Figure 4.1: The diffuser plugged into a wall outlet, ready for use.

5. OPERATION

Your AROMAPLAN diffuser offers various settings to customize your scent experience:

Intensity Levels (Working Grades)

The diffuser features 4 working grades, allowing you to control the intensity of the scent. Each grade typically involves a 15-second spray followed by a pause of varying duration:

- **Grade 1:** 15s working, 285s pause
- **Grade 2:** 15s working, 135s pause
- **Grade 3:** 15s working, 85s pause
- **Grade 4:** 15s working, 60s pause

Operating Modes

The diffuser may include different operating modes:

- **Continuous Mode:** The diffuser operates continuously at the selected intensity level.
- **Smart Mode (Light-Control):** The diffuser can be set to operate only when light is detected (e.g., during the day)

and turn off in darkness. This helps conserve oil.

- **Scheduled Mode:** For advanced control, the diffuser can be programmed via a mobile application (if available) to turn on/off at specific times and days, and at desired intensity levels.



Figure 5.1: Control panel and working grade settings.

Coverage Demonstration Video

Your browser does not support the video tag.

Video 5.1: A demonstration of the AROMAPLAN Plug-in Waterless Diffuser's coverage capabilities, showing how it scents up to 500 sq ft.

6. MAINTENANCE

The AROMAPLAN waterless diffuser is designed for low maintenance. Follow these guidelines to ensure longevity and optimal performance:

- **Regular Cleaning:** Periodically wipe the exterior of the diffuser with a soft, dry cloth to remove dust.

- **Oil Bottle Replacement:** When an essential oil bottle is empty, simply unscrew it and replace it with a new AROMAPLAN essential oil bottle. Ensure the new bottle is securely tightened to prevent leaks.
- **Avoid Water:** Do not use water or any liquid cleaning agents inside the diffuser, as it is a waterless system.
- **Store Properly:** If storing the diffuser for an extended period, ensure the oil bottle is removed and the unit is clean and dry.



Figure 6.1: Use of AROMAPLAN essential oils for optimal performance.

7. TROUBLESHOOTING

If you encounter issues with your AROMAPLAN diffuser, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No mist/scent output	<ul style="list-style-type: none"> Oil bottle empty or not properly installed. Diffuser not plugged in or power outlet is off. Mist outlet blocked. Internal pump malfunction. 	<ul style="list-style-type: none"> Check oil level and ensure bottle is securely screwed in. Verify diffuser is firmly plugged into a working outlet. Ensure nothing is obstructing the mist outlet. If issues persist, contact customer support.
Weak scent output	<ul style="list-style-type: none"> Low intensity setting. Large room size for coverage. Oil bottle nearly empty. 	<ul style="list-style-type: none"> Increase the intensity level (working grade). Consider using multiple diffusers for larger spaces. Replace the essential oil bottle.
Diffuser making unusual noise	<ul style="list-style-type: none"> Oil bottle not properly seated. Internal component issue. 	<ul style="list-style-type: none"> Ensure the oil bottle is securely attached. If noise persists, discontinue use and contact customer support.
Diffuser falls out of outlet	<ul style="list-style-type: none"> Loose outlet. Unit not fully inserted. 	<ul style="list-style-type: none"> Ensure the outlet provides a firm connection. Push the diffuser firmly into the outlet.

If the problem persists after trying these solutions, please contact AROMAPLAN customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	AROMAPLAN
Model Name	AE103
Item Model Number	PD-201-PRO300
Color	White
Material	Plastic
Product Dimensions	10"L x 2"W x 2.7"H
Item Weight	14 ounces
Power Source	Corded Electric
Wattage	10 watts
Capacity (Oil Bottle)	100 Milliliters
Floor Area Coverage	500 Square Feet

Feature	Detail
Runtime	100 hours (approx.)
Auto Shutoff	Yes
UPC	785249151392
Country of Origin	China

9. WARRANTY AND SUPPORT

For warranty information, product support, or any inquiries not covered in this manual, please contact AROMAPLAN customer service directly. Refer to your purchase documentation or the AROMAPLAN official website for contact details.

AROMAPLAN Official Store: [Visit the AromaPlan Store on Amazon](#)

© 2025 AROMAPLAN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question