

[Manuals.plus](#) /

› [DREAME](#) /

› Dreametech L10 Pro Robot Vacuum and Mop User Manual

DREAME L10 Pro

Dreametech L10 Pro Robot Vacuum and Mop User Manual

MODEL: L10 PRO



The Dreame L10 Pro Robot Vacuum and Mop, a versatile cleaning device designed for efficient home maintenance.

1. SETUP GUIDE

This section provides instructions for the initial setup of your Dreame L10 Pro robot vacuum and mop.

1.1 Unboxing and Component Check

Carefully remove all components from the packaging. Ensure all items listed in the user manual are present.

- Robot Vacuum and Mop Unit
- Charging Dock
- Power Cable
- Side Brush
- Main Brush (pre-installed)
- Dust Bin (pre-installed)
- Water Tank with Mop Pad

- Cleaning Tool
- User Manual (this document)

1.2 Charging Dock Placement

Place the charging dock against a wall on a hard, level surface. Ensure there is at least 0.5 meters (1.6 feet) of clear space on both sides and 1.5 meters (4.9 feet) in front of the dock for optimal navigation.

Connect the power cable to the charging dock and plug it into a power outlet. Ensure the cable is neatly tucked away to prevent entanglement.

1.3 Initial Charging

Place the robot onto the charging dock. The indicator light on the robot will illuminate to show it is charging. For first-time use, fully charge the robot before operation, which typically takes approximately 2.5 hours.

1.4 App Installation and Connection

Download the official Dreametech app from your mobile device's app store. Follow the in-app instructions to add your L10 Pro robot. This typically involves creating an account, selecting your device model, and connecting it to your home Wi-Fi network.

Get a custom clean



Image: The Dreametech L10 Pro robot vacuum shown next to a smartphone displaying the companion app, highlighting remote control, spot cleaning, zone cleaning, and no-go zone features.

2. OPERATING INSTRUCTIONS

Learn how to effectively operate your Dreametech L10 Pro for optimal cleaning performance.

2.1 Starting and Stopping Cleaning

- **Start Cleaning:** Press the power button on the robot or use the "Start Cleaning" option in the app. The robot will begin cleaning based on its current map or initiate a new mapping process if it's the first run.
- **Pause Cleaning:** Press the power button once during operation to pause.
- **Resume Cleaning:** Press the power button again to resume.
- **Stop Cleaning:** Press and hold the power button for a few seconds to stop the current cleaning cycle and send the robot back to its charging dock.

2.2 Cleaning Modes

The Dreametech L10 Pro offers various cleaning modes accessible via the mobile app:

- **Auto Clean:** The robot intelligently plans the most efficient cleaning path for your entire home.
- **Spot Clean:** Direct the robot to clean a specific small area with concentrated effort.
- **Zone Clean:** Define custom zones on the map for the robot to clean.
- **Scheduled Clean:** Set specific times for the robot to automatically start cleaning.

2.3 Mapping and Navigation

Equipped with advanced LiDAR navigation and 3D obstacle avoidance, the L10 Pro creates precise maps of your home and navigates efficiently, avoiding common household obstacles.

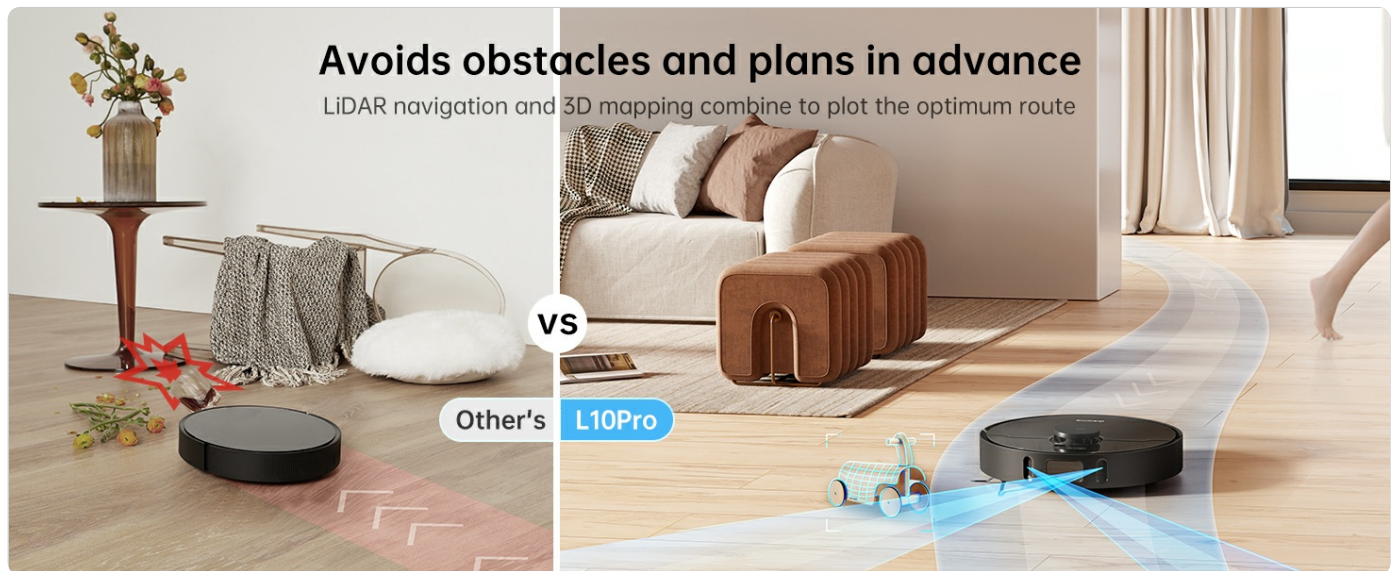 


Image: Comparison showing the Dreametech L10 Pro's advanced obstacle avoidance and path planning versus other robot vacuums.

Avoids obstacles like a Pro.

3D mapping dodges furniture and clutter.



Image: The Dreametech L10 Pro robot vacuum demonstrating its 3D obstacle avoidance capabilities, navigating around furniture and clutter.

2.4 Vacuuming Function

The L10 Pro features 4000Pa strong suction, effectively picking up pet hair, dirt, and dust from various floor types, including carpets and hard floors. The robot automatically adjusts suction power when detecting carpets.

Powerful 4,000Pa suction

Picks up pet hair, dirt, and dust



Image: The Dreame L10 Pro robot vacuum demonstrating its powerful 4000Pa suction, effectively cleaning pet hair, dirt, and dust from both carpet and hard floor surfaces.

Your browser does not support the video tag.

Video: Demonstrating the 4000Pa strong suction power of the Dreame L10 Pro robot vacuum.

2.5 Mopping Function

To use the mopping function, fill the water tank and attach the mop pad. The robot can vacuum and mop simultaneously, providing a comprehensive clean for hard floors.

Whole-Home Cleaning



Image: An illustration of the Dreametech L10 Pro's internal components, highlighting its 150-minute runtime, 570mL dust box, and 270mL water tank for whole-home cleaning.

 
Simultaneous vacuuming sweeping, and mopping



Multi-Surface
Brush



Edge-Sweeping
Side Brush

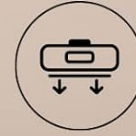

Mops
Under Pressure

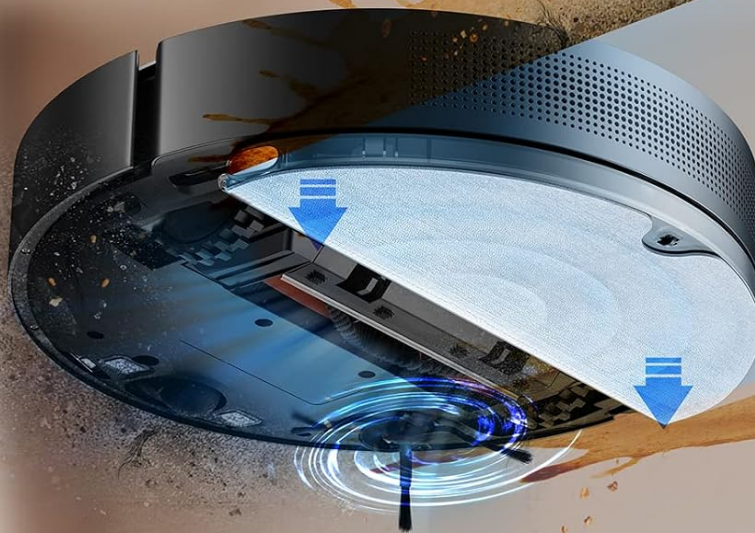 


Image: The Dreametech L10 Pro robot vacuum illustrating its multi-surface brush, edge-sweeping side brush, and mops under pressure for simultaneous vacuuming, sweeping, and mopping.

2.6 No-Go Zones and Virtual Walls

Using the app, you can set up virtual walls or no-go zones to restrict the robot from entering certain areas or crossing specific boundaries. This is particularly useful for areas with delicate items, pet bowls, or high-pile carpets during mopping.

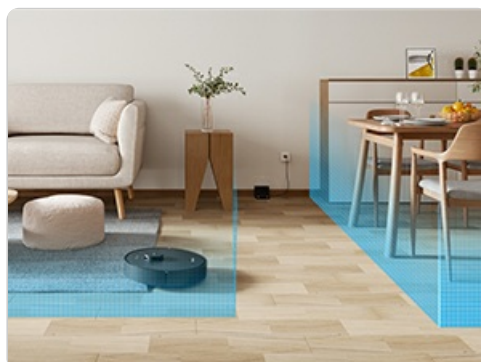


Image: An illustration showing how to set up no-go zones on the map to restrict the robot's cleaning area.

2.7 Multi-Floor Mapping

The L10 Pro can store up to 3 different maps, making it suitable for multi-story homes. Ensure the charging dock is moved to the respective floor when mapping or cleaning a new level.



Image: An illustration showing the robot vacuum's ability to store up to three different floor plans for multi-story homes.

2.8 Voice Control Integration

The Dreametech L10 Pro is compatible with Amazon Alexa and Google Home. Link your robot to your smart home assistant through the respective app settings to enable voice commands for starting, stopping, or sending the robot to its dock.

3. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Dreametech L10 Pro.

3.1 Dust Bin Emptying and Cleaning

Empty the dust bin after each cleaning cycle. Open the top cover of the robot, remove the dust bin, and dispose of collected debris. Rinse the dust bin with water if necessary and allow it to air dry completely before reinserting.

Your browser does not support the video tag.

Video: An overview of the DreameTech L10 Pro Robot Vacuum Cleaner and Mop, including features and maintenance.

3.2 Filter Cleaning and Replacement

Tap the filter to remove dust. The filter can be rinsed with water, but ensure it is completely dry before reinstallation. Replace the filter every 3-6 months, or more frequently depending on usage.

3.3 Main Brush Cleaning

Remove the main brush cover and lift out the main brush. Use the provided cleaning tool to cut and remove any tangled hair or debris from the brush. Reinstall the brush and cover securely.

3.4 Side Brush Cleaning

Regularly check the side brush for tangled hair or debris. Remove any obstructions to ensure effective edge cleaning. If the side brush is damaged, replace it.

3.5 Water Tank and Mop Pad Cleaning

After each mopping session, empty any remaining water from the tank and remove the mop pad. Wash the mop pad thoroughly and allow it to air dry. Do not use detergents or harsh chemicals in the water tank.

3.6 Sensor Cleaning

Wipe all sensors (cliff sensors, wall sensors, charging contacts) with a soft, dry cloth. Clean the LiDAR sensor cover on top of the robot. Keeping sensors clean is crucial for accurate navigation and obstacle avoidance.

4. TROUBLESHOOTING

This section addresses common issues you might encounter with your Dreametech L10 Pro.

Problem	Possible Cause	Solution
Robot not turning on	Low battery; Power button not pressed long enough.	Place robot on charging dock; Press and hold power button for 3 seconds.
Robot stuck or lost	Obstacles; Dark surfaces; Dirty sensors.	Clear obstacles; Clean sensors; Relocate robot to a clear area.
Poor cleaning performance	Full dust bin; Clogged filter; Tangled main/side brush.	Empty dust bin; Clean/replace filter; Clean main/side brush.
App connectivity issues	Incorrect Wi-Fi password; Router too far; 5GHz Wi-Fi network.	Verify password; Move router closer; Ensure 2.4GHz Wi-Fi is used.
Mopping not effective	Empty water tank; Dry mop pad; Clogged water outlet.	Fill water tank; Wet mop pad; Clean water tank outlet.

If the issue persists, please refer to the detailed troubleshooting section in the full digital manual or contact customer support.

5. SPECIFICATIONS

Key technical specifications for the Dreametech L10 Pro.

Feature	Detail
Brand	DREAME
Model Name	L10 Pro
Product Dimensions	13.8"L x 13.8"W x 3.8"H
Item Weight	12.07 pounds
Suction Power	4000Pa
Battery Life	150 minutes
Navigation Type	LiDAR Navigation, 3D Obstacle Avoidance
Special Features	Edge Cleaning, No-Go Zone, Multi-Floor Mapping
Control Method	Voice (Alexa/Google Home), App Control
Dust Box Capacity	570mL
Water Tank Capacity	270mL

6. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official DREAME website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

Official DREAME Store: [DREAME Amazon Store](#)

© 2023 DREAME. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question