

JZL-001

RGB Gaming Mouse Pad User Manual

Model: JZL-001 | Brand: Generic

1. INTRODUCTION

Thank you for purchasing the RGB Gaming Mouse Pad. This large-sized mouse pad is designed to enhance your gaming and computing experience with its smooth surface, durable construction, and vibrant RGB LED lighting. This manual provides detailed instructions on how to set up, operate, and maintain your new mouse pad.



A large black gaming mouse pad with vibrant RGB LED lighting around its edges, accompanied by a rolled-up mouse pad, indicating its flexible material.

2. PACKAGE CONTENTS

- 1 x RGB Gaming Mouse Pad (80 x 30 cm)
- 1 x USB Power Cable

3. SPECIFICATIONS

Feature	Detail
Model Number	JZL-001
Dimensions (L x W x H)	80 x 30 x 0.1 cm (31.5 x 11.8 x 0.04 inches)
Weight	580 grams (1.28 lbs)
Material	Rubber
Lighting Type	RGB LED
Color	Black
Recommended Use	Gaming

4. SETUP

Follow these steps to set up your RGB Gaming Mouse Pad:

1. Unroll the mouse pad and place it on a flat, stable surface.
2. Locate the USB port on the mouse pad's control module.
3. Connect the provided USB power cable to the mouse pad's control module.
4. Plug the other end of the USB cable into an available USB port on your computer or a compatible USB power adapter.
5. The RGB lighting should illuminate automatically. If not, proceed to the operating instructions.



A close-up view of the mouse pad's USB connection point and the integrated control button. It illustrates how to connect the USB cable to a PC and indicates that pressing the button for 3 seconds turns the device on or off.

5. OPERATING INSTRUCTIONS

The RGB Gaming Mouse Pad features a single control button for managing its lighting effects:

- **Power On/Off:** Press and hold the control button for approximately 3 seconds to turn the RGB lighting on or off.
- **Switch LED Modes:** Short press the control button to cycle through various lighting modes and colors. The available modes include:
 - Asynchronous Breathing
 - Monochromatic Long Bright
 - Asynchronous Neon
 - Synchronous Neon
 - Synchronous Discoloration
 - Various static colors (Green, Red, Blue, White, Purple, Cyan, Light Green)



An image showcasing the various multi-color and RGB lighting effects available on the mouse pad, including green, red, blue, white, purple, cyan, and light green, along with descriptions of asynchronous breathing, monochromatic, neon, and synchronous modes.



A diagram detailing the functions of the mouse pad's control button: a long press for power on/off and a short press to switch LED lighting modes.



The RGB gaming mouse pad integrated into a gaming setup, featuring a monitor displaying a game, a keyboard, and a mouse, highlighting the immersive experience it provides.

6. MAINTENANCE

To ensure the longevity and optimal performance of your mouse pad:

- **Cleaning:** Use a soft, damp cloth to wipe the surface of the mouse pad. Avoid using harsh chemicals or abrasive cleaners.
- **Spills:** In case of liquid spills, immediately unplug the mouse pad and gently blot the liquid with a dry cloth. Allow it to air dry completely before reconnecting.
- **Storage:** When not in use, you can roll up the mouse pad for easy storage. Avoid sharp folds or creases.
- **Avoid Extreme Temperatures:** Do not expose the mouse pad to extreme heat or cold, as this may damage the material or LED components.

7. TROUBLESHOOTING

If you encounter any issues with your RGB Gaming Mouse Pad, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
LED lights do not turn on.	No power or loose connection.	Ensure the USB cable is securely connected to both the mouse pad and the power source. Try a different USB port or power adapter. Press and hold the power button for 3 seconds.
LED lights flicker or are dim.	Insufficient power or faulty cable.	Connect to a USB port that provides sufficient power (e.g., a direct port on your computer, not a passive USB hub). Try using a different USB cable if available.
Cannot change LED modes.	Incorrect button press or unresponsive button.	Ensure you are performing a short press to cycle modes. If the button is unresponsive, try unplugging and re-plugging the mouse pad.

8. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the product packaging or contact your retailer. If you require further assistance or have questions not covered in this manual, please contact the seller or manufacturer's customer support.

Please retain your proof of purchase for warranty claims.