



Manuals.plus /

- › WarnerBrothers /
- › The Waltons: The Complete Series (RPKG/DVD) Instruction Manual

WarnerBrothers D801247D

The Waltons: The Complete Series (RPKG/DVD) Instruction Manual

INTRODUCTION

This instruction manual provides comprehensive guidance for the proper use and care of *The Waltons: The Complete Series (RPKG/DVD)*. This DVD set contains all nine seasons of the beloved television series, offering a complete viewing experience. Please read these instructions carefully to ensure optimal enjoyment and longevity of your product.

The Waltons series chronicles the lives of the Walton family, residing in the Blue Ridge Mountains of Virginia during the Great Depression and World War II. It explores themes of family, community, and resilience through the eyes of John-Boy Walton.

SETUP INSTRUCTIONS

Unpacking the DVD Set

1. Carefully remove the DVD box set from its packaging.
2. Inspect the box and individual DVD cases for any signs of damage. If damage is found, refer to the Warranty Information section.
3. Open the DVD cases to access the discs. This set contains 47 discs.

Disc Handling

- Always hold discs by their edges or by the center hole to avoid touching the playing surface.
- Avoid bending or flexing the discs.
- Ensure your DVD player is clean and in good working order before inserting a disc.

The Waltons



Image: Front view of *The Waltons: The Complete Series* DVD packaging. The image displays the main cast members of the show, including John-Boy, John, Olivia, Grandpa, Grandma, and the other Walton children, posed together on a porch. The title 'The Waltons' is prominently displayed at the top.

OPERATING INSTRUCTIONS

Playing a Disc

1. Open the disc tray of your DVD player.
2. Place the desired disc onto the tray with the label side facing up.
3. Close the disc tray. The DVD player should automatically begin reading the disc.
4. If the disc does not start automatically, select the 'Play' option from your DVD player's remote control or on-screen menu.

Navigating Menus

- Use the arrow keys on your remote control to navigate through the on-screen menus (e.g., 'Episode Selection', 'Scene Selection', 'Special Features').
- Press the 'Enter' or 'OK' button to make a selection.
- To return to the main menu, press the 'Menu' or 'Title' button on your remote control.

MAINTENANCE

Cleaning Discs

- If a disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth.
- Wipe from the center of the disc outwards in a straight line, not in a circular motion.
- For stubborn marks, use a specialized DVD cleaning solution applied to the cloth, not directly to the disc.
- Do not use abrasive materials, solvents, or household cleaners, as these can damage the disc.

Storage

- Store discs in their original cases to protect them from dust, scratches, and direct sunlight.
- Keep the DVD set in a cool, dry place, away from extreme temperatures and humidity.
- Avoid stacking discs without their cases, as this can lead to scratches.

TROUBLESHOOTING

If you encounter issues while using your DVD set, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Disc does not play or load.	Disc is dirty, scratched, or inserted incorrectly. DVD player lens is dirty.	Clean the disc as described in the Maintenance section. Ensure the disc is inserted label-side up. Try playing another disc to check if the issue is with the player.
Video or audio skips/freezes.	Disc surface is dirty or scratched.	Clean the disc thoroughly. If the problem persists, the disc may be damaged.
No sound or picture.	Incorrect cable connections. TV input not set correctly.	Check all audio/video cables between the DVD player and TV. Ensure your TV is set to the correct input source (e.g., HDMI 1, AV).
Remote control not working.	Dead batteries. Obstruction between remote and player.	Replace batteries in the remote. Ensure there is a clear line of sight between the remote and the DVD player's sensor.

If these solutions do not resolve the issue, consult your DVD player's instruction manual or contact customer support for your DVD player manufacturer.

SPECIFICATIONS

Title: The Waltons: The Complete Series (RPKG/DVD)

Model Number: D801247D

Brand/Studio: WarnerBrothers

Media Format: NTSC

Run Time: Approximately 162 hours and 4 minutes

Number of Discs: 47

Release Date: May 25, 2021

Language: English

MPAA Rating: NR (Not Rated)

Product Dimensions: 8.9 x 9.33 x 4.09 inches

Weight: 1 Pound

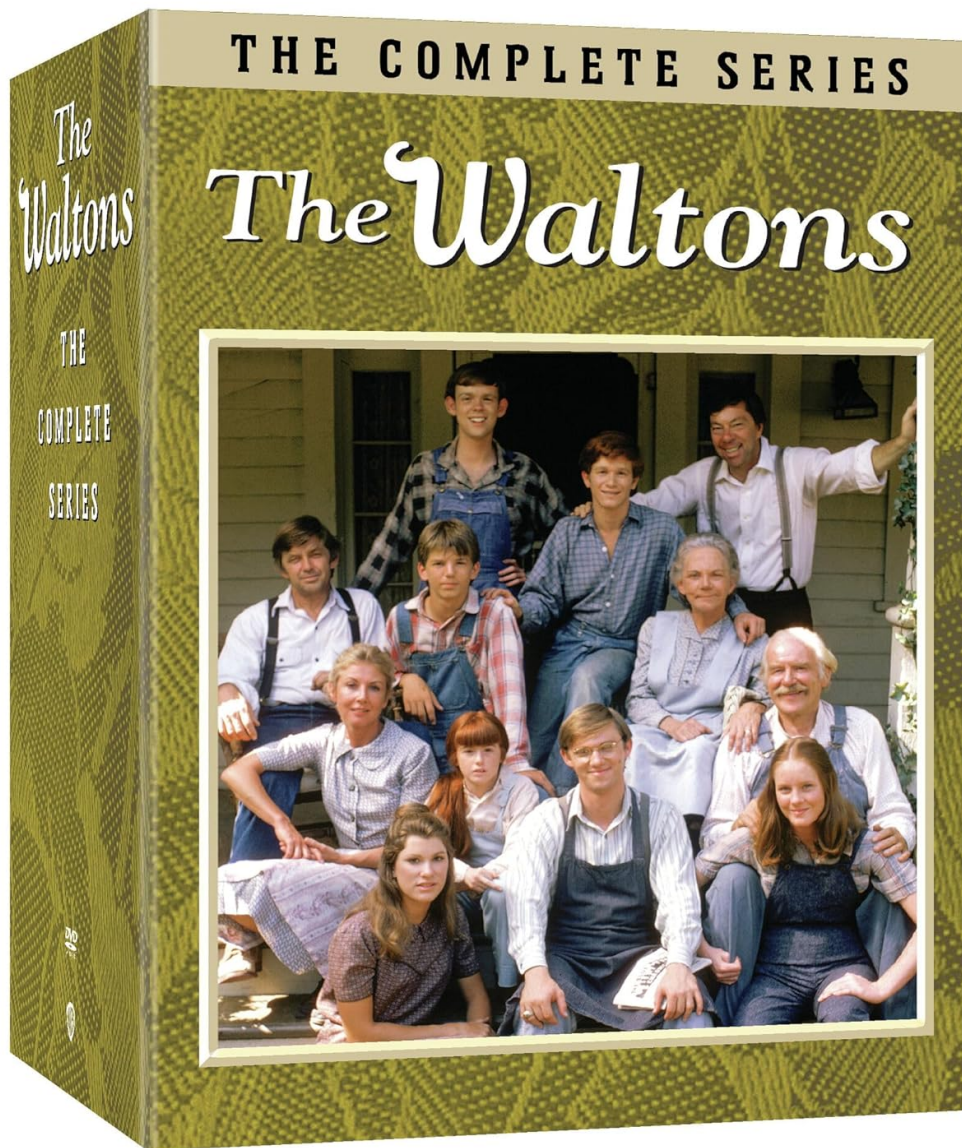


Image: Side view of *The Waltons: The Complete Series* DVD packaging. This angle highlights the spine of the box set, displaying the series title and indicating it is 'The Complete Series'.

WARRANTY INFORMATION

Specific manufacturer warranty details for this DVD set are not provided in the product information. However, standard return policies typically allow for returns or replacements within a certain period (e.g., 30 days) if the product is defective or damaged upon arrival. Please refer to the retailer's return policy where the product was purchased for detailed information regarding returns, refunds, or exchanges.

CUSTOMER SUPPORT

For technical issues related to your DVD player, please consult the instruction manual provided with your player or contact the player's manufacturer for support.

For inquiries regarding the content of *The Waltons: The Complete Series* or general product information, you may visit the official WarnerBrothers website or contact their customer service department if available. Specific contact details are not provided in this manual.

