

[Manuals.plus](#) /

› [Satisfyer](#) /

› Satisfyer Little Secret Bluetooth Clitoral Vibrator User Manual

Satisfyer E32412

Satisfyer Little Secret Bluetooth Clitoral Vibrator User Manual

Model: E32412 | Brand: Satisfyer

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Satisfyer Little Secret Bluetooth Clitoral Vibrator. Please read these instructions carefully before first use and retain them for future reference.



Figure 1: Satisfyer Little Secret device with remote control and magnetic clip.

2. SAFETY INFORMATION

- **Material Safety:** The device is made of body-safe silicone. Clean thoroughly before and after each use.
- **Water Resistance:** The device is waterproof (IPX7) and can be used in the shower or bath. Do not submerge for extended periods.
- **Charging:** Use only the original charging cable. Do not use the device while charging.
- **Lubricants:** Use only water-based lubricants with this device. Oil-based lubricants can damage the silicone material.
- **Storage:** Store in a clean, dry place away from direct sunlight and extreme temperatures.
- **Medical Conditions:** Consult a healthcare professional before use if you have any medical conditions or concerns.

3. PRODUCT COMPONENTS

The Satisfyer Little Secret package includes the following items:

- Satisfyer Little Secret device
- Remote control
- Magnetic charging cable
- User manual



Figure 2: Product packaging showing the device and remote.

4. SETUP

4.1 Charging the Device

1. Connect the magnetic charging cable to the charging port on the device.
2. Plug the USB end of the cable into a suitable USB power adapter (not included) or a computer USB port.
3. The indicator light on the device will illuminate during charging and turn off when fully charged. A full charge typically takes 2-3 hours.
4. Ensure the device is fully charged before first use.

4.2 Connecting to the Satisfyer Connect App

1. Download the free Satisfyer Connect App from the App Store (iOS) or Google Play Store (Android).
2. Ensure your device's Bluetooth is enabled.
3. Turn on the Satisfyer Little Secret device by pressing and holding the power button until it vibrates.
4. Open the Satisfyer Connect App and follow the on-screen instructions to pair your device.
5. Once paired, you can control the device via the app, accessing various vibration patterns and features.



Figure 3: Overview of Satisfyer Connect App features.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation (Device Buttons)

- **Power On/Off:** Press and hold the power button (usually the main button on the device) for 2 seconds to turn on or off.
- **Change Vibration Patterns:** Short press the power button to cycle through available vibration patterns.
- **Adjust Intensity:** Use the '+' and '-' buttons (if present on the device) to increase or decrease vibration intensity.

5.2 Remote Control Operation

- **Power On/Off:** Press and hold the power button on the remote for 2 seconds.
- **Change Vibration Patterns:** Use the 'up' and 'down' arrow buttons to cycle through patterns.

- **Adjust Intensity:** Use the '+' and '-' buttons on the remote to increase or decrease vibration intensity.

5.3 App Control

Once connected to the Satisfyer Connect App, you can access advanced features:

- **Customizable Patterns:** Create and save your own vibration patterns.
- **Remote Play:** Allow a partner to control your device from a distance.
- **Music Sync:** Sync vibrations to your favorite music.
- **Ambient Stimulation:** Use your phone's microphone to pick up sounds and translate them into vibrations.



Figure 4: Key features and control options.

6. MAINTENANCE AND CLEANING

6.1 Cleaning

1. Always clean the device before and after each use.
2. Wash the device with warm water and a mild, toy-friendly soap or a specialized toy cleaner.
3. Rinse thoroughly to remove all soap residue.
4. Pat dry with a lint-free cloth or allow to air dry completely before storing.

6.2 Storage

- Store the device in a clean, dry, and dust-free environment.
- Keep it away from direct sunlight, extreme temperatures, and other sex toys made of different materials to prevent material degradation.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully.
Device does not vibrate.	Device is off or battery is low.	Ensure device is on and charged. Check intensity settings.
Cannot connect to the app.	Bluetooth is off, device is off, or app issue.	Ensure Bluetooth is on, device is on, and try restarting the app or your phone. Re-pair the device if necessary.
Remote control not working.	Remote battery low or not paired.	Ensure remote is powered on. If it uses a replaceable battery, check/replace it. Re-pair if applicable (refer to remote's specific instructions if separate).

8. SPECIFICATIONS

- **Model Number:** E32412
- **Material:** Body-safe Silicone
- **Color:** Black
- **Dimensions (L x W x H):** 8.57 x 3.9 x 3.04 cm
- **Weight:** 140 grams
- **Battery:** 1 Lithium-polymer (included)
- **Water Resistance:** Waterproof (IPX7)
- **Control:** Device buttons, Remote control, Satisfyer Connect App (Bluetooth)

9. WARRANTY AND SUPPORT

9.1 Warranty

Satisfyer offers a **15-year warranty** on this product, ensuring long-lasting satisfaction and product quality. Please retain your proof of purchase for warranty claims.

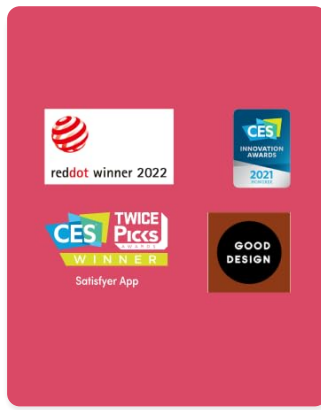


Figure 5: Satisfyer 15-Year Warranty.

9.2 Customer Support

For further assistance, troubleshooting, or warranty inquiries, please visit the official Satisfyer website or contact their customer support.

[Visit Satisfyer Official Website](#)

